

# Heating, Ventilation and Air Conditioning (HVAC) Control Module

## Removal

**NOTE:** *The HVAC module is available only as part of the FCIM.*

1. Remove the FCIM.

Refer to: [Front Controls Interface Module \(FCIM\)](#) (415-00A Information and Entertainment System - General Information - Vehicles Without: SYNC, Removal and Installation).

Refer to: [Front Controls Interface Module \(FCIM\)](#) (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC Without Touchscreen, Removal and Installation).

Refer to: [Front Controls Interface Module \(FCIM\)](#) (415-00C Information and Entertainment System - General Information - Vehicles With: Touchscreen Display, Removal and Installation).

Refer to: [Front Controls Interface Module \(FCIM\)](#) (415-00D Information and Entertainment System - General Information - Vehicles With: Bang and Olufsen Audio System, Removal and Installation).

## Installation

1. To install, reverse the removal procedure.