


Air Distribution Door Actuator

Base Part Number: Base Part Number: 19E616

Removal

1. Disconnect the air distribution door actuator electrical connector, remove the retainers and the air distribution door actuator.

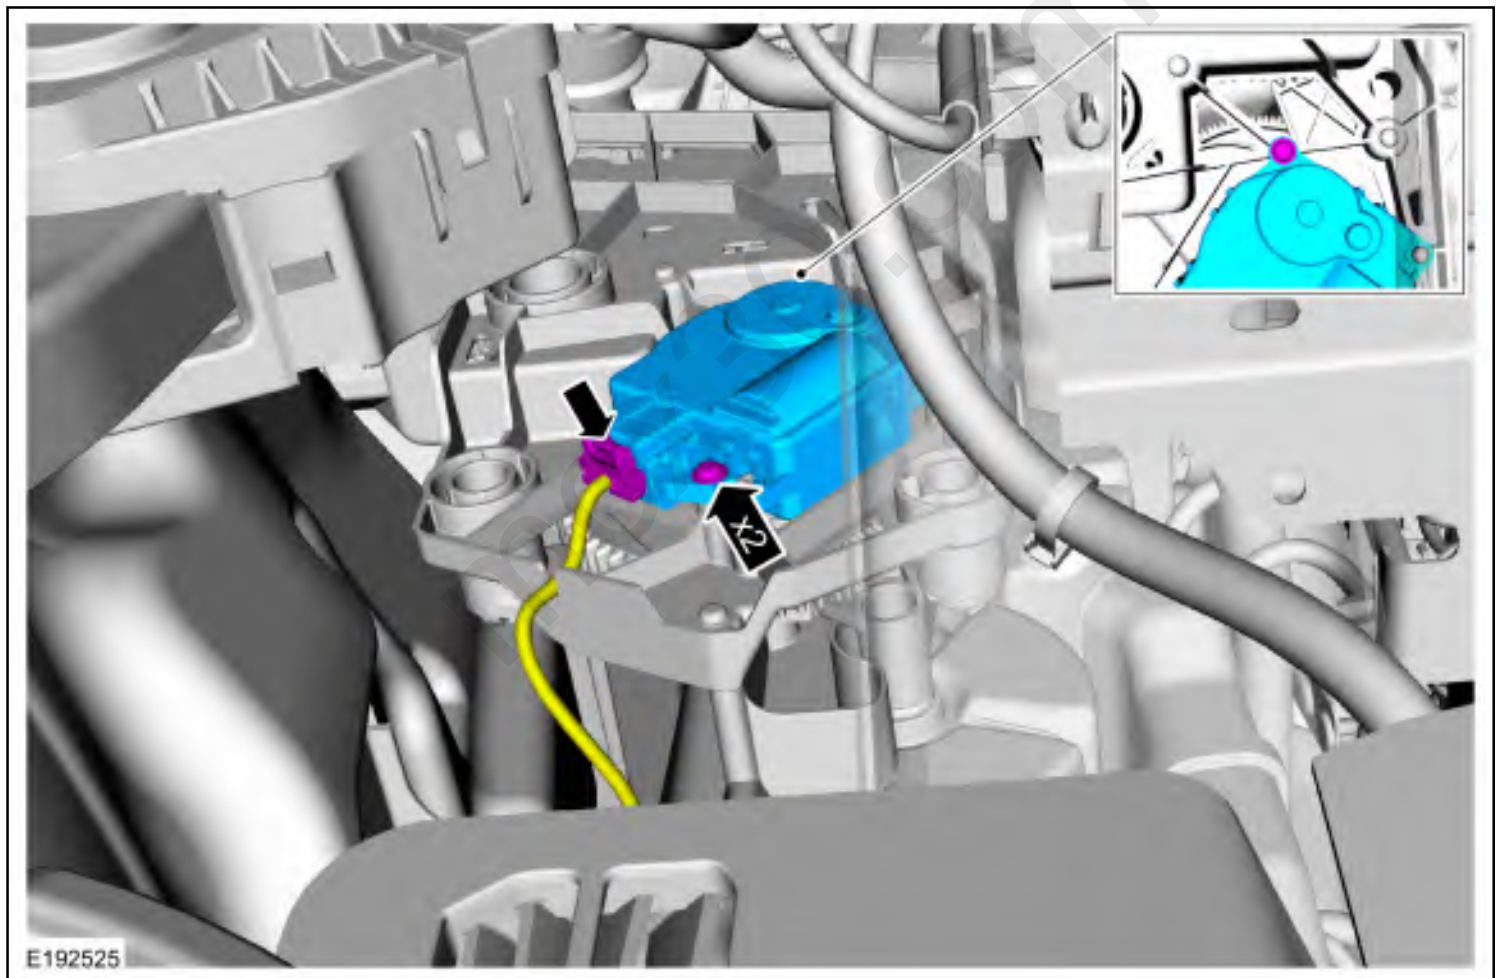

Installation

1. To install, reverse the removal procedure.


mcx30.com

Air Inlet Door Actuator

Base Part Number: Base Part Number: 19E616

Removal

1. Remove the instrument panel.
Refer to: [Instrument Panel](#) (501-12 Instrument Panel and Console, Removal and Installation).
2. Disconnect the electrical connector, remove the retainers and the air inlet door actuator.

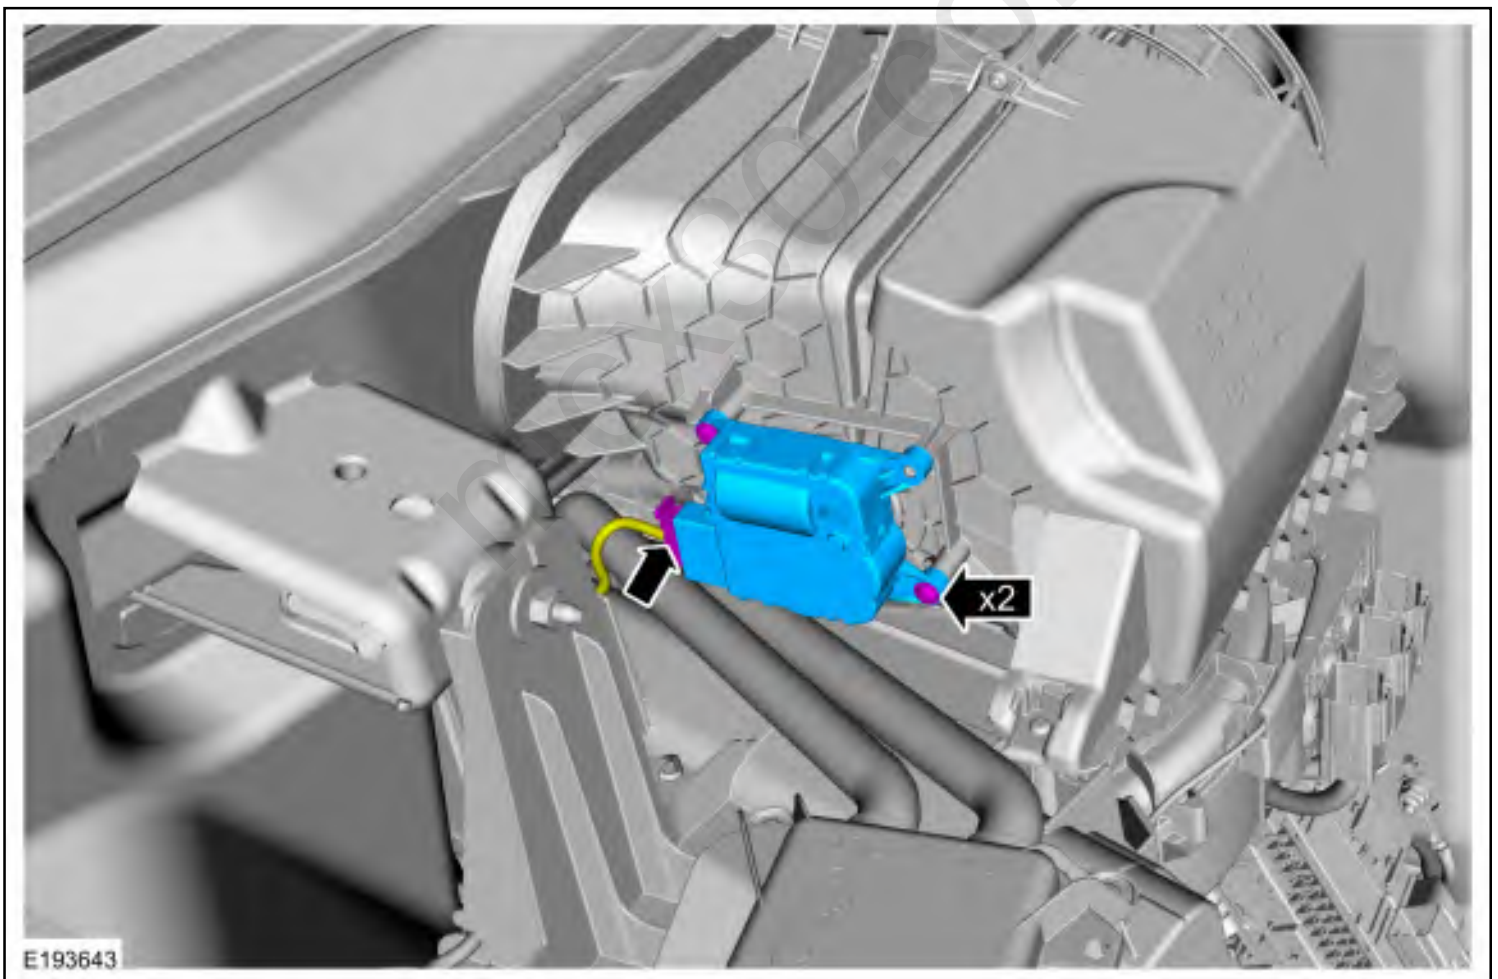

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

mcx30.com