

Rear Parking Aid Sensor

Removal

All vehicles


1. Raise the vehicle on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).

Inner rear parking aid sensors

2. **NOTE:** *On both sides.*

Remove the inner rear parking aid sensor.

1. Disconnect the inner rear parking aid sensor electrical connector.
2. Release the tabs.
3. Slide the inner rear parking aid sensor out of the bracket.

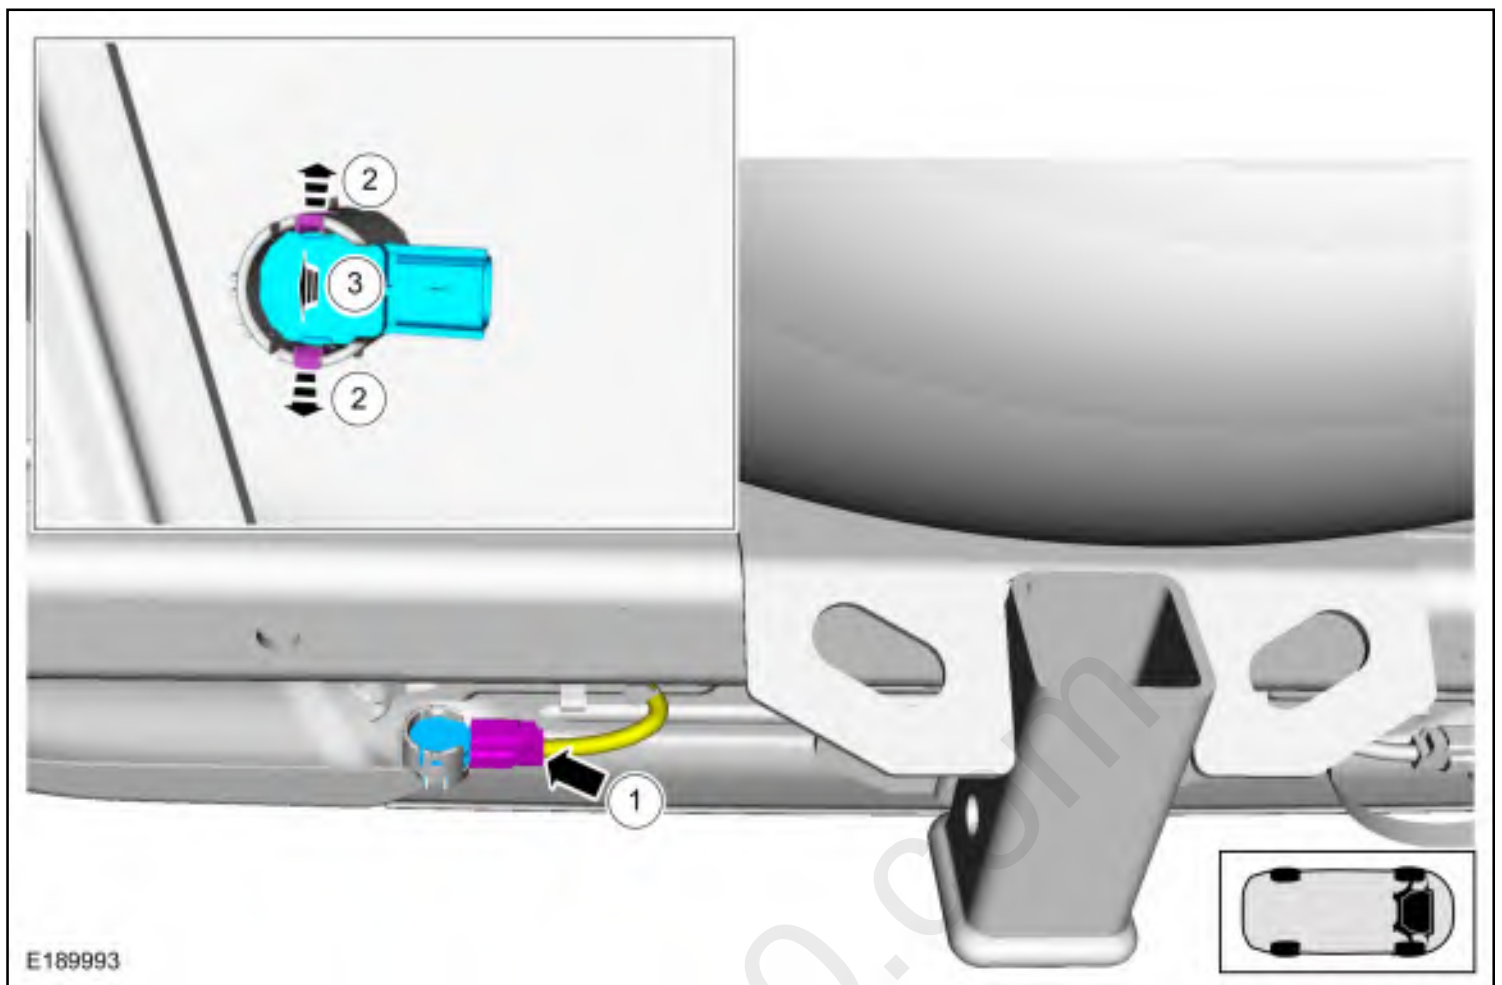


Outer rear parking aid sensors

3. Remove the muffler and tailpipe assembly.
Refer to: Muffler and Tailpipe (309-00C) .

4. **NOTE:** *On both sides.*

Remove the outer rear parking aid sensor.

- Disconnect the outer rear parking aid sensor electrical connector.
- Release the tabs.
- Slide the outer rear parking aid sensor out of the bracket.

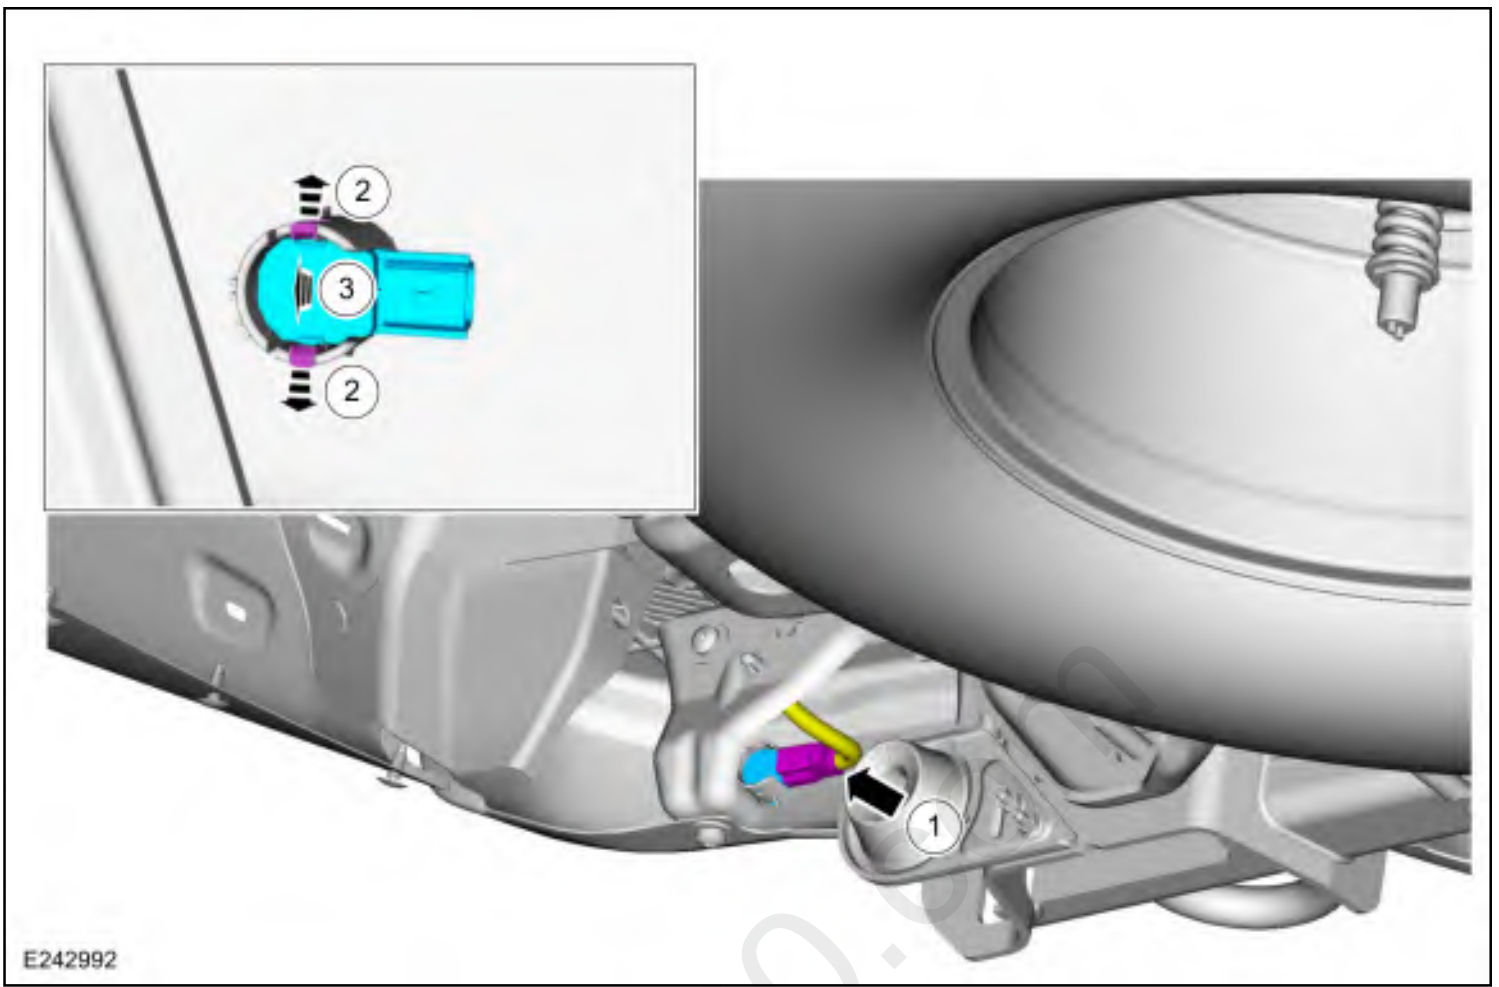

E242992

Installation

1. To install, reverse the removal procedure.
2. Align the rear parking sensors.
Refer to: [Azimuth System Check](#) (413-13A Parking Aid - Vehicles With: Rear Parking Aid, General Procedures).
Refer to: [Elevation System Check](#) (413-13A Parking Aid - Vehicles With: Rear Parking Aid, General Procedures).