



Front Parking Aid Camera

Removal

1. Remove the radiator grille.
Refer to: Radiator Grille (501-08 Exterior Trim and Ornamentation) .
2. Remove the screw and the front camera bracket.

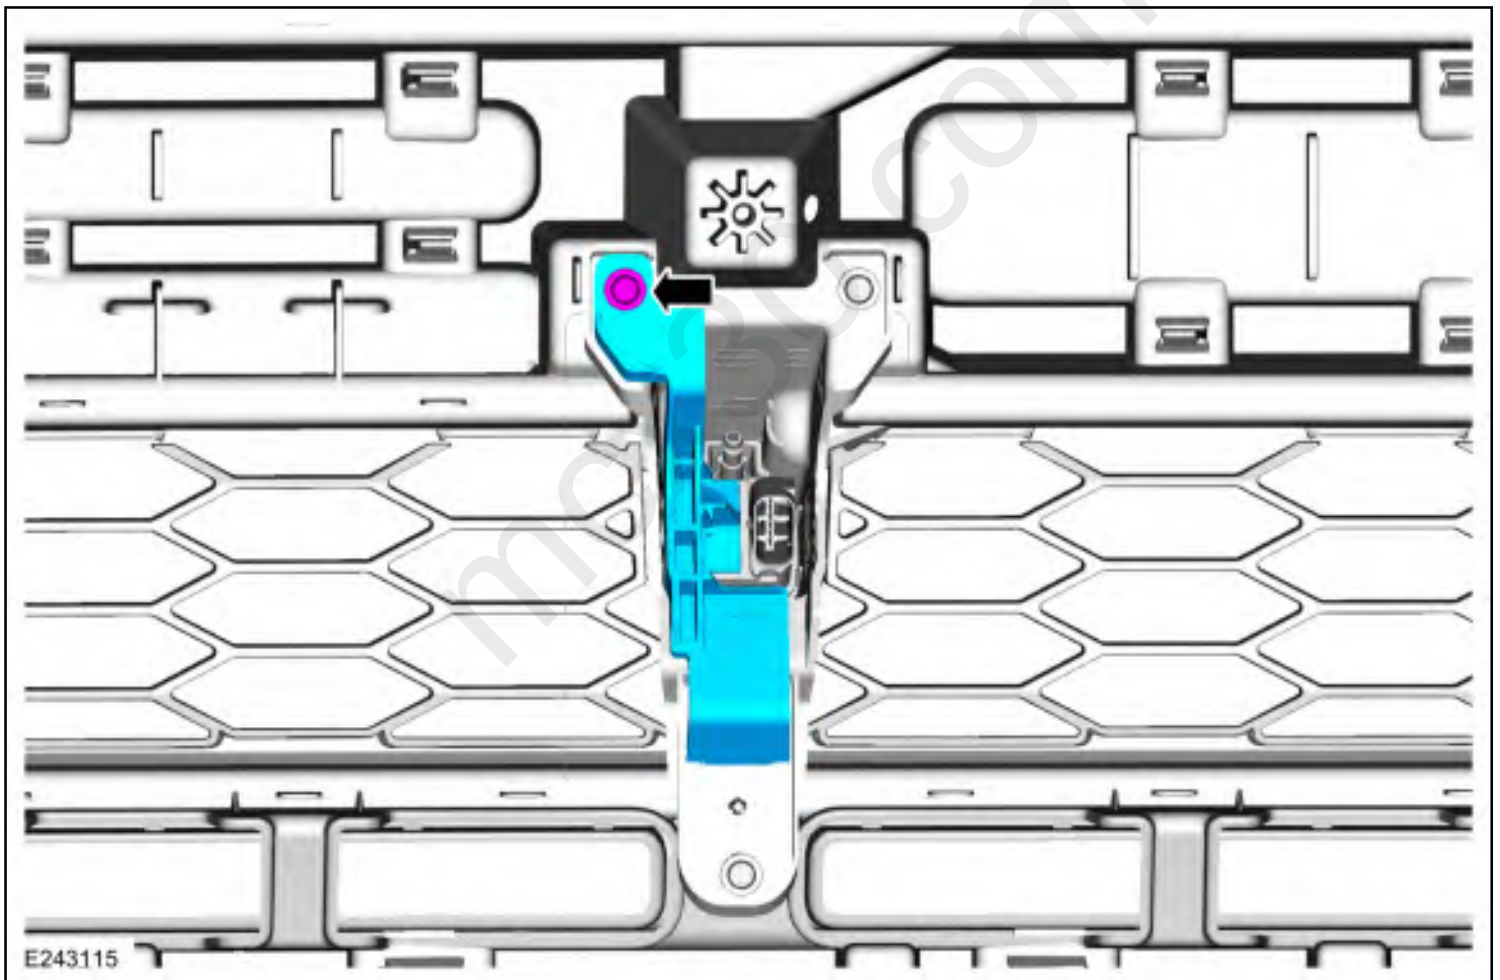

3. Remove the front parking aid camera.

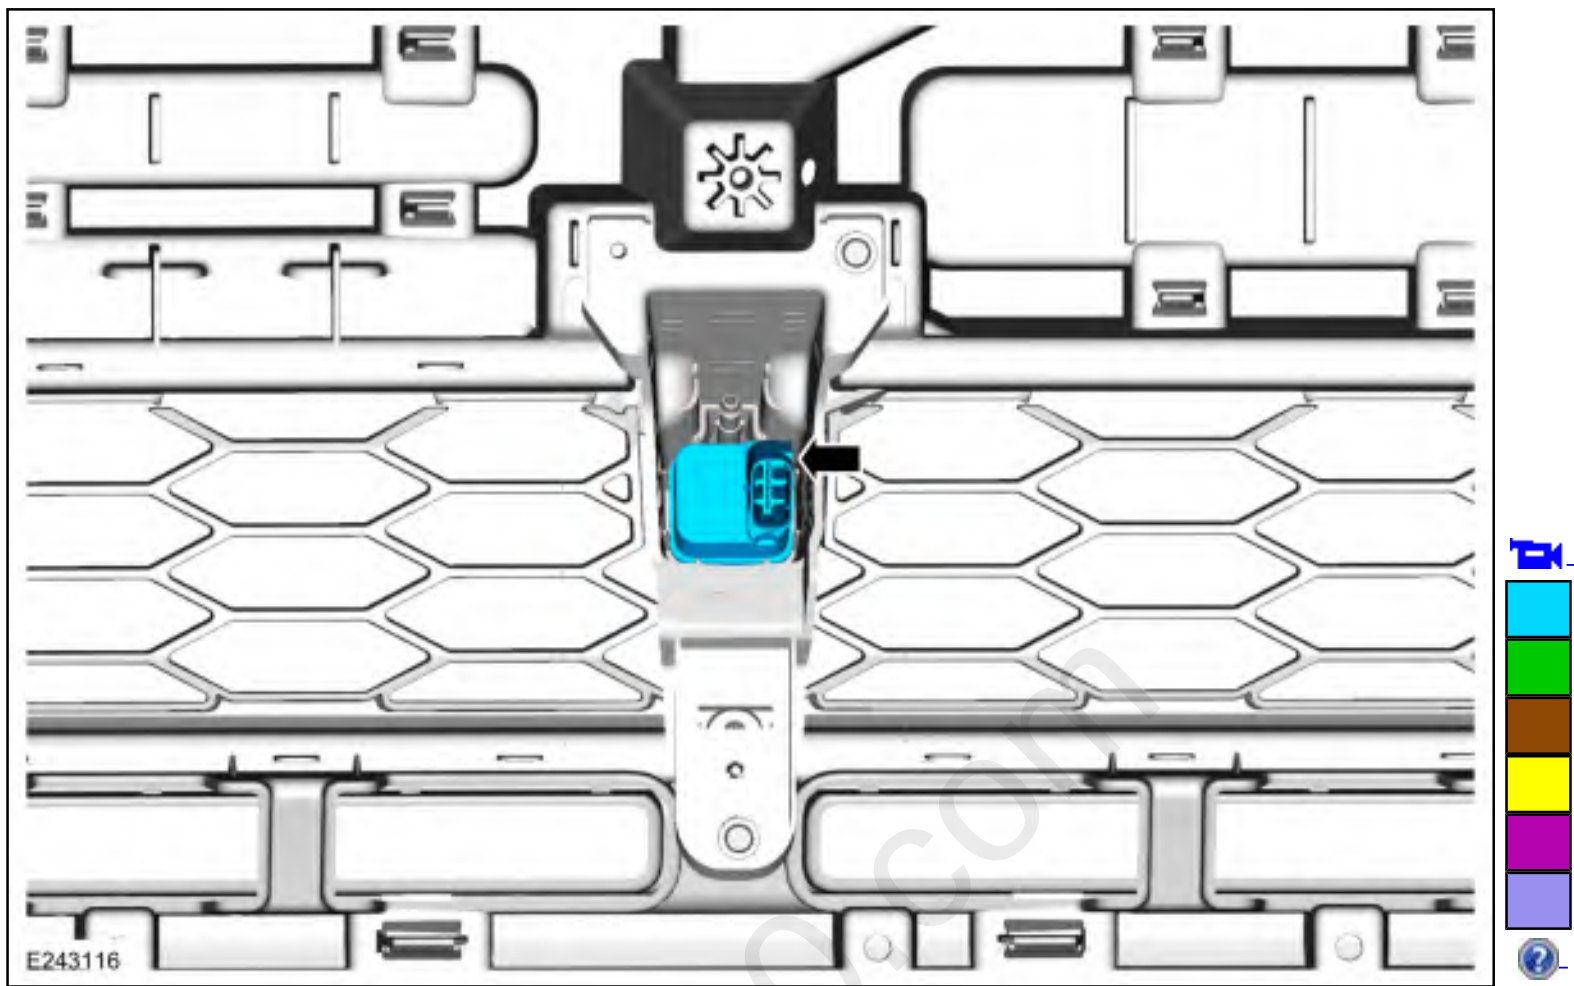

Installation

1. To install, reverse the removal procedure.
Refer to: Parking Aid (413-13 Parking Aid - Vehicles With: Parking Aid Camera) .
2. Using a diagnostic scan tool, following the on-screen instructions for the LIN New Module Initialization-IPMB configure the IPMB.
3. Align the cameras.
Refer to: [360 Degree View Camera Alignment](#) (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).