


Active Park Assist Switch

Removal

1. Remove the selector lever bezel.
Refer to: [Selector Lever Bezel](#) (307-05 Automatic Transmission External Controls, Removal and Installation).
2. Release the tabs and remove the active park assist switch.

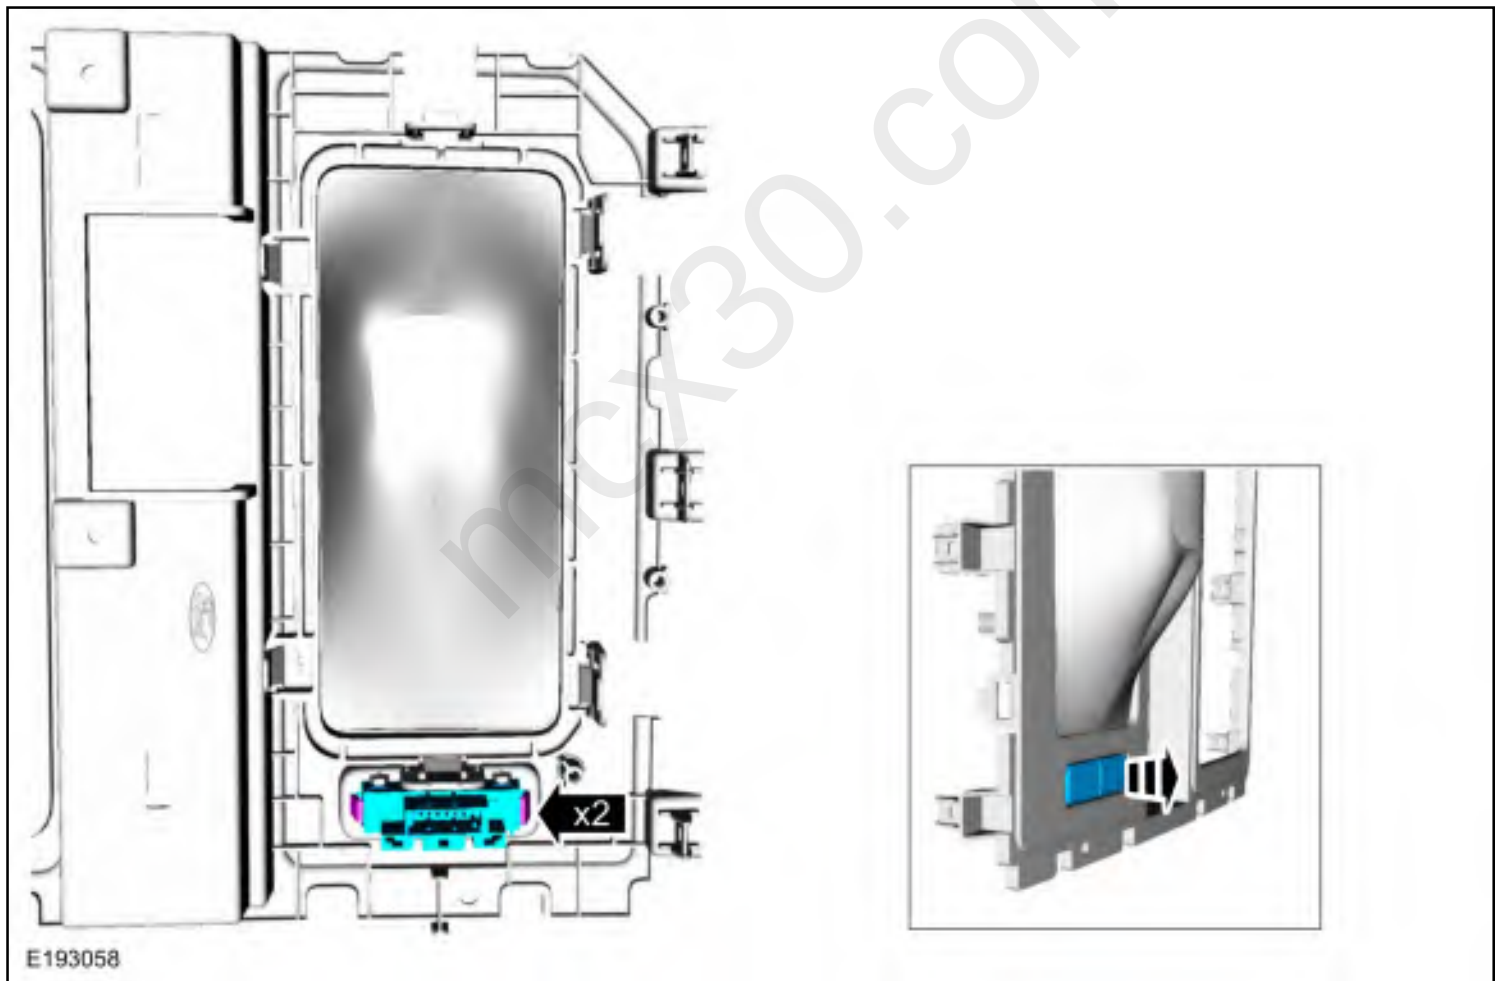

Installation

1. To install, reverse the removal procedure.

mcx30.com