


Front Active Park Assist Sensors

Removal


1. Remove the front fender moulding.
2. Remove the screws and the fender liner reinforcement.

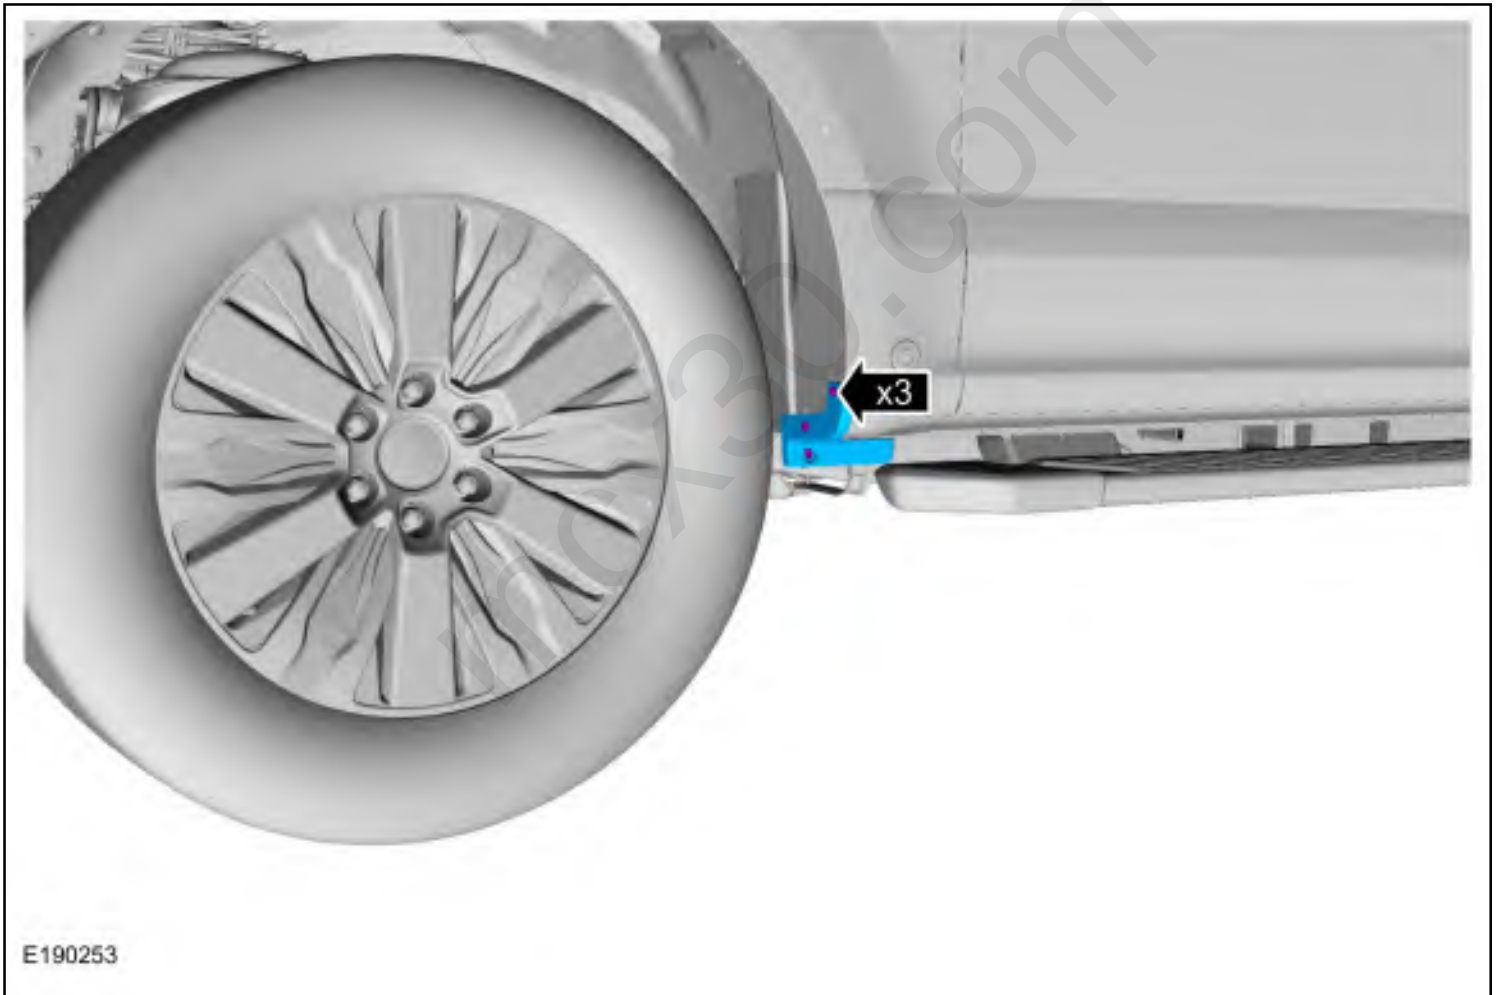


3. Position the fender splash shield aside.



4. Remove the fender splash shield bracket.
 1. Remove the 2 push pins.
 2. Slide the fender splash shield bracket up and out.

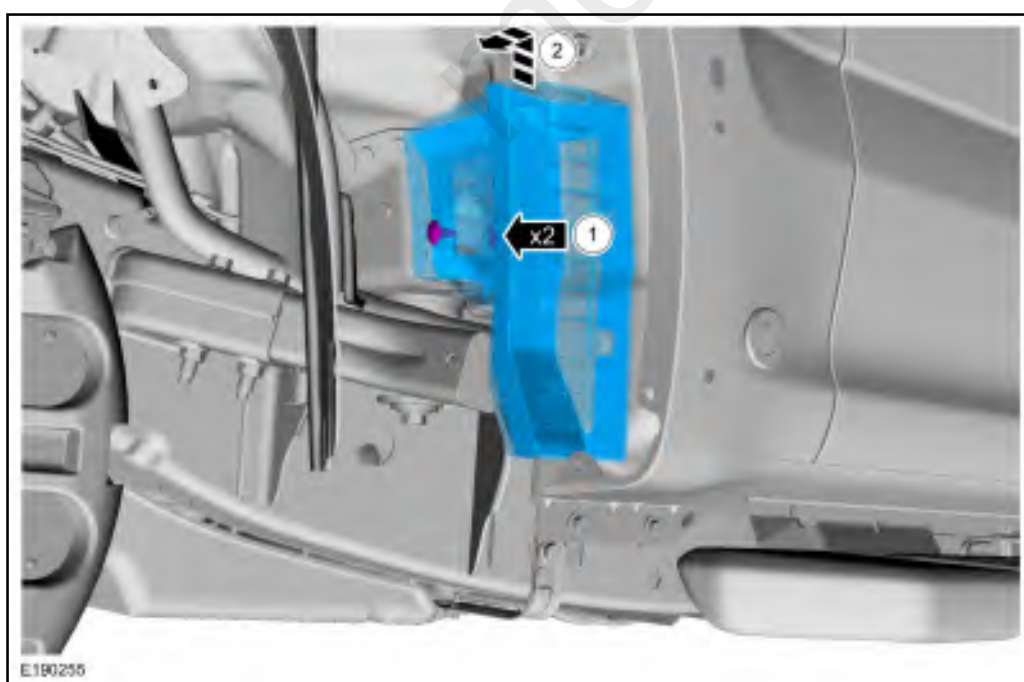

5. Disconnect the active park assist sensor electrical connector.

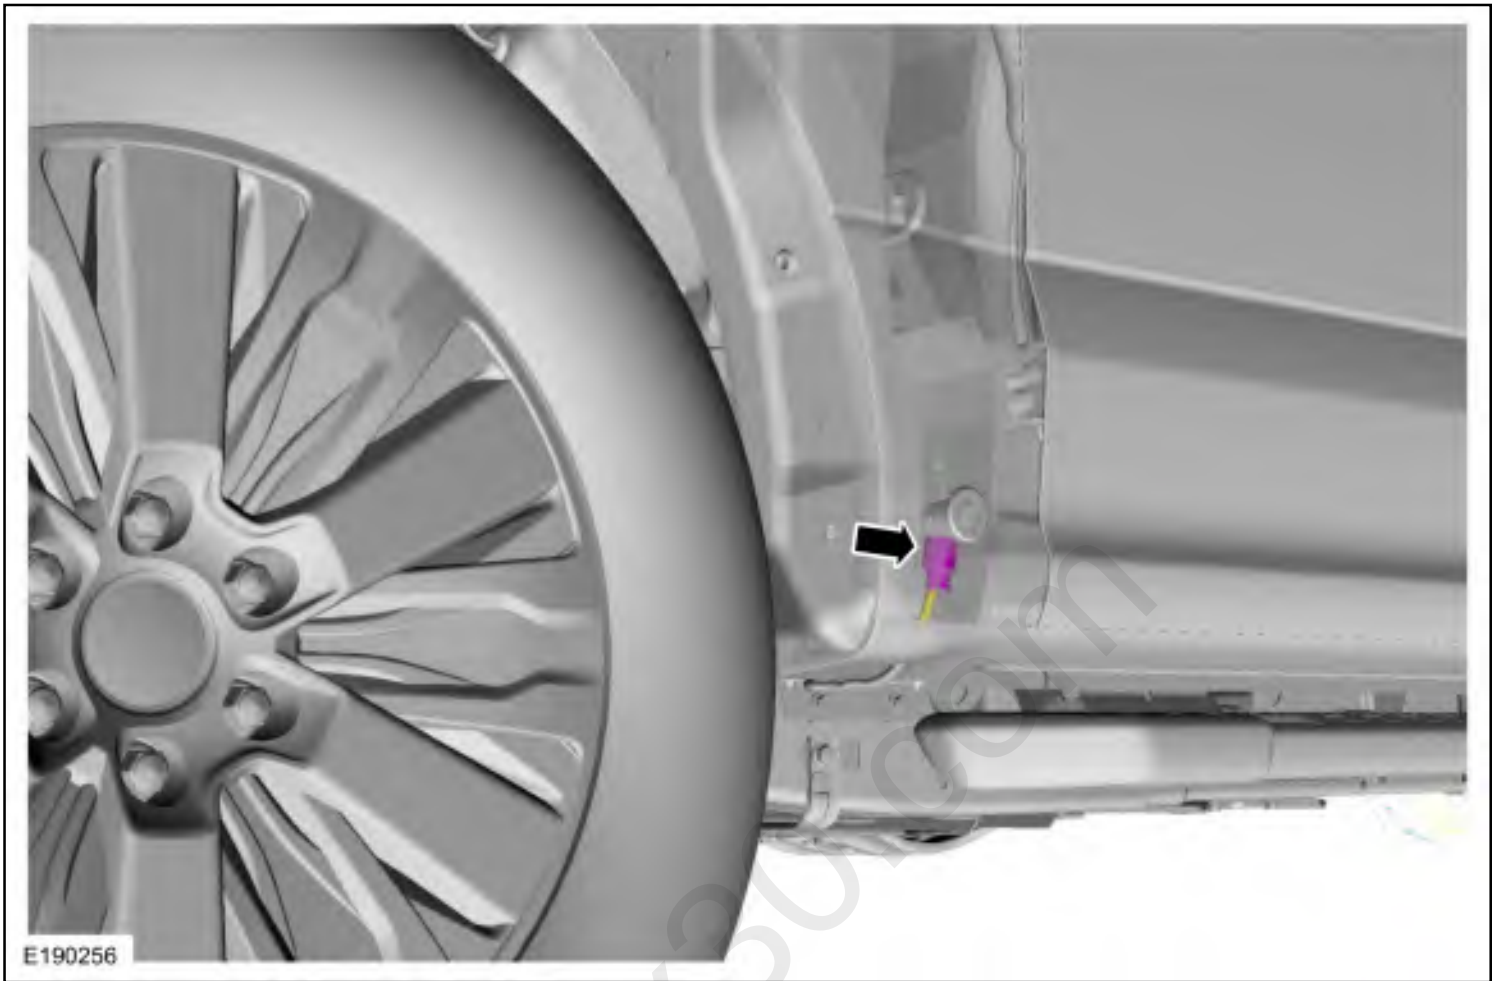

6. Remove the active park assist sensor.
 1. Release the tabs.
 2. Remove the active park assist sensor from the bracket.

Installation

1. To install, reverse the removal procedure.
2. Align the active park assist service.
Refer to: [Azimuth System Check](#) (413-13C Parking Aid - Vehicles With: Active Park Assist, General Procedures).