

Battery Disconnect and Connect


Disconnect

NOTE: When the battery is disconnected and connected, some abnormal drive symptoms may occur while the vehicle relearns its adaptive strategy. The vehicle may need to be driven to allow the PCM to relearn the adaptive strategy values.


1. **NOTICE:** Be careful not to damage the battery monitoring sensor when removing the terminal from the battery post. Do not pry on the terminals or component damage may occur.

NOTE: The following step is to interrupt power to the vehicle's electrical system. It is not necessary to disconnect the positive battery cable terminal.

Loosen, but do not remove the nut. Position the negative battery cable aside.
Torque: 55 lb.in (6.2 Nm)

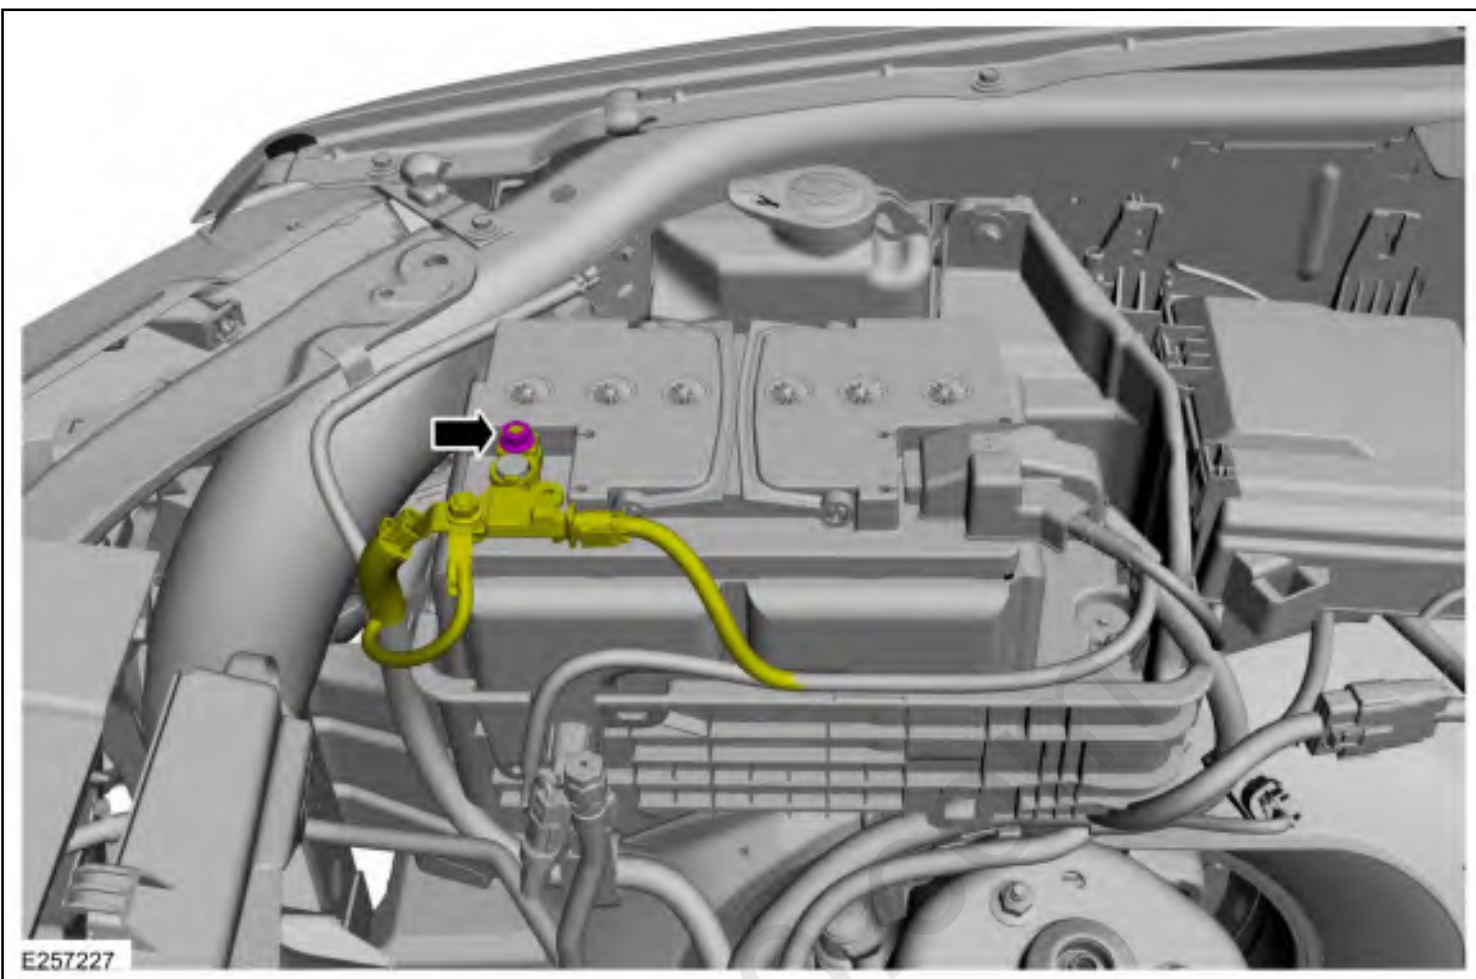

1. Position the positive battery cable terminal cover.
 2. Loosen, but do not remove the nut. Position the positive battery cable aside.
- Torque: 55 lb.in (6.2 Nm)*

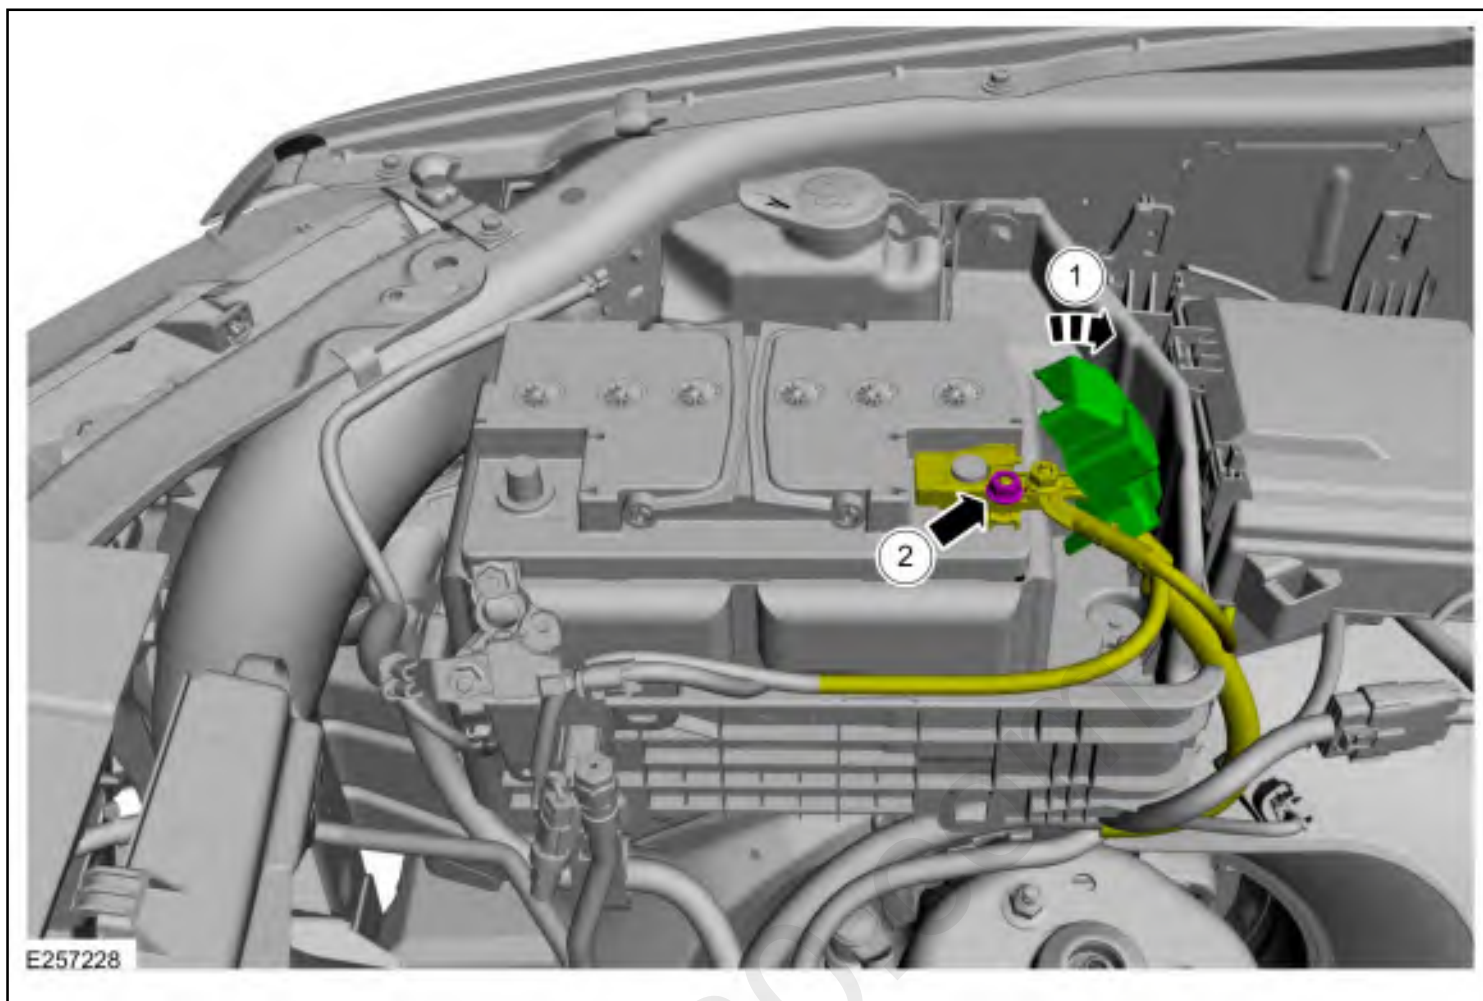

Connect

1. To connect, reverse the disconnect procedure.

Copyright © 2018 Ford Motor Company