


Battery Cables - 5.0L 32V Ti-VCT

Base Part Number: Base Part Number: 14B060


Removal

NOTE: *This procedure provides information about routing, retaining points and connectors of the cable. It does not include the steps for removing components to gain access to the cable.*


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the battery.
Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
 1. *Torque:* 80 lb.in (9 Nm)
 2. *Torque:* 177 lb.in (20 Nm)
 3. *Torque:* 55 lb.in (6.2 Nm)
 4. *Torque:* 80 lb.in (9 Nm)
 5. *Torque:* 93 lb.in (10.5 Nm)

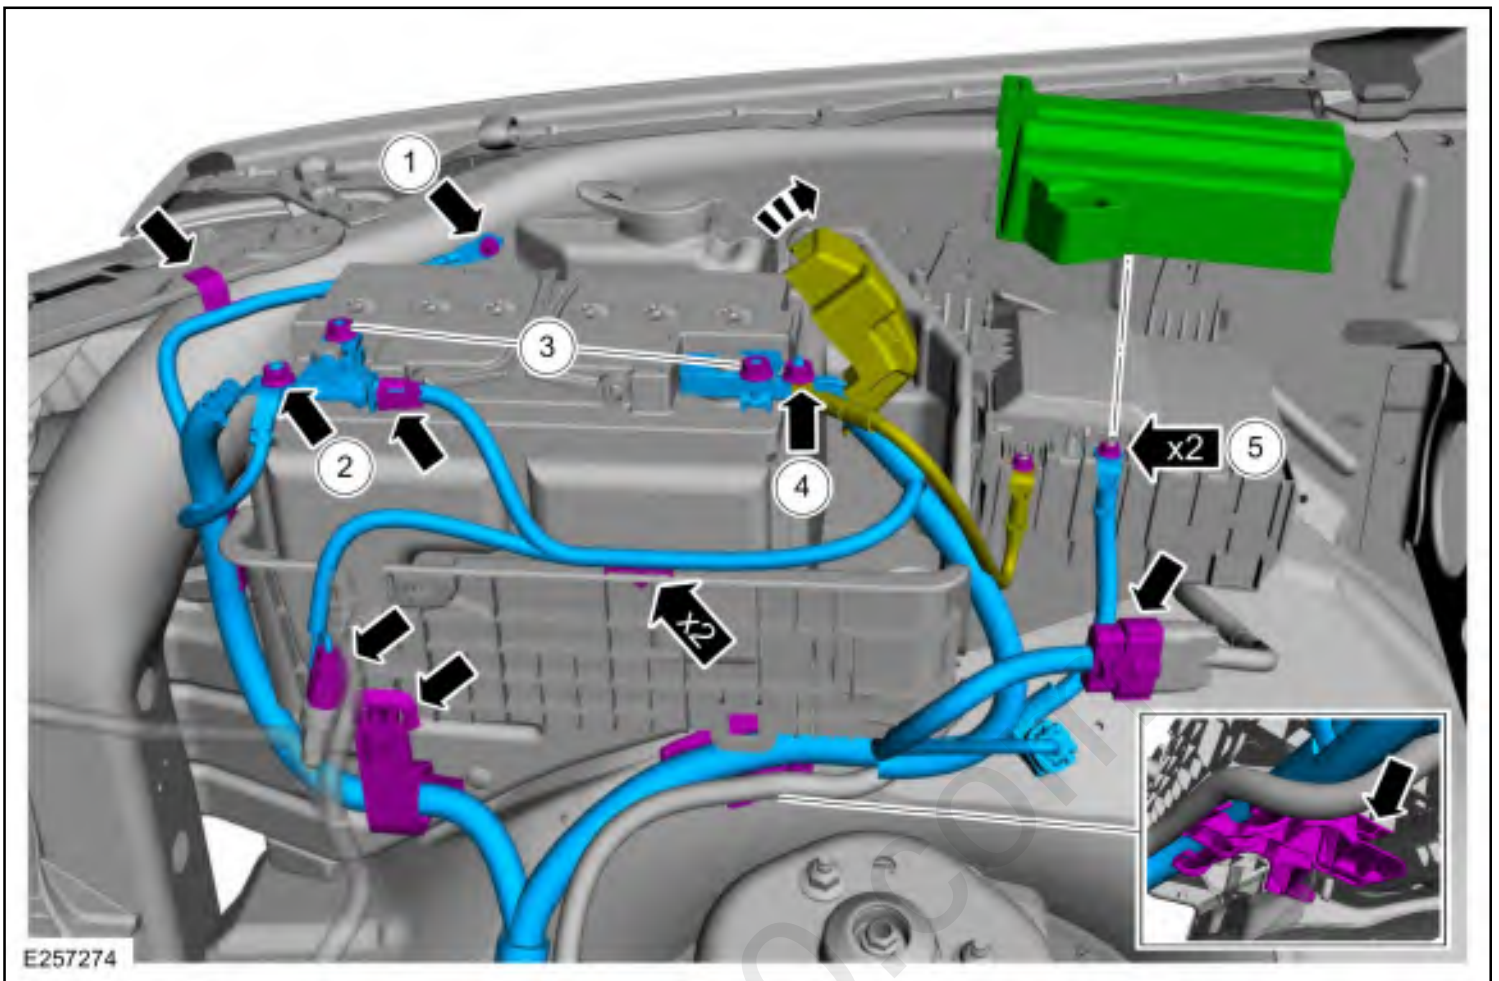


1. Torque: 177 lb.in (20 Nm)
2. Torque: 177 lb.in (20 Nm)

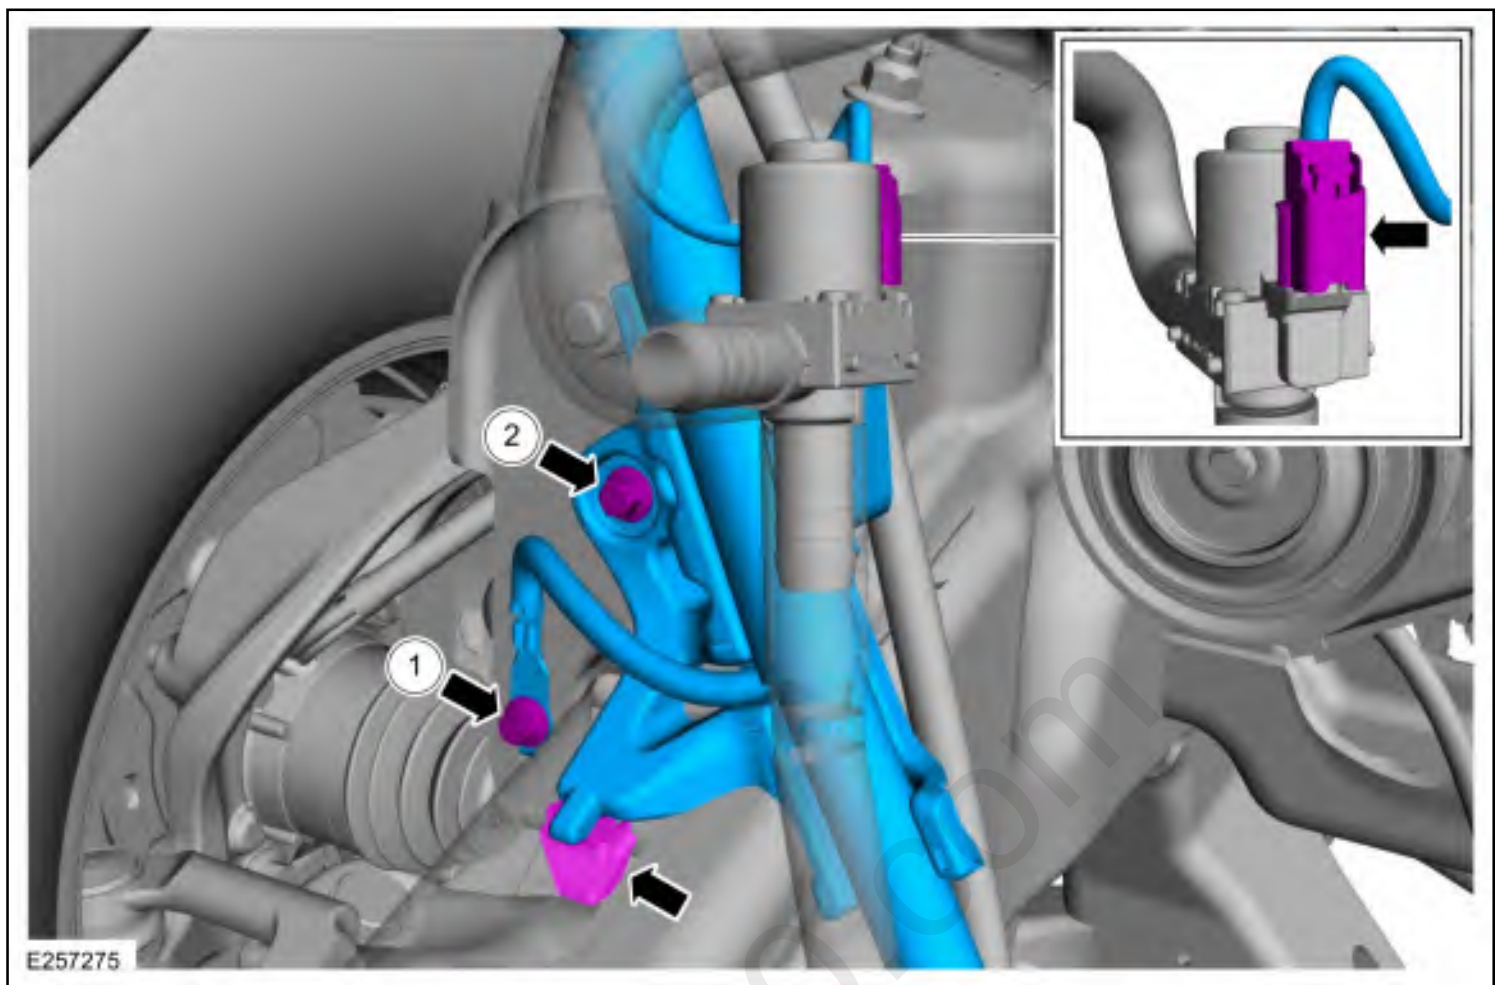


1. *Torque:* 18 lb.ft (25 Nm)
2. *Torque:* 55 lb.in (6.2 Nm)
3. *Torque:* 106 lb.in (12 Nm)

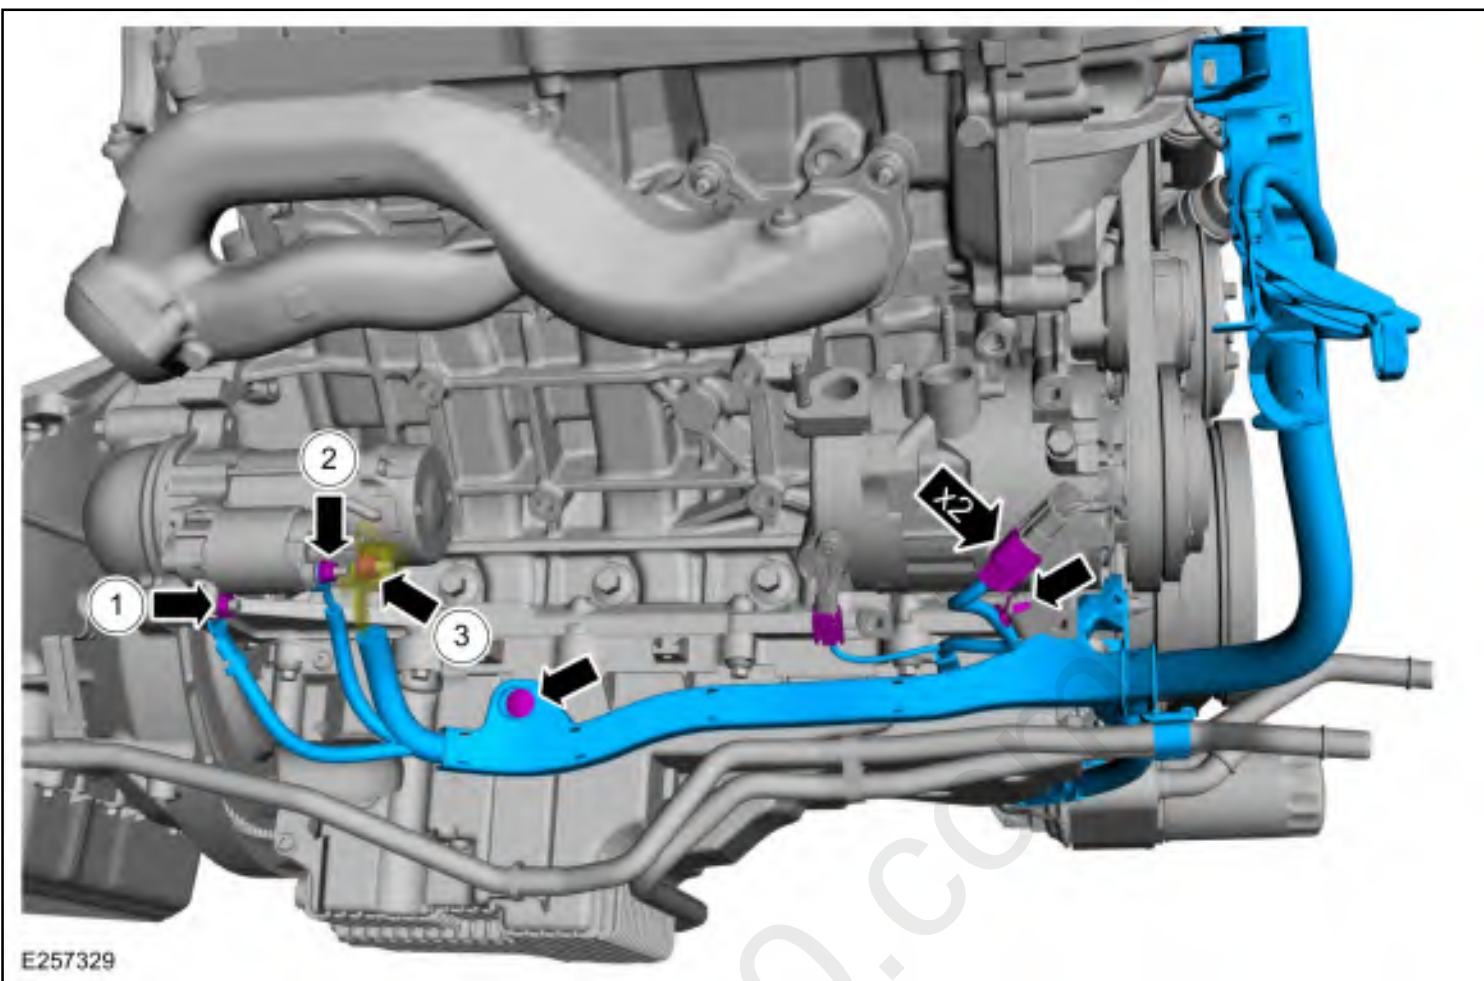

6. *Torque*: 106 lb.in (12 Nm)

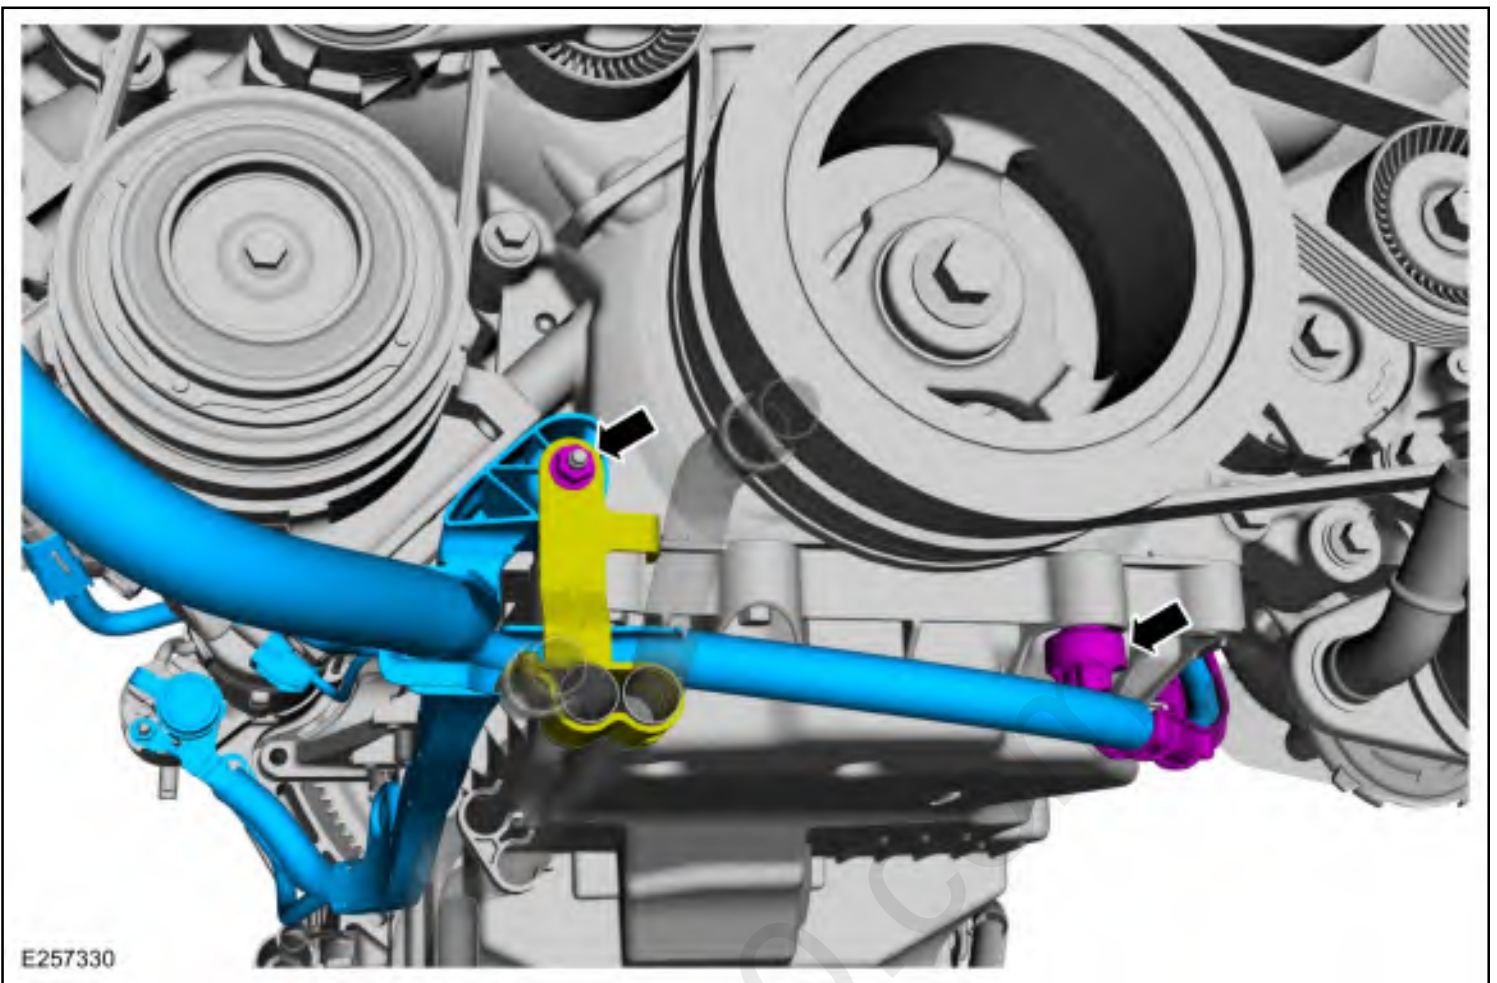

1. Torque: 155 lb.in (17.5 Nm)
2. Torque: 106 lb.in (12 Nm)

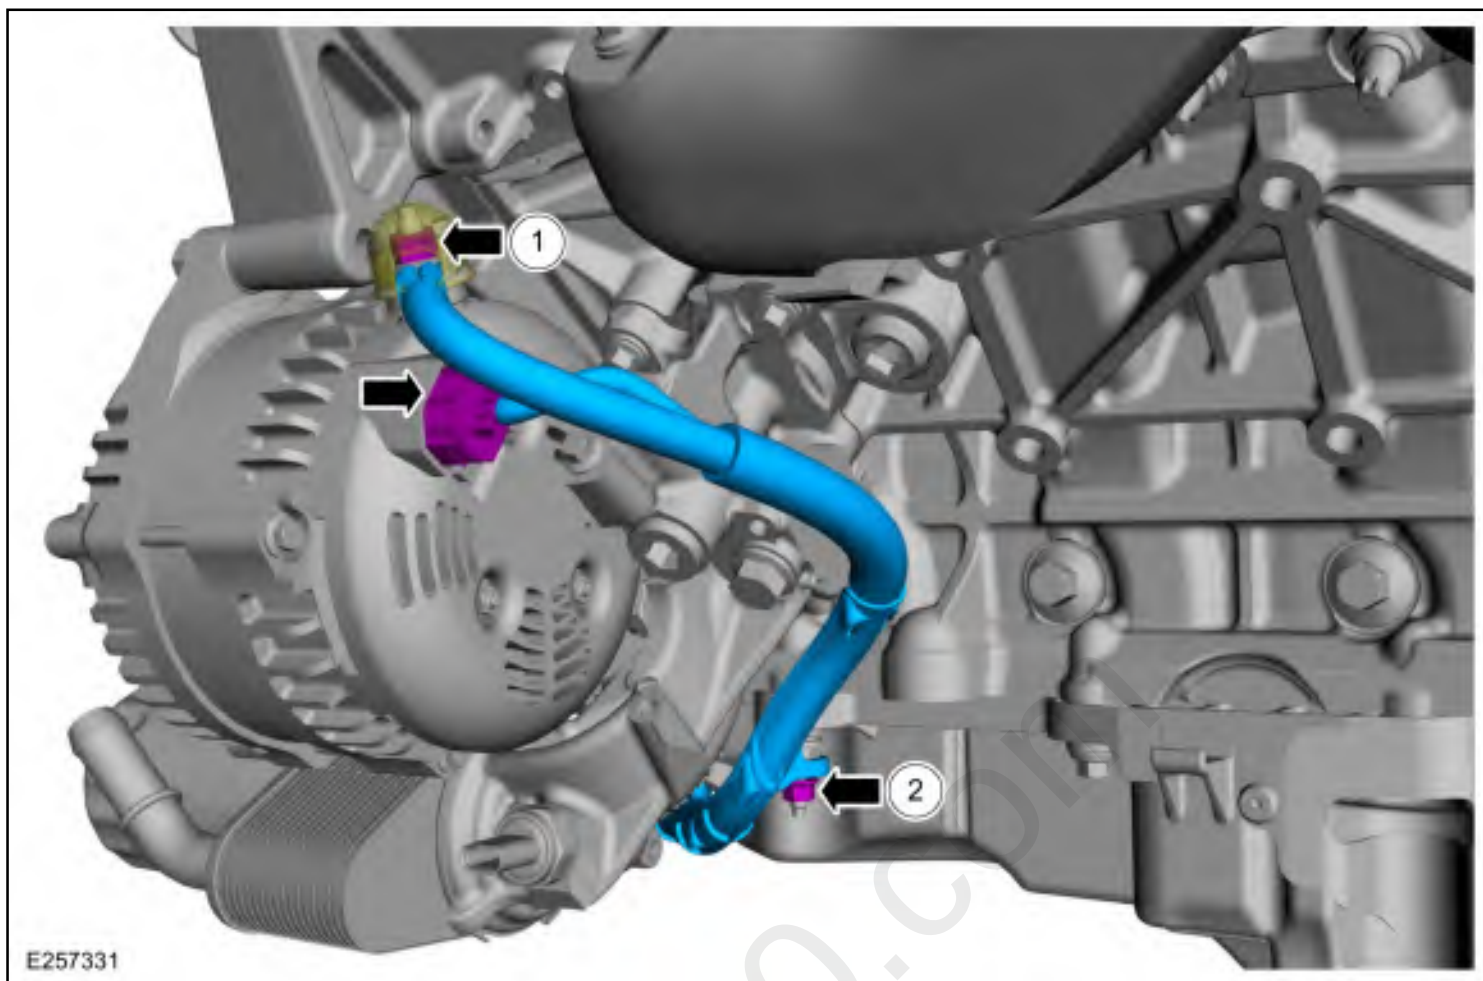

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company