


Battery

Base Part Number: Base Part Number: 10655


Removal

NOTE: *Removal steps in this procedure may contain installation details.*

1. Disconnect the battery.
Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
2. Fully loosen and remove the battery hold-down bolt and clamp. Remove the battery.
Torque: 62 lb.in (7 Nm)

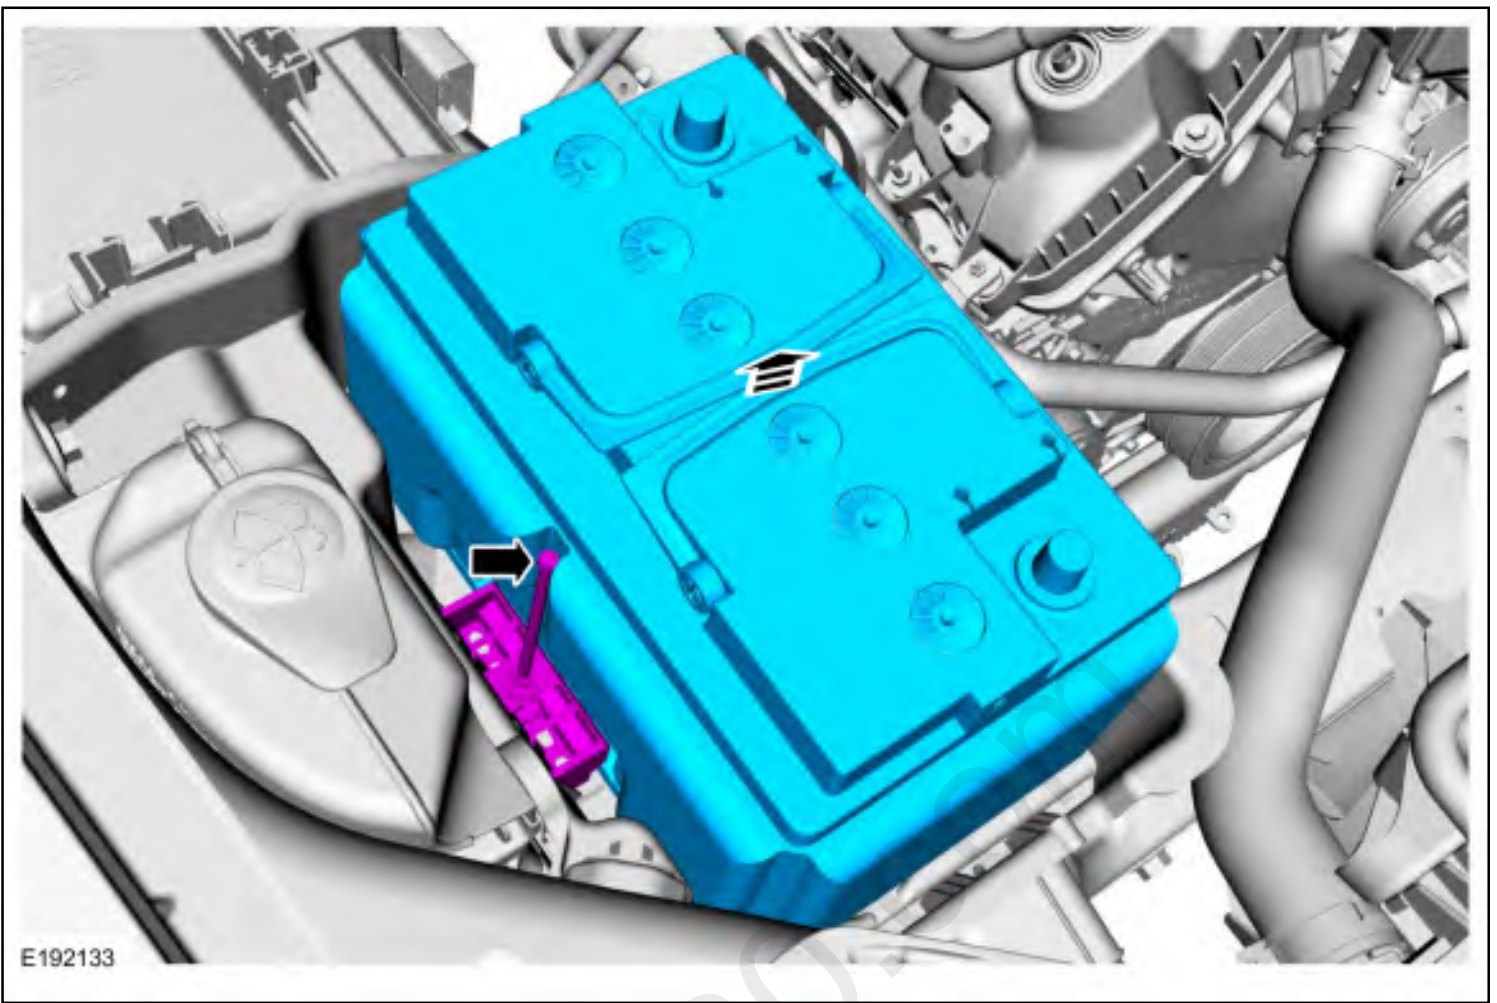

3. If installing a new battery, remove the battery heat shield.

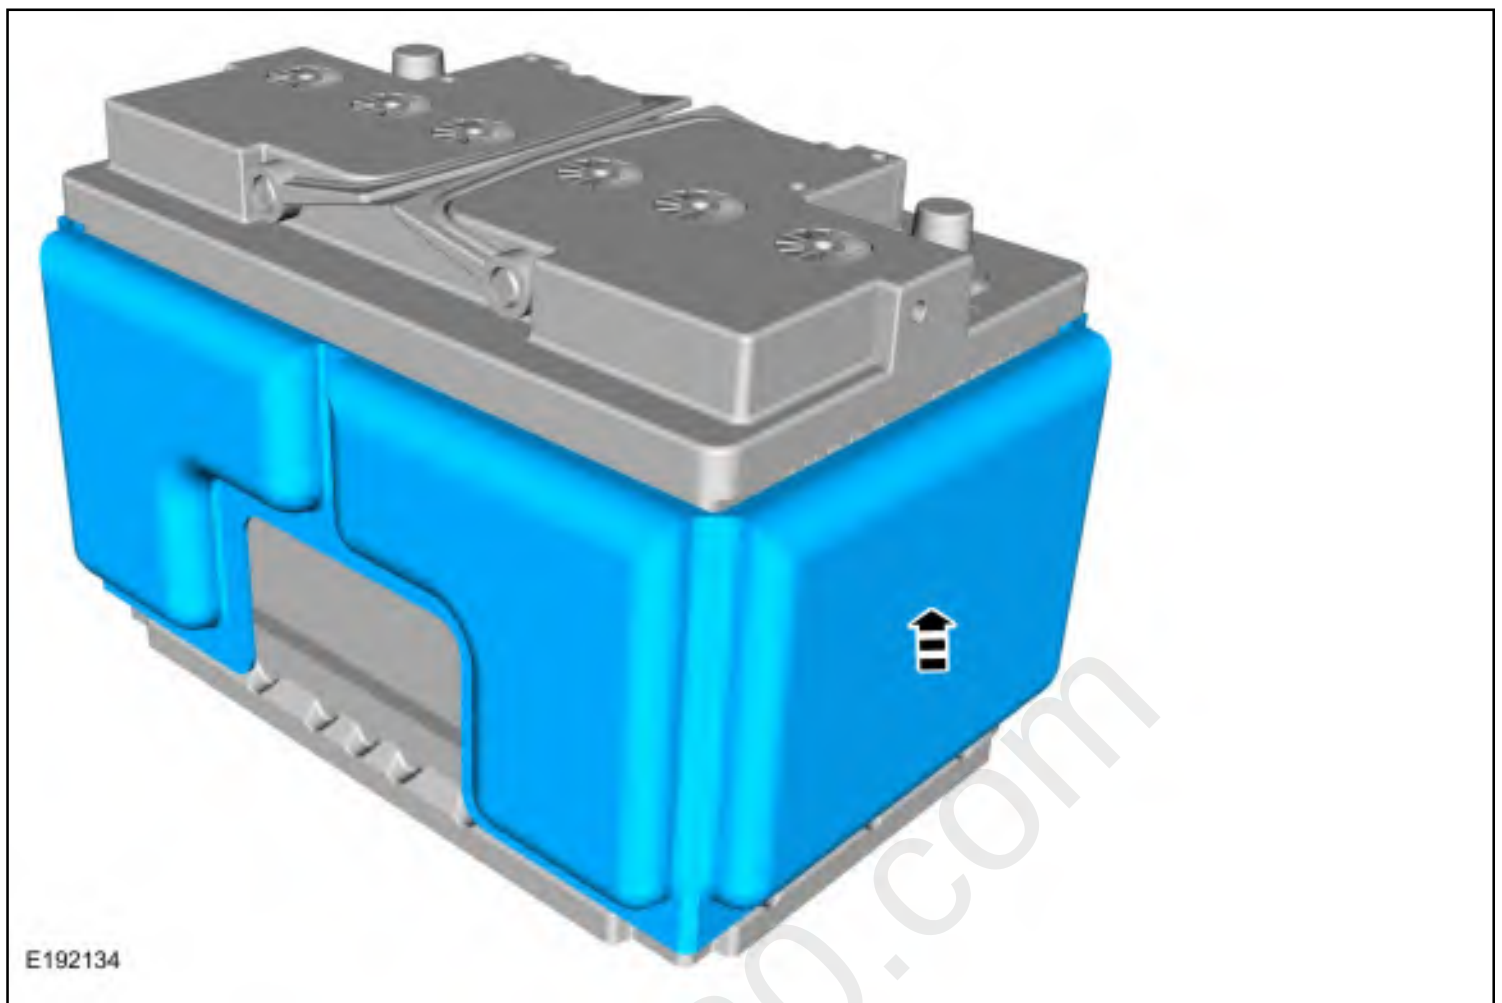

Installation

1. To install, reverse the removal procedure.
2. If installing a new battery, use the scan tool to carry out the Battery Monitoring System (BMS) reset after the battery is connected.