


Generator Current Sensor

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the battery cable from the negative battery post.
Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
2. Release the retainers and remove the BJB cover.

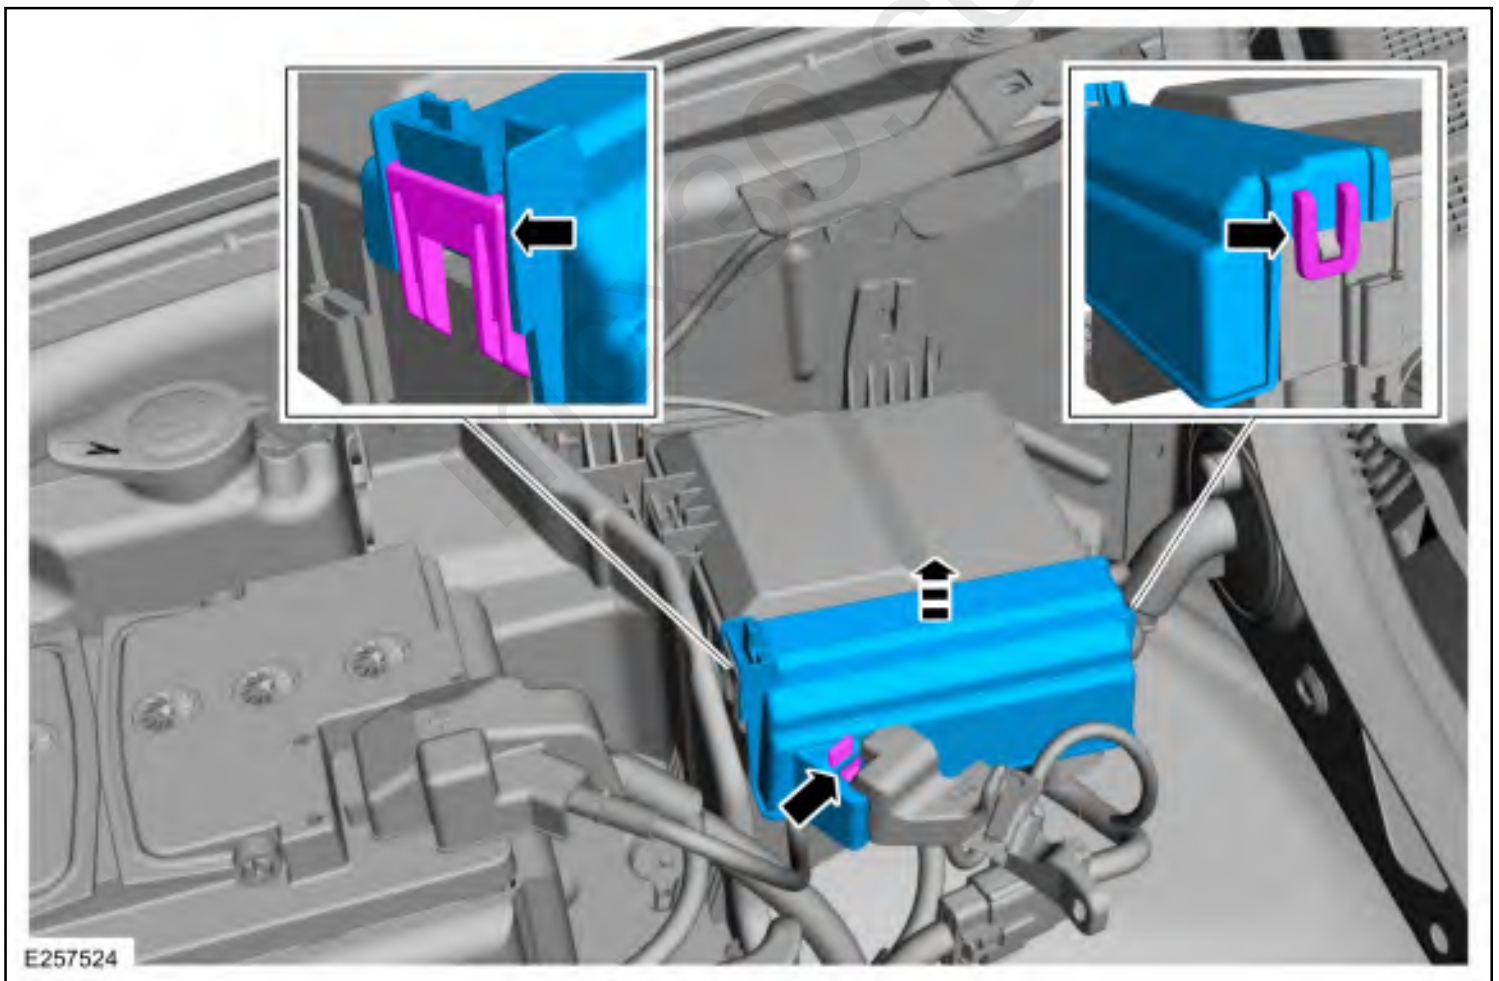


3. **NOTE:** *The generator current sensor must be installed in the proper position and orientation to*

function correctly. Note the orientation and position of the generator current sensor tape tab.

Remove the nut and position the battery cable aside. Disconnect the generator current sensor electrical connector. Index-mark the battery cable at the generator current sensor. Remove and discard the tape securing the generator current sensor to the battery cable and remove the generator current sensor.

Torque: 93 lb.in (10.5 Nm)

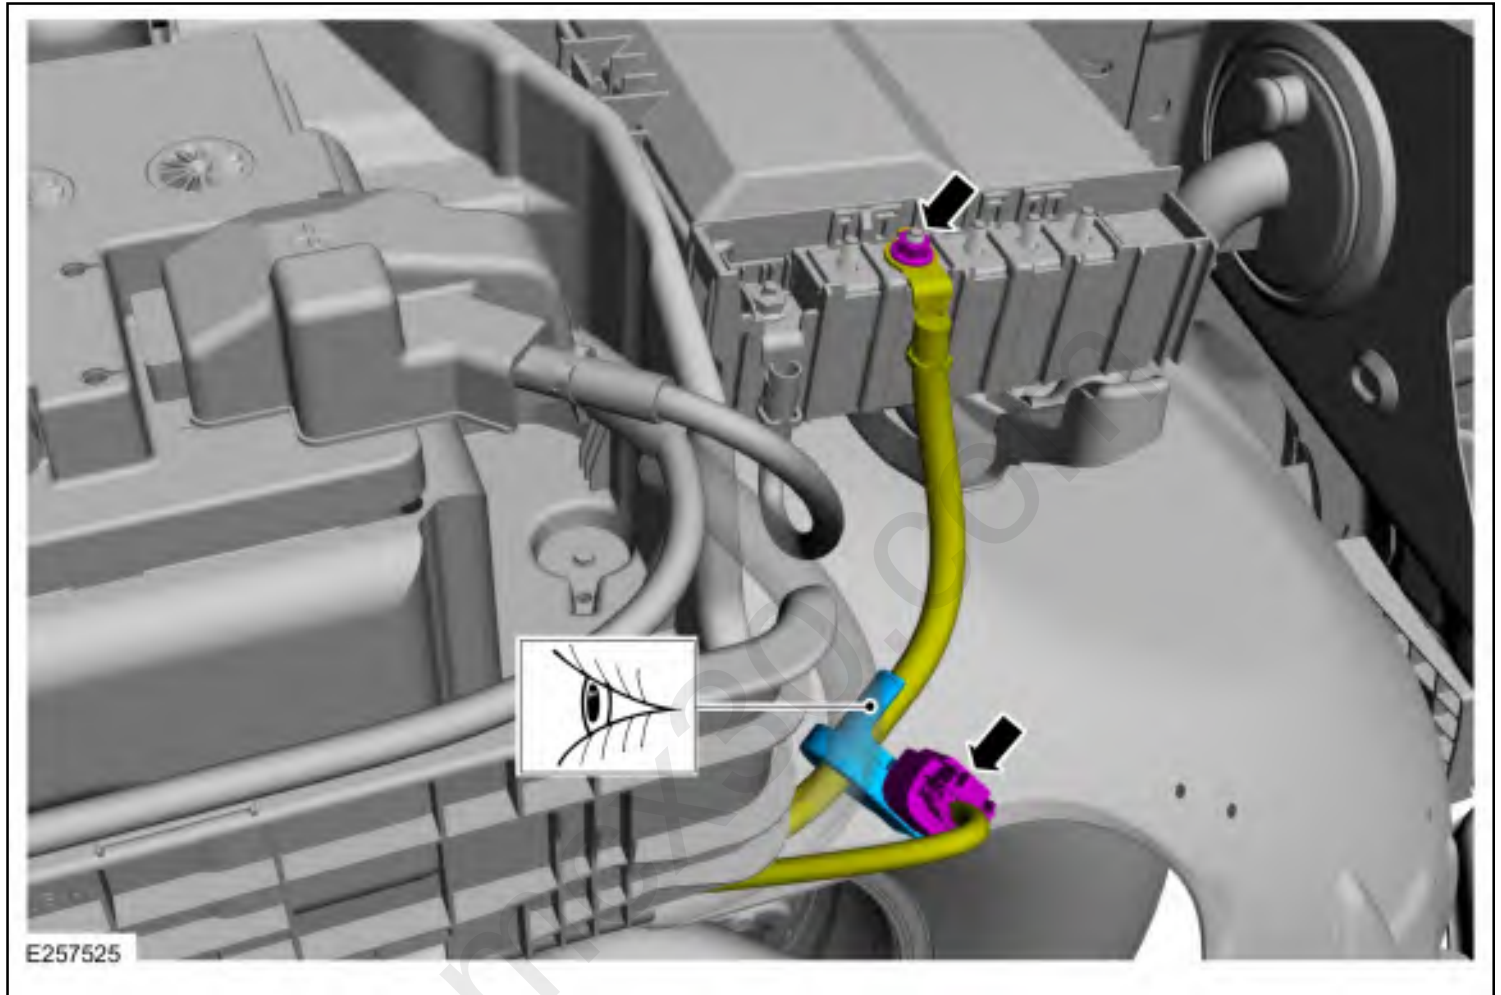

Installation

1. To install, reverse the removal procedure.