


Generator - 5.0L 32V Ti-VCT

Base Part Number: Base Part Number: 10300

Removal


1. Disconnect the battery.
Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
2. Remove the accessory drive belt tensioner.
Refer to: [Accessory Drive Belt Tensioner](#) (303-05D Accessory Drive - 5.0L 32V Ti-VCT, Removal and Installation).
 1. Remove the M10 x 90mm generator bolt.
Torque: 35 lb.ft (47 Nm)
 2. Remove the M10 x 40mm generator bolt and position the generator.
Torque: 35 lb.ft (47 Nm)

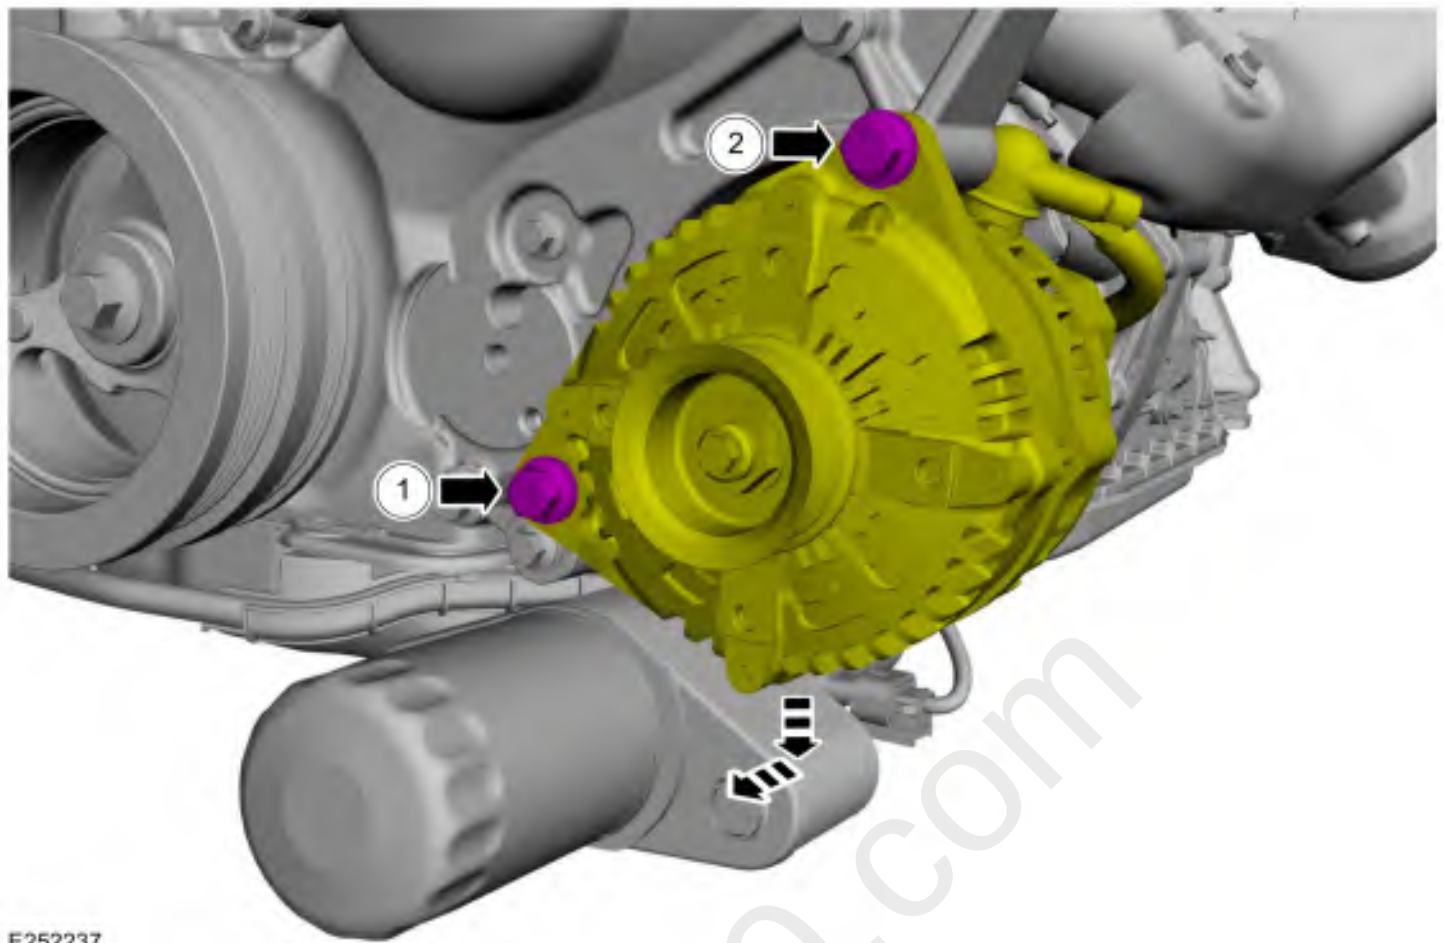

4. **NOTICE:** When installing the B+ terminal nut to the generator, finger-start the nut before tightening or component damage may occur.

Position the B+ wire protective cover, remove the nut and position the B+ wire. Disconnect the electrical connector and remove the generator.

Torque: 150 lb.in (17 Nm)

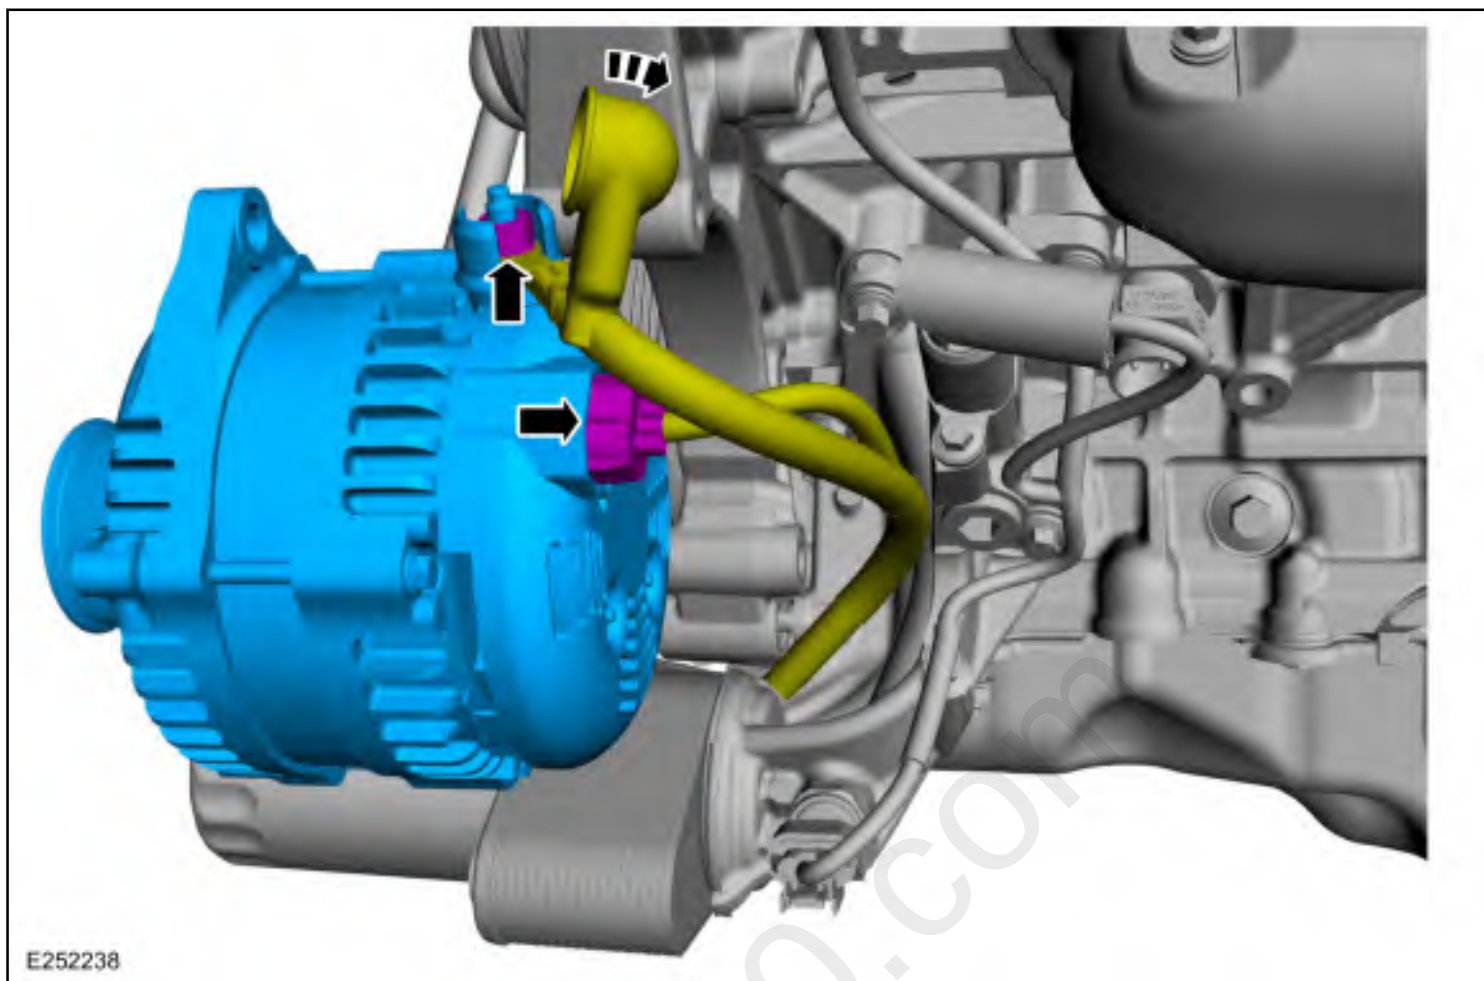

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company