


Direct Current/Direct Current (DC/DC) Converter Control Module

Removal

1. **NOTE:** *If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.*

Upload the Direct Current/Direct Current (DC/DC) configuration to the scan tool by following the scan tool on-screen instructions.


2. Position the RH front seat rearward.

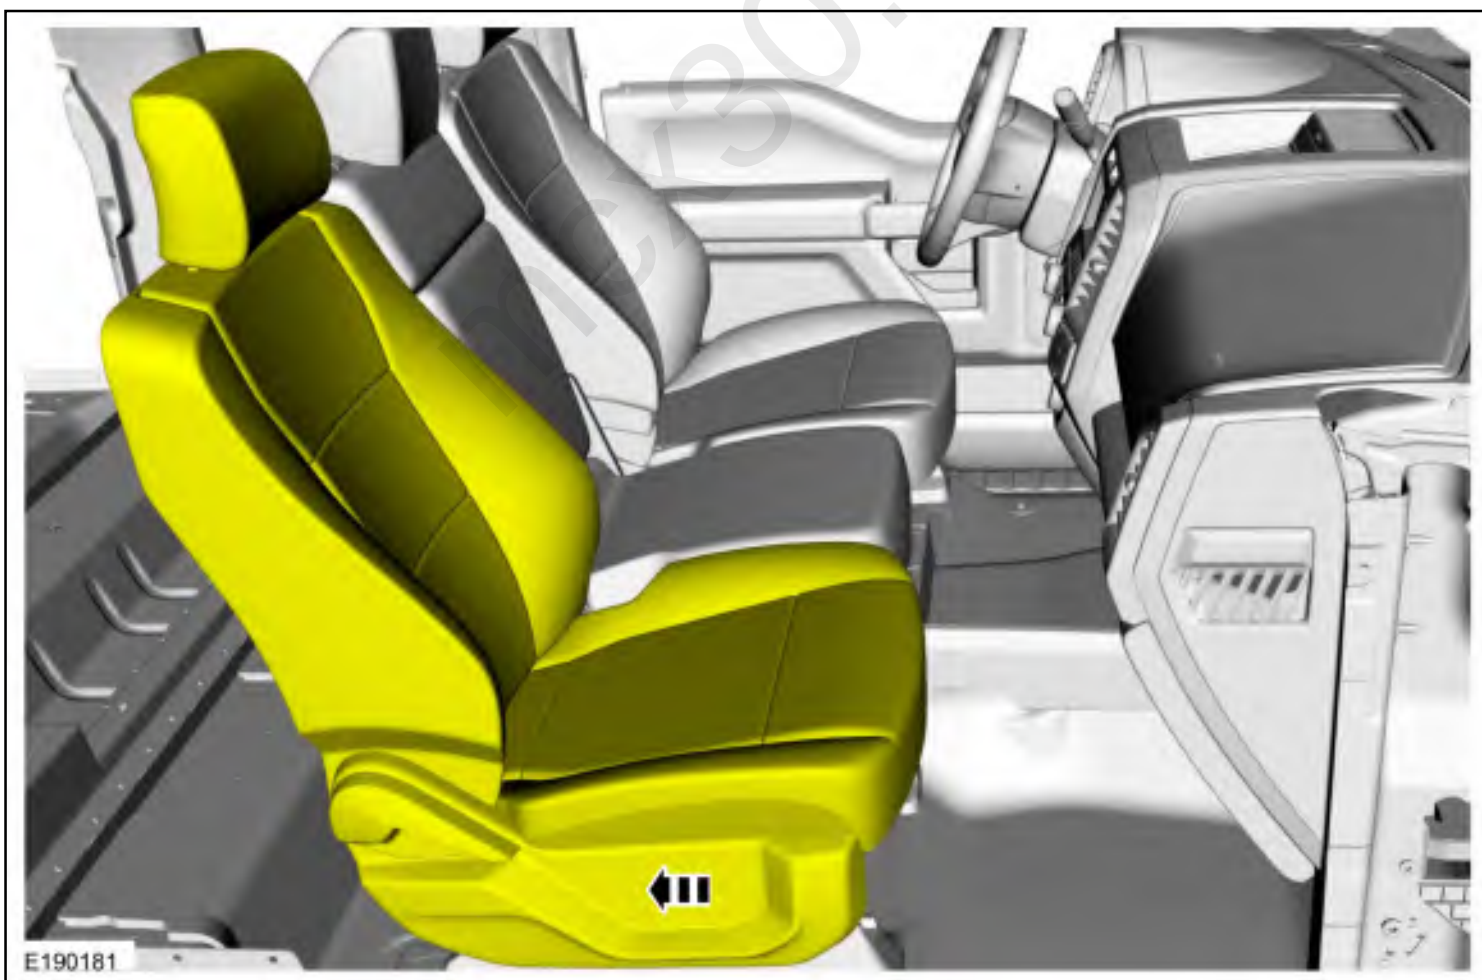

3. Remove the retainers and lower the RH lower dash panel.



4. Disconnect the Direct Current/Direct Current (DC/DC) converter control module electrical connector. Remove the retainers and the DC/DC converter control module.

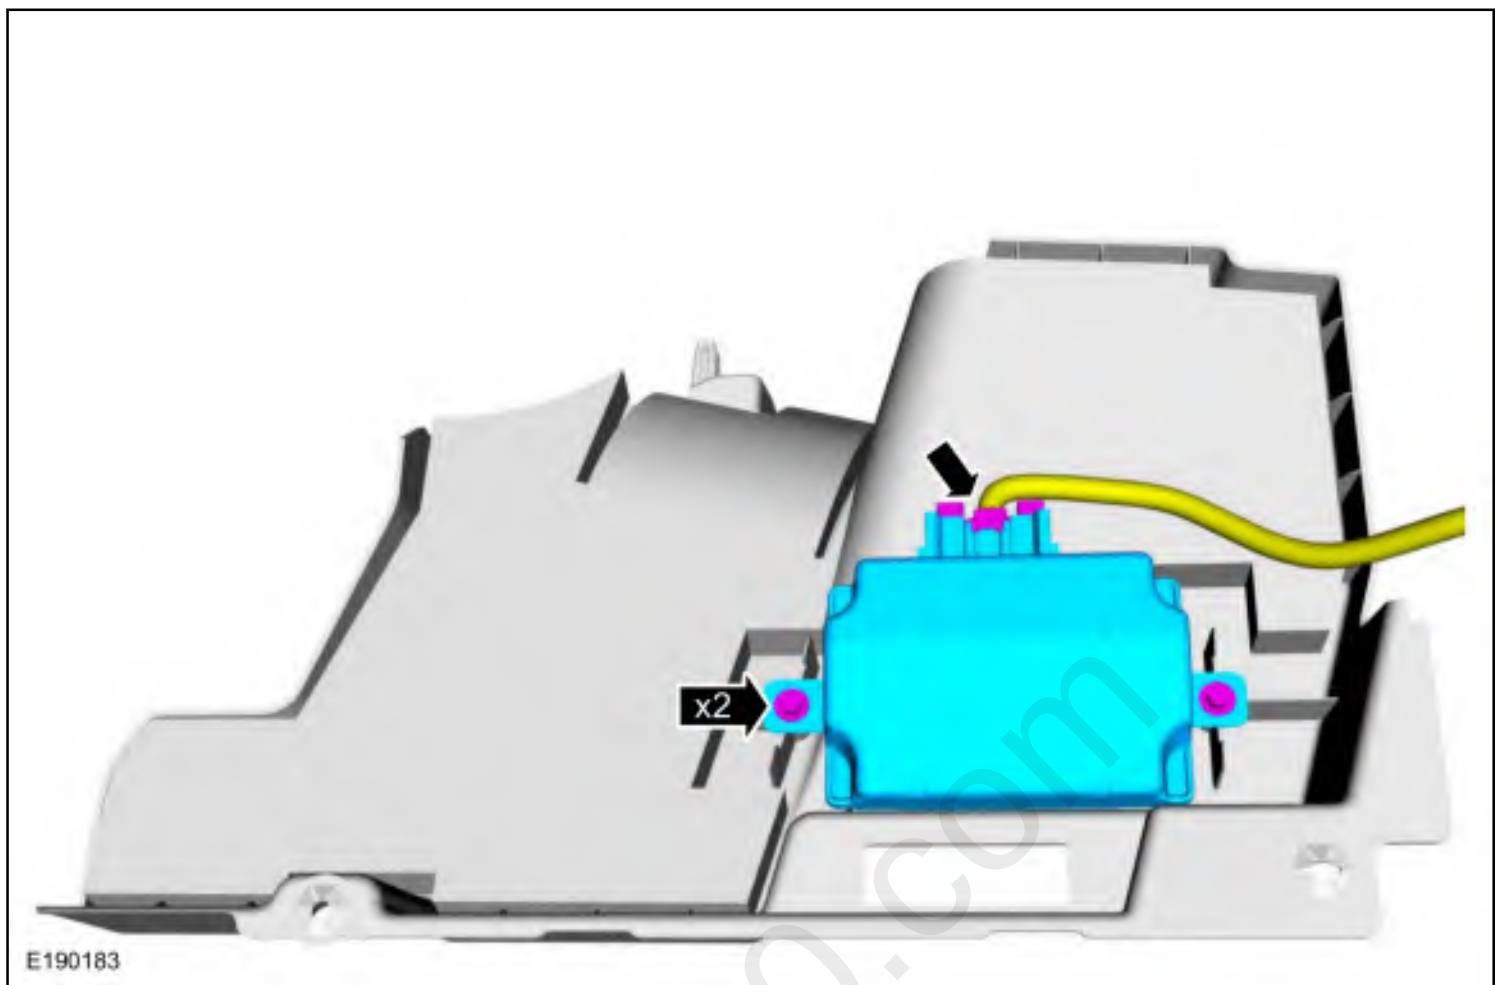

Installation

1. To install, reverse the removal procedure.
2. If replacing the module, download the Direct Current/Direct Current (DC/DC) converter control module configuration information from the scan tool to the new Direct Current/Direct Current (DC/DC) converter control module following the scan tool on-screen instructions.