

Direct Current/Alternating Current (DC/AC) Inverter


Removal

 **WARNING:** Disconnect the 12 volt battery before servicing the direct current to alternating current (DC-AC) inverter or alternating current (AC) powerpoint to prevent the risk of high voltage shock. Failure to follow this instruction may result in serious personal injury.


1. Disconnect the battery.

Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).


1. Release the RH rear seat backrest latch.
2. Position the RH rear seat backrest.

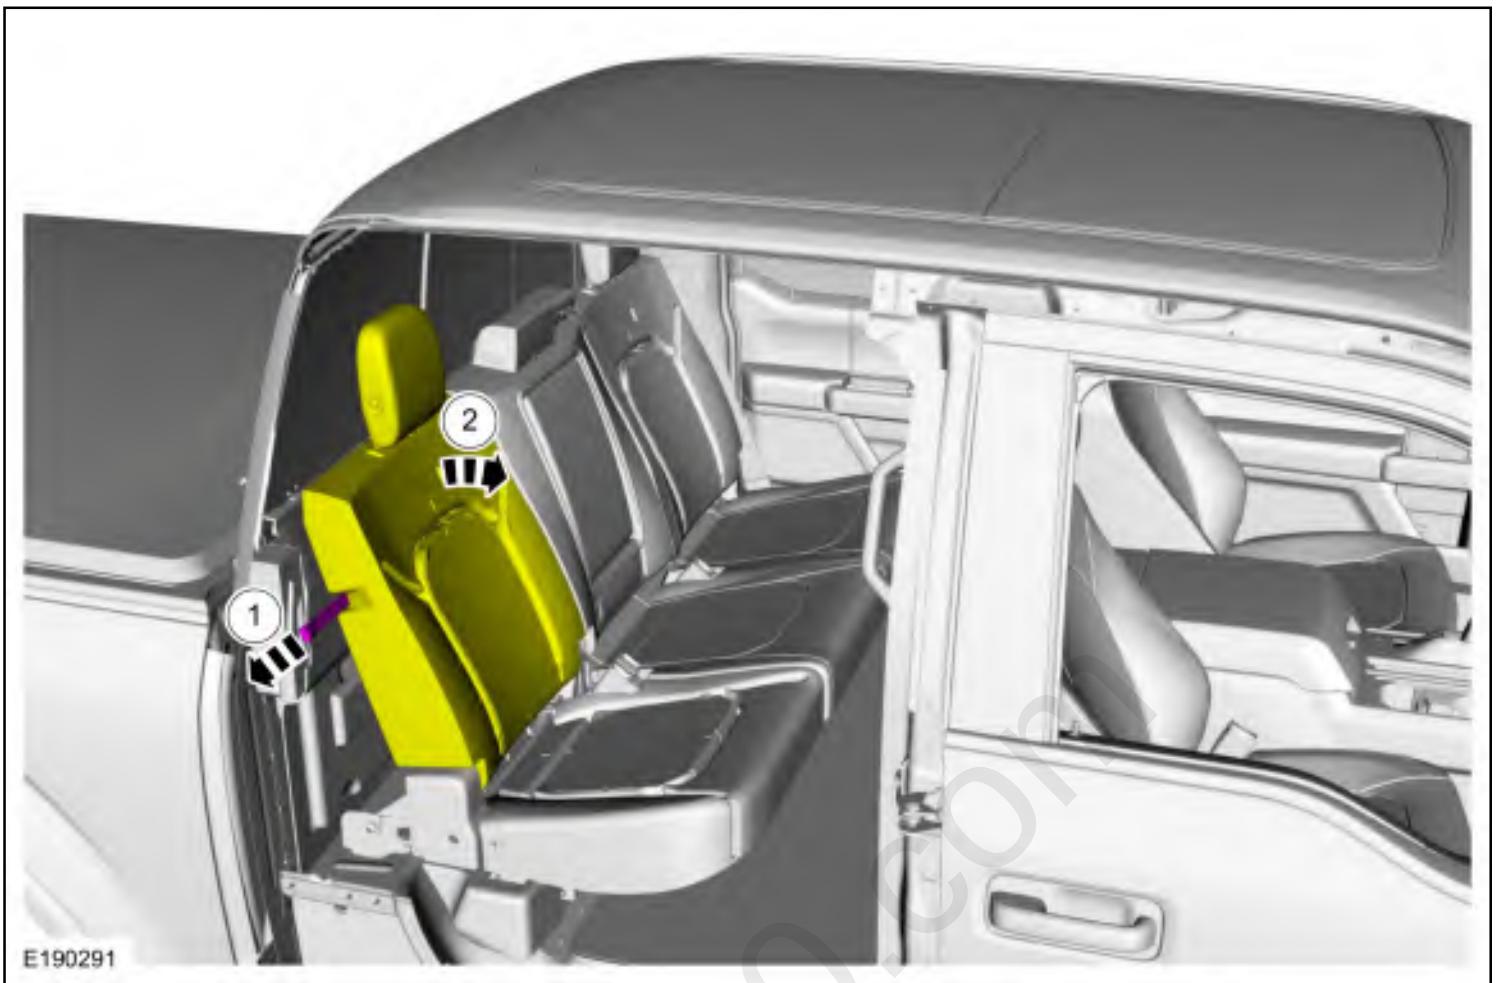


3. Remove the Direct Current/Alternating Current (DC/AC) inverter mounting bracket rear retainer.

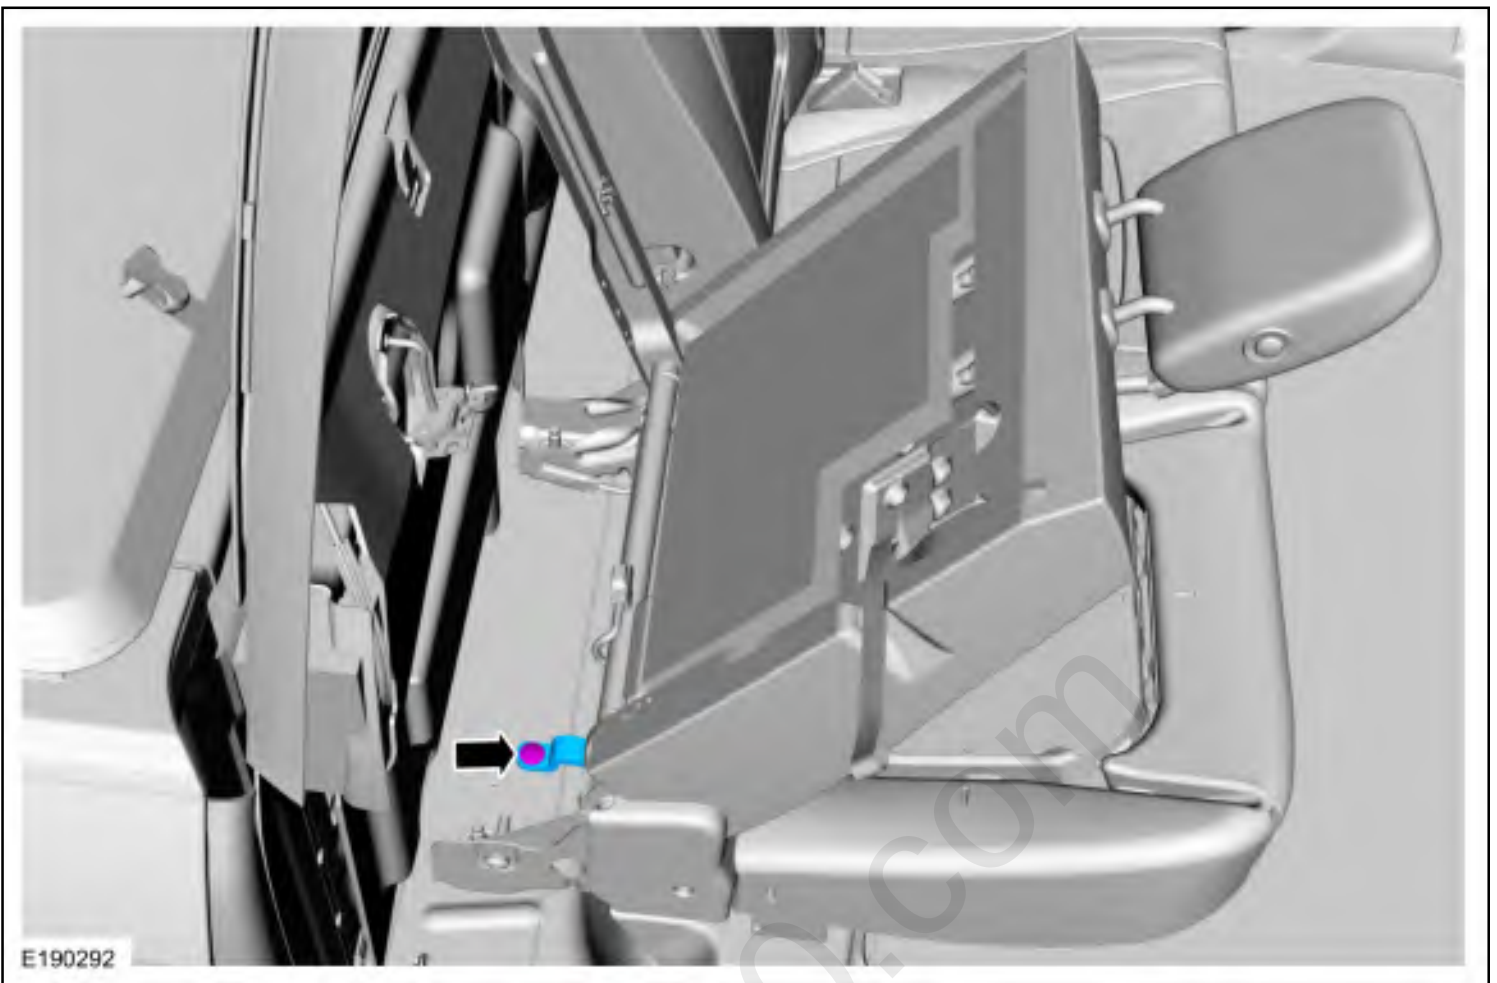

4. Position the RH rear seat backrest.

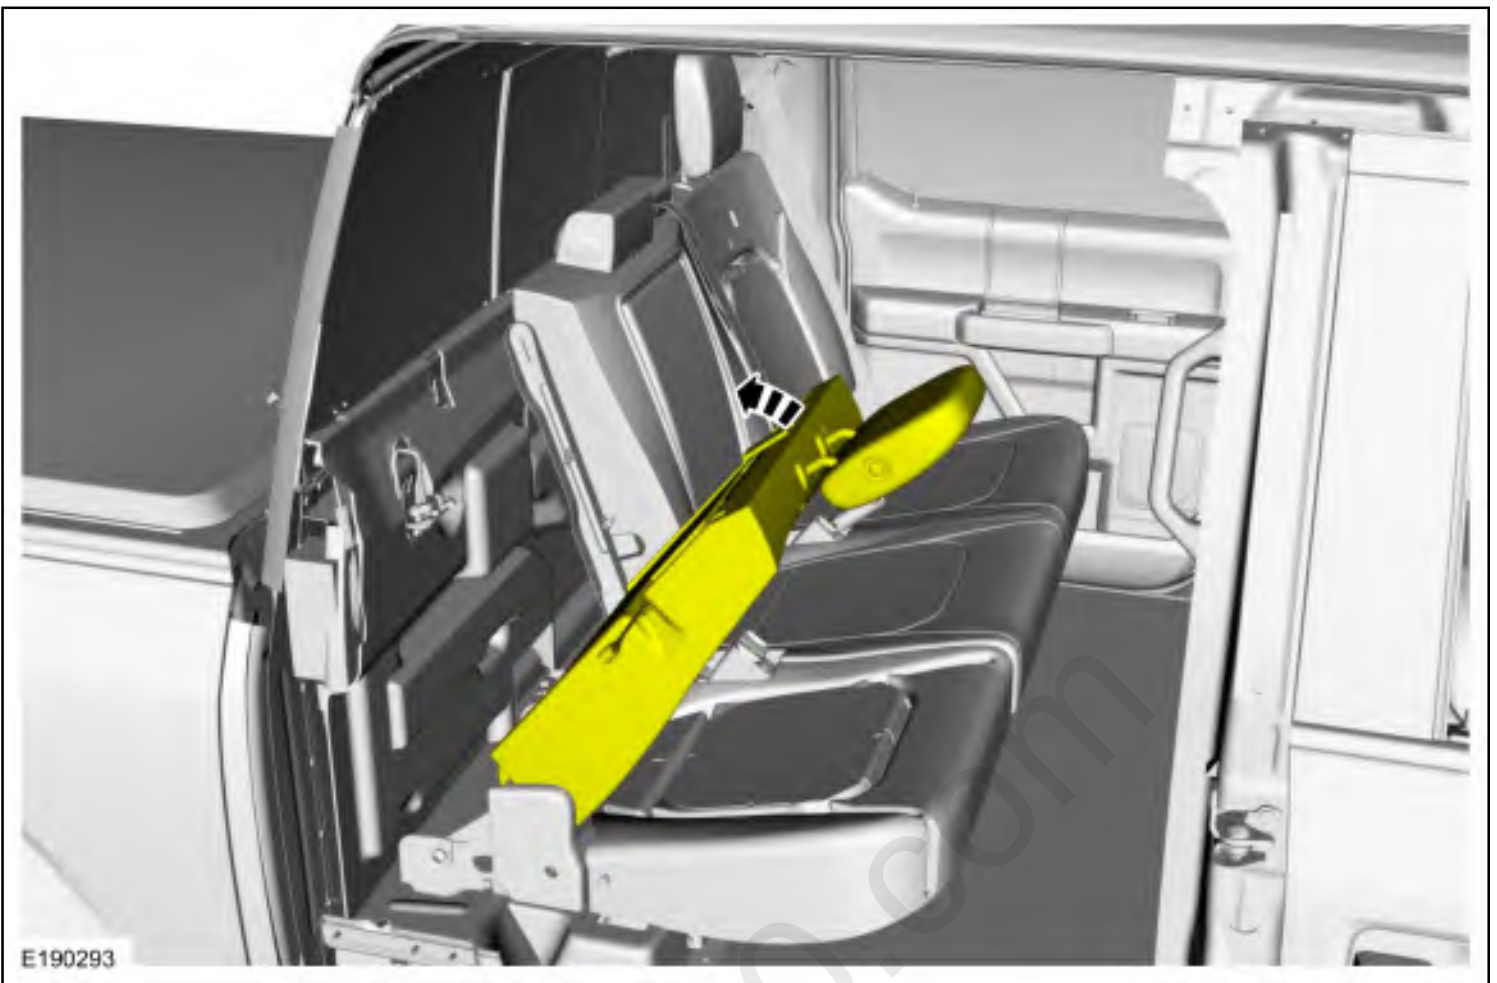


1. Release the RH rear seat cushion latch.
2. Position the RH rear seat cushion.

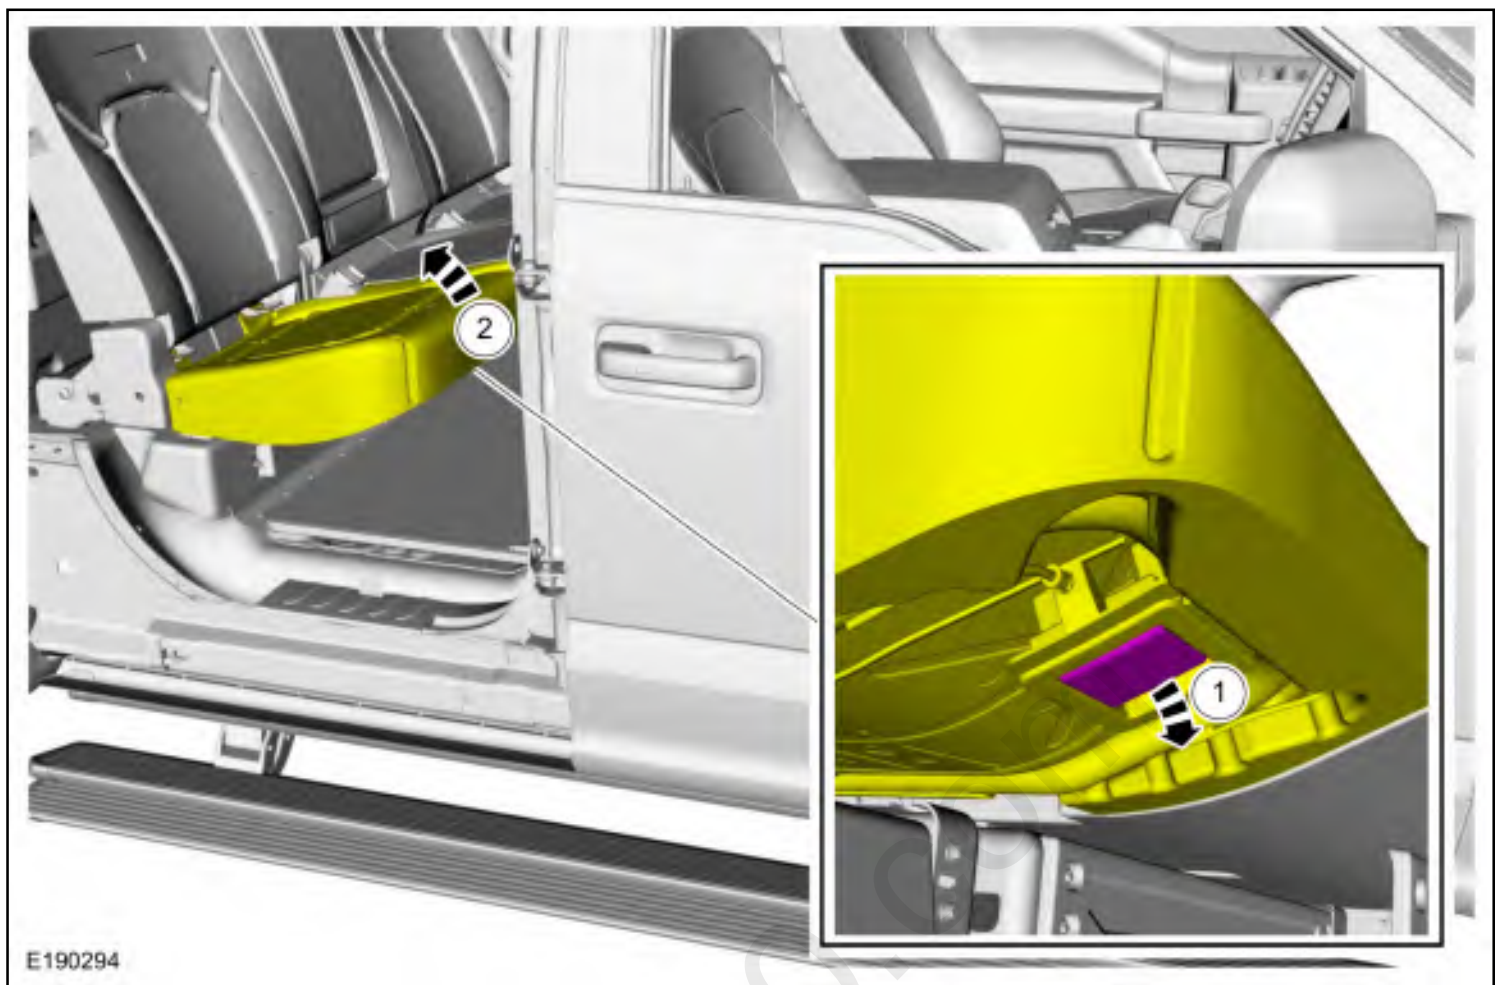


6. **NOTE:** *RH rear seat cushion not shown for clarity.*

Remove the Direct Current/Alternating Current (DC/AC) inverter cover.

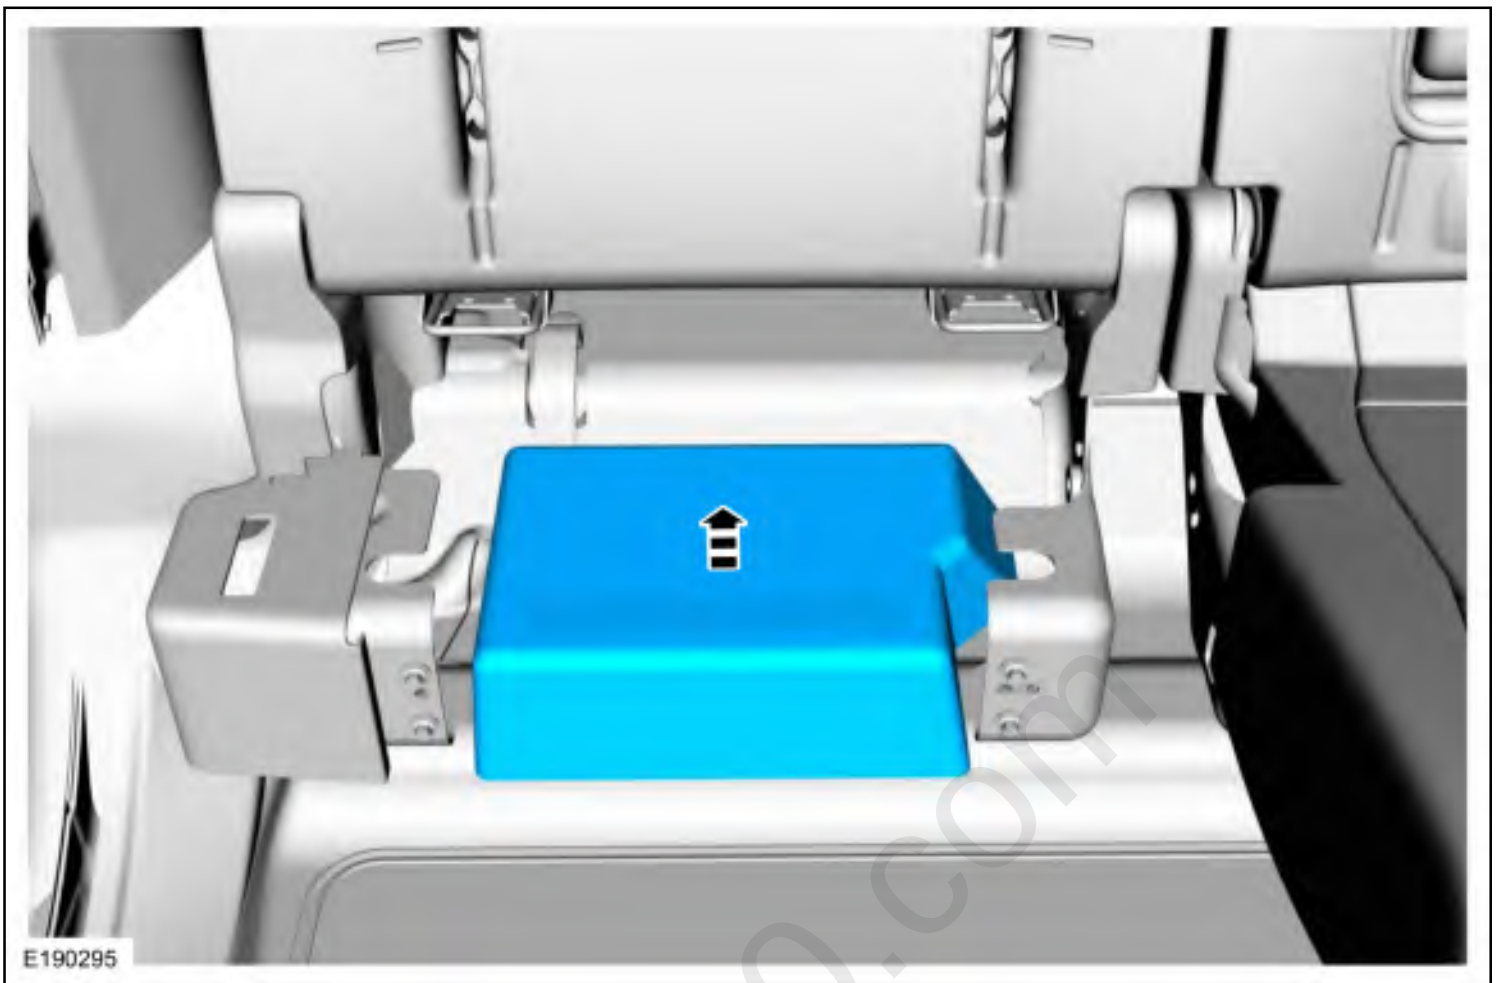

7. Disconnect the wire harness retainer and connectors. Remove the mounting bolts and the Direct Current/Alternating Current (DC/AC) inverter.
Torque: 62 lb.in (7 Nm)

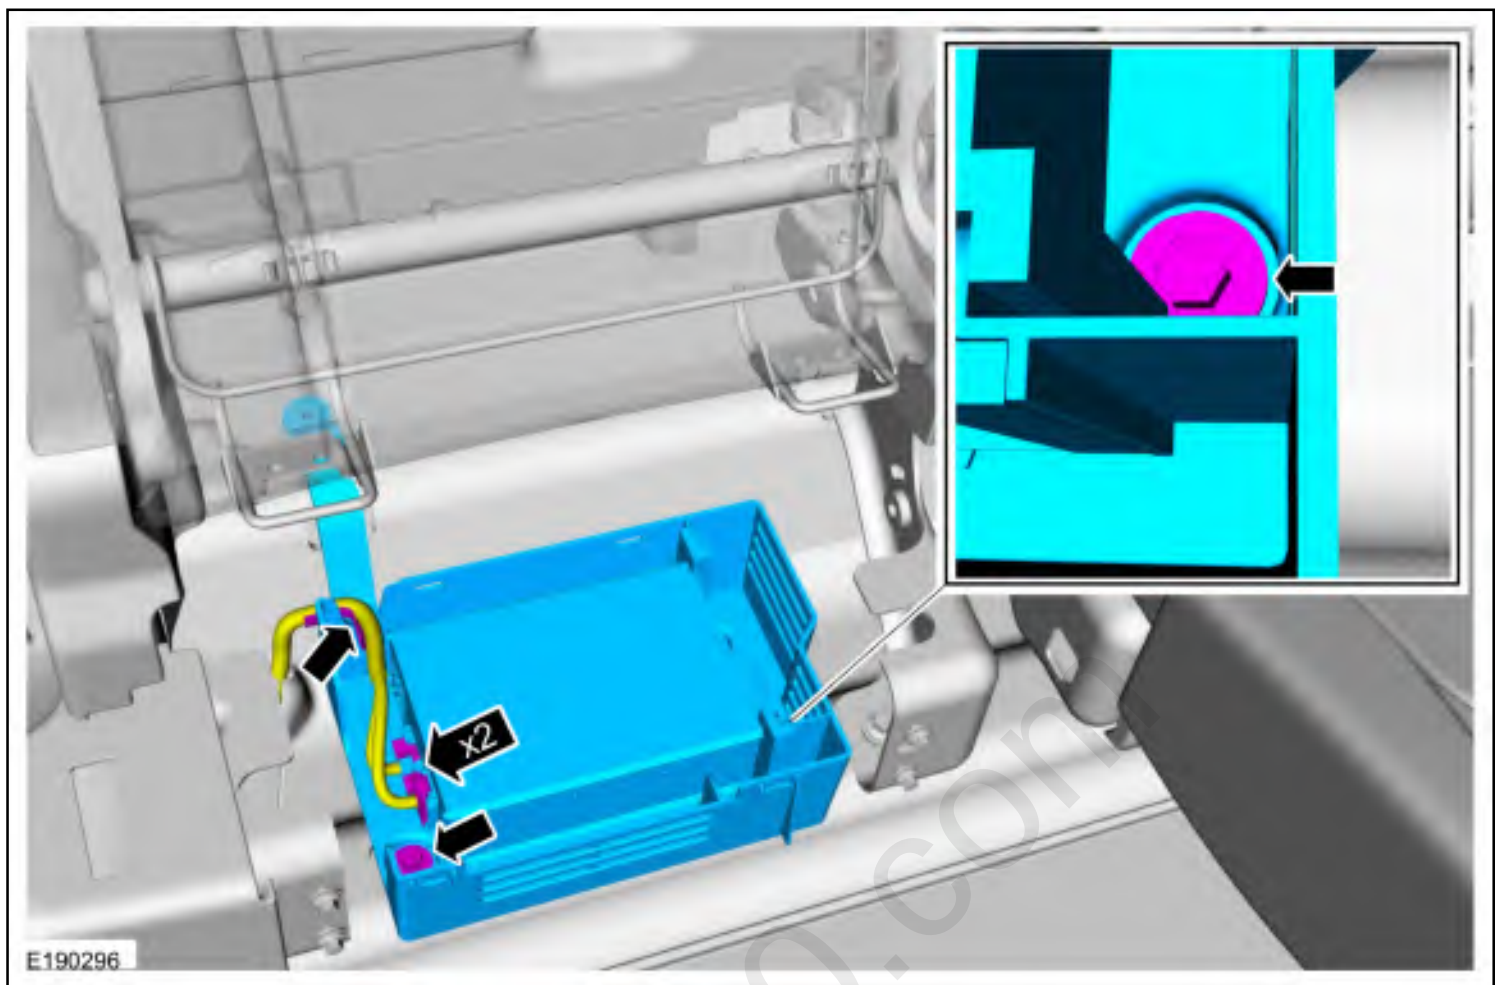

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company