


A-Pillar Tweeter Speaker

Removal

1. Remove the A-Pillar trim panel.
Refer to: [A-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the screws and the A-Pillar speaker.

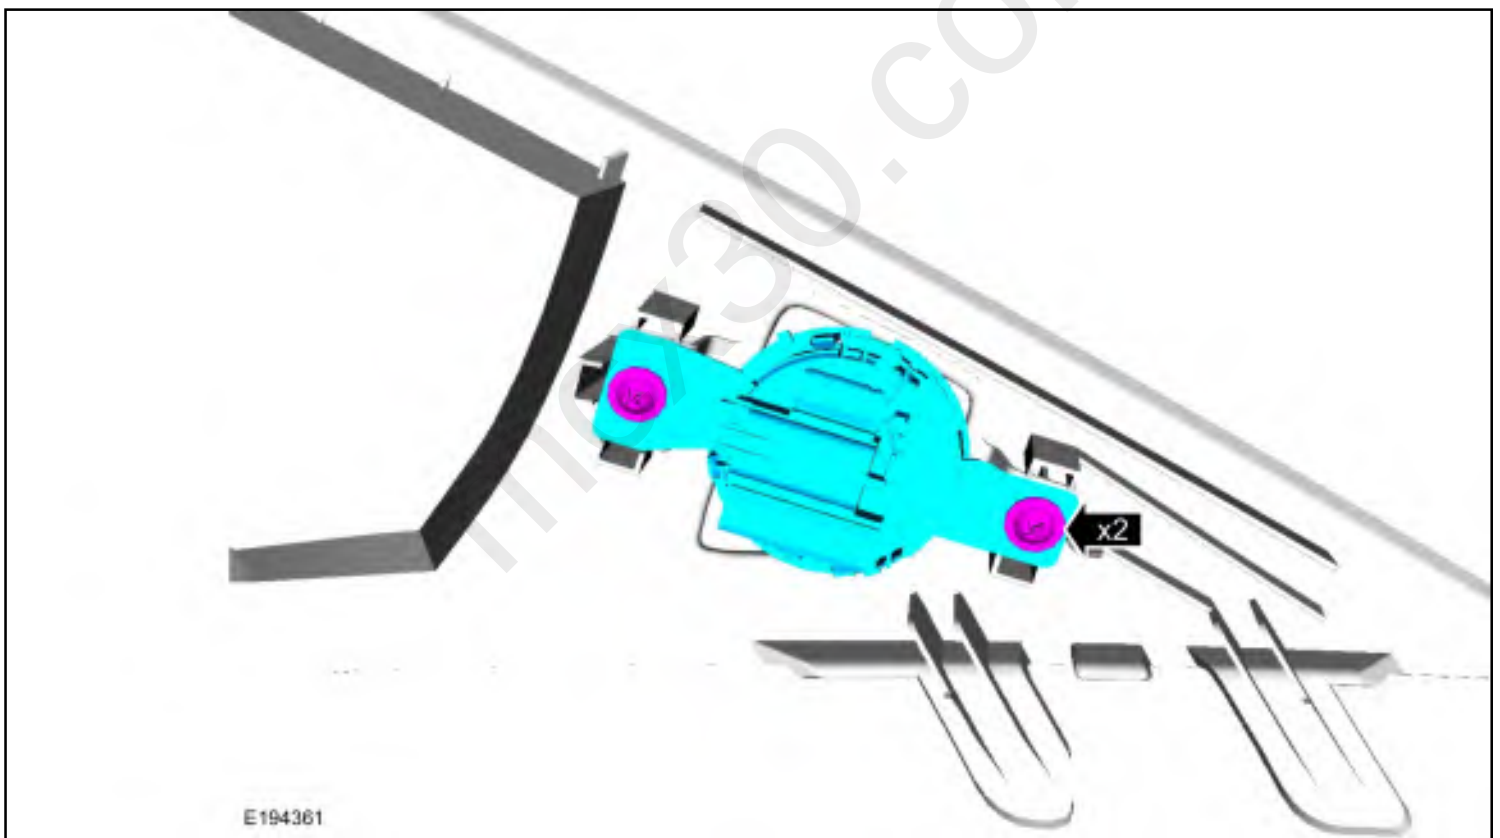

Installation

1. To install, reverse the removal procedure.