

Subwoofer Speaker

Removal


Bang & Olufsen® subwoofer

1. **NOTE:** *SuperCab equipped vehicles*

NOTE: *The striker should be in its lowest position for the latch to engage.*

Lower the LH seat backrest.

1. Pull the backrest release strap and release the latch from the striker.
2. Lower the backrest.

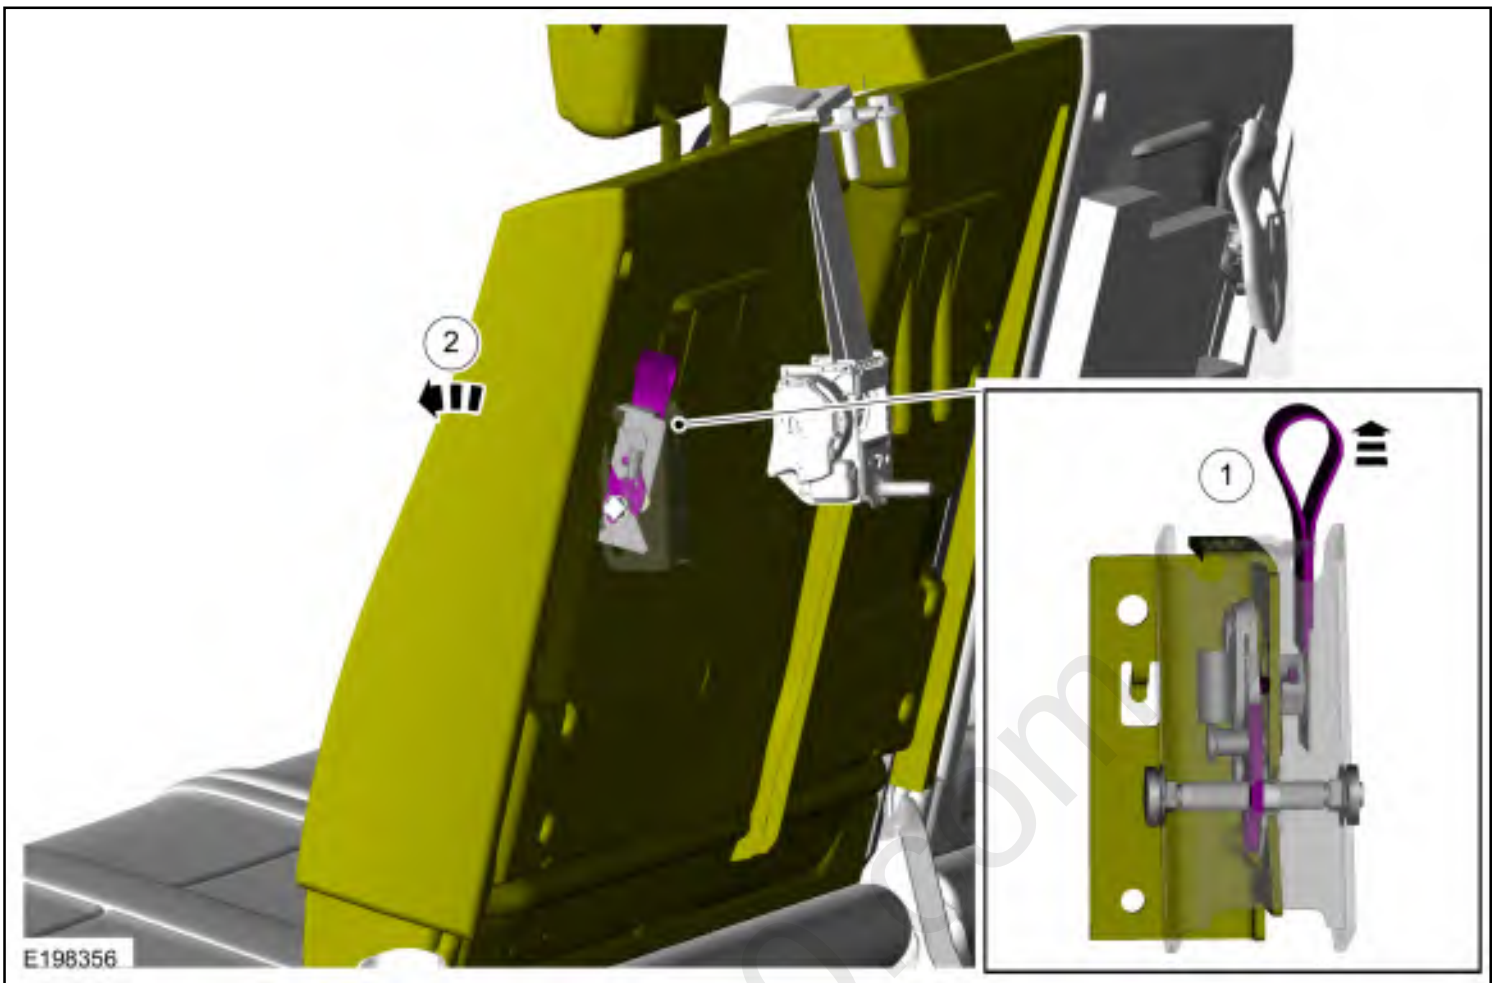


2. **NOTE:** *SuperCrew equipped vehicles*

NOTE: *The seat backrest latch is only accessible when the seat cushion is raised.*


NOTE: *The striker should be in its lowest position for the latch to engage.*

Lower the LH rear seat backrest.


1. Raise the seat cushion.
2. Release the backrest latch.
3. Lower the backrest down.

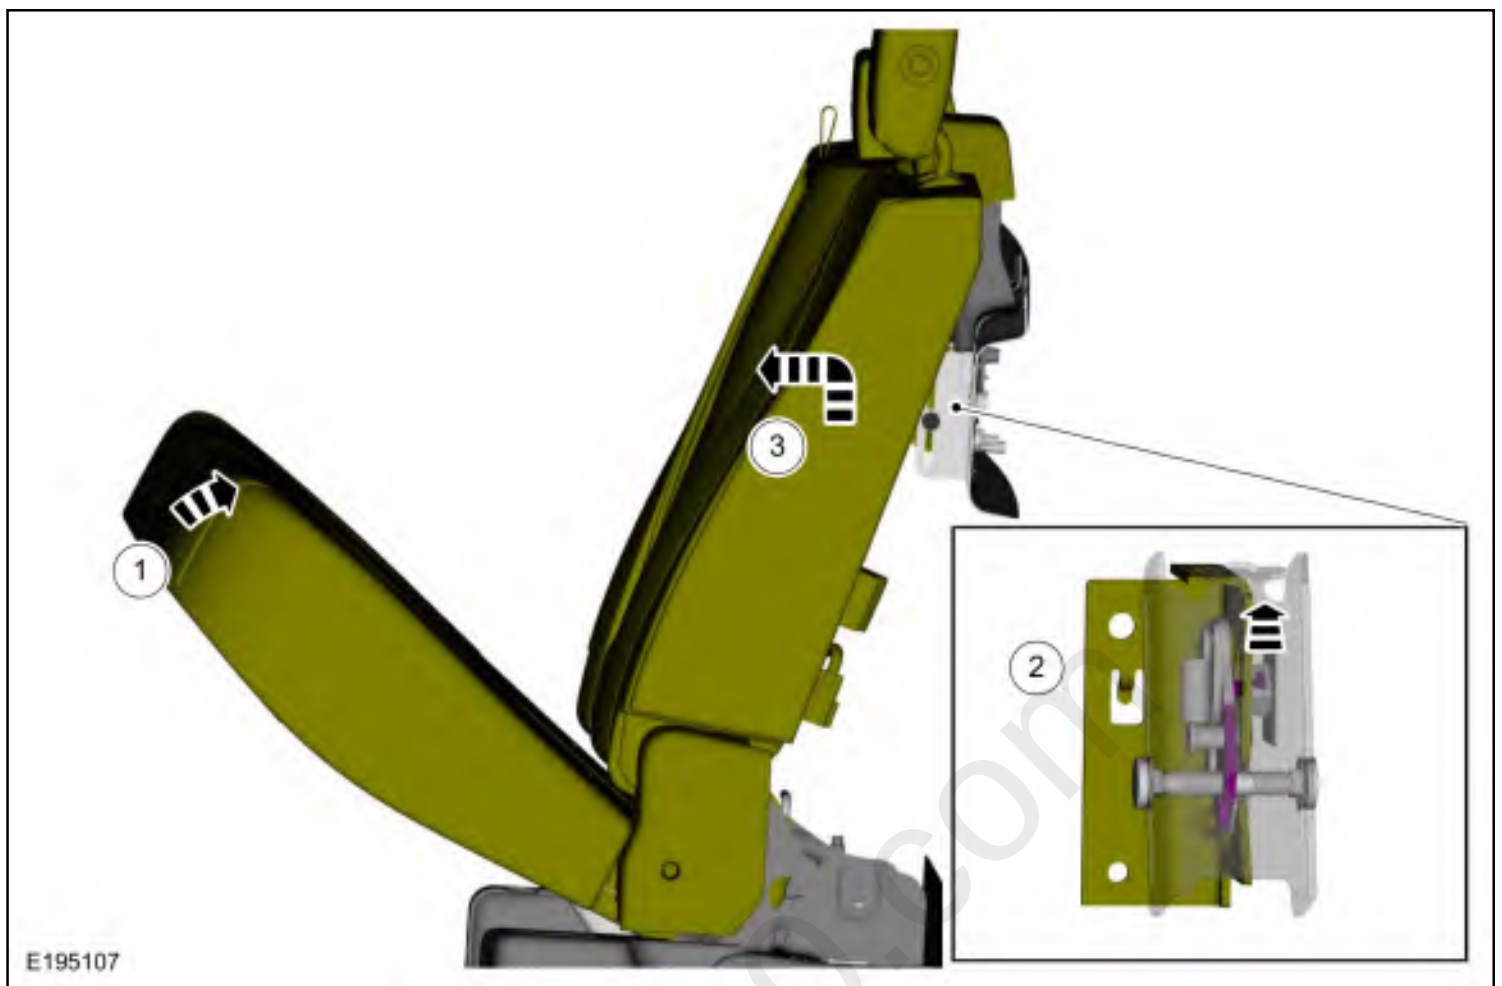


3. Disconnect the electrical connector, release the wire harness guide and position the harness aside.

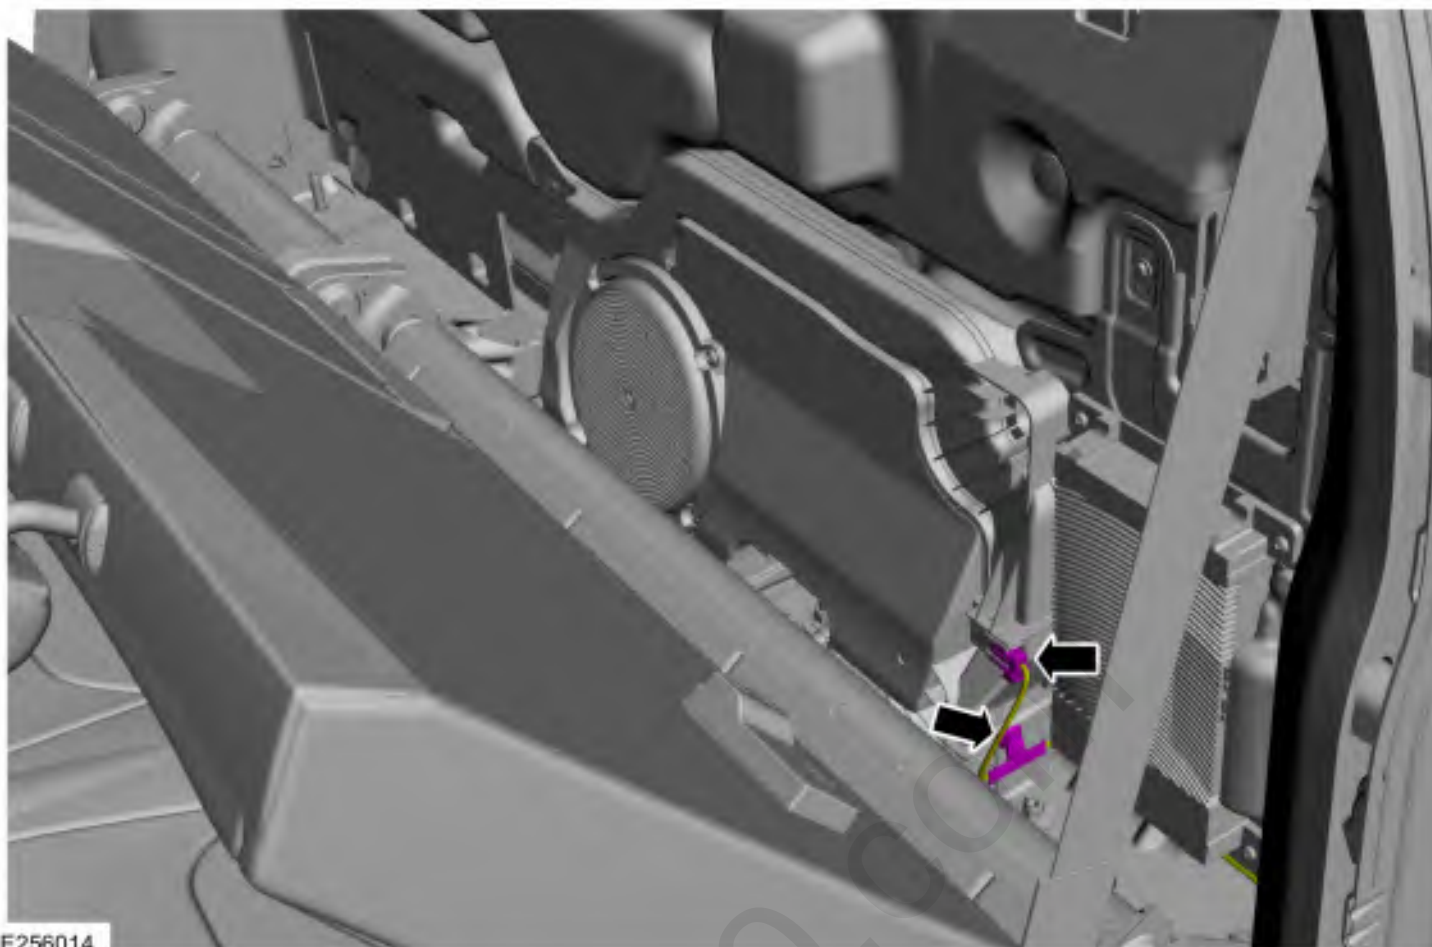

4. Remove the upper subwoofer bolt.
Torque: 62 lb.in (7 Nm)

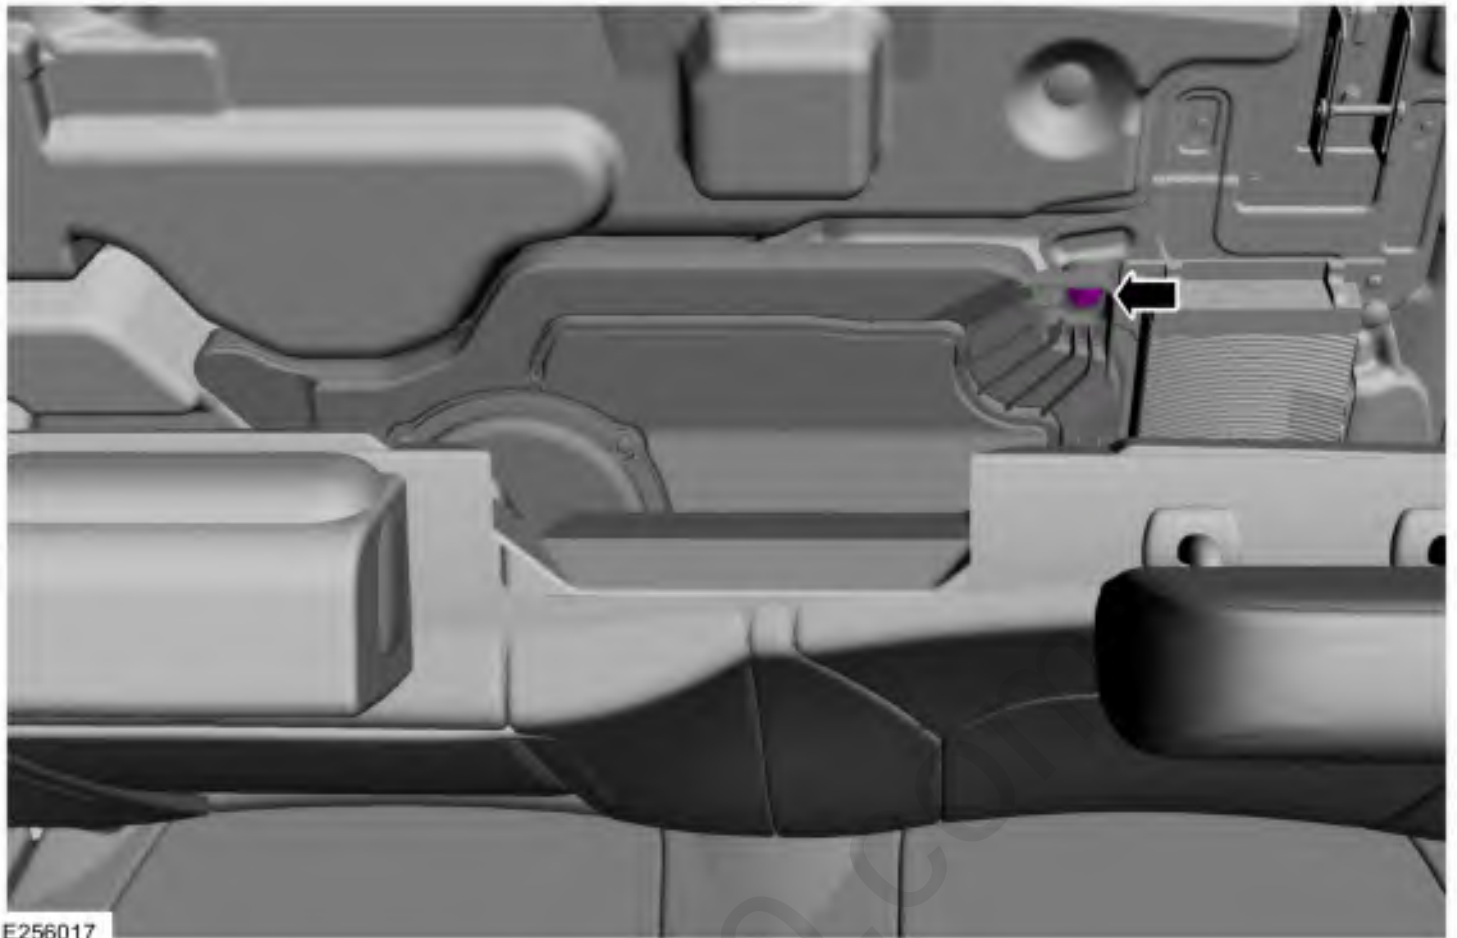

5. Remove the nuts and the subwoofer.
Torque: 62 lb.in (7 Nm)

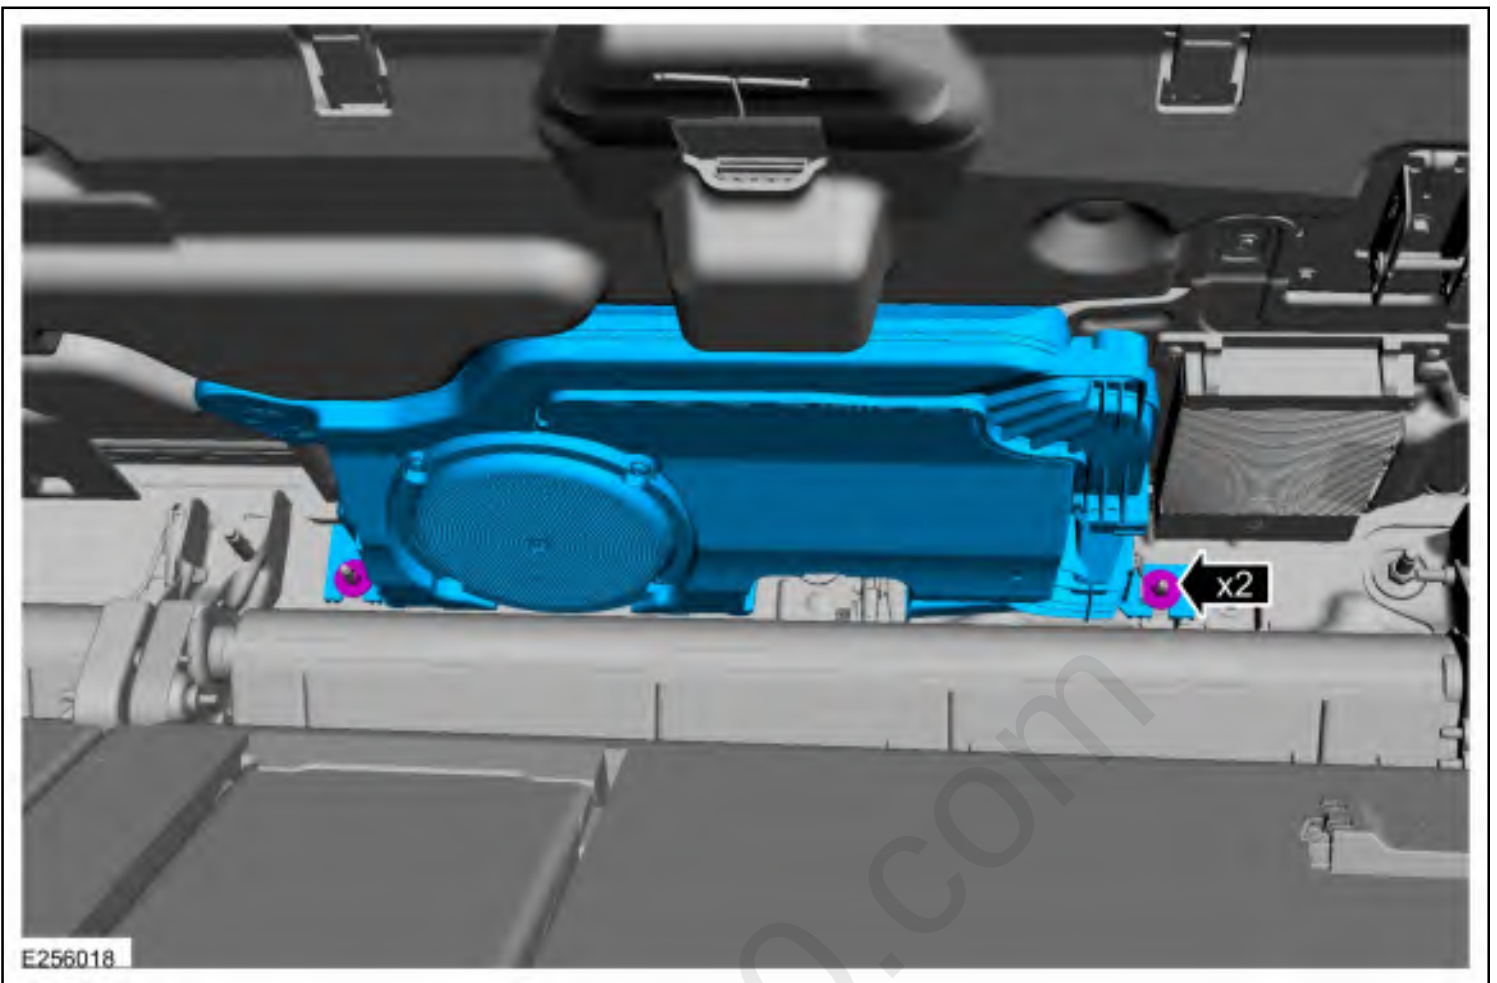


KICKER® subwoofer

6. **NOTE:** *SuperCab equipped vehicles*

NOTE: *The striker should be in its lowest position for the latch to engage.*

Lower the LH seat backrest.

1. Pull the backrest release strap and release the latch from the striker.
2. Lower the backrest.

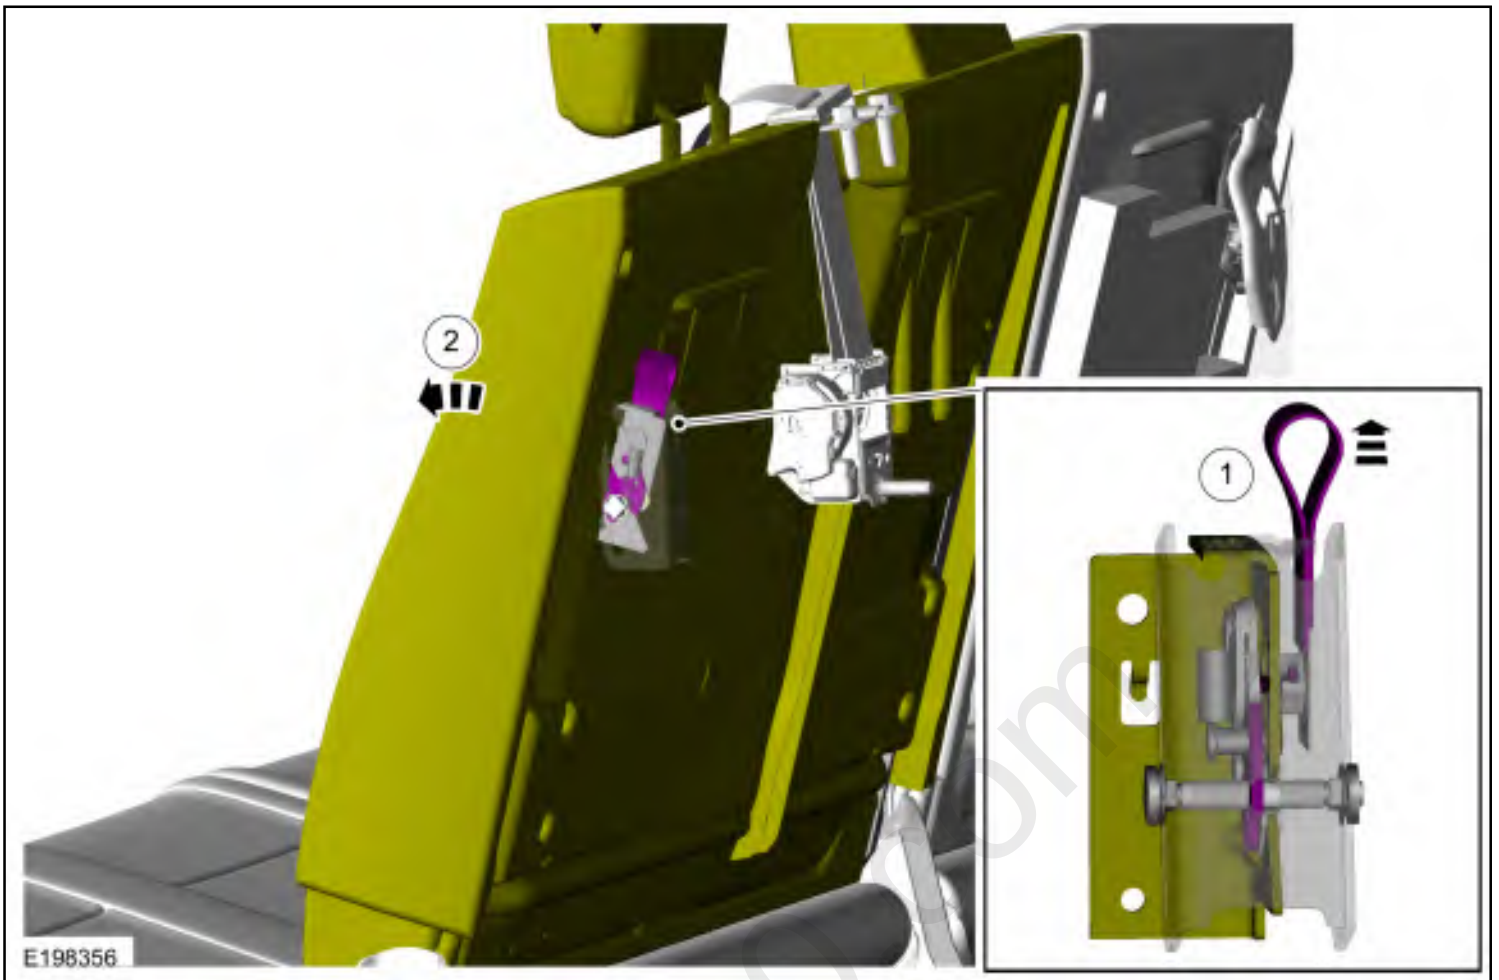


7. **NOTE:** *SuperCrew equipped vehicles*

NOTE: *The seat backrest latch is only accessible when the seat cushion is raised.*


NOTE: *The striker should be in its lowest position for the latch to engage.*

Lower the LH rear seat backrest.

1. Raise the seat cushion.
2. Release the backrest latch.
3. Lower the backrest down.

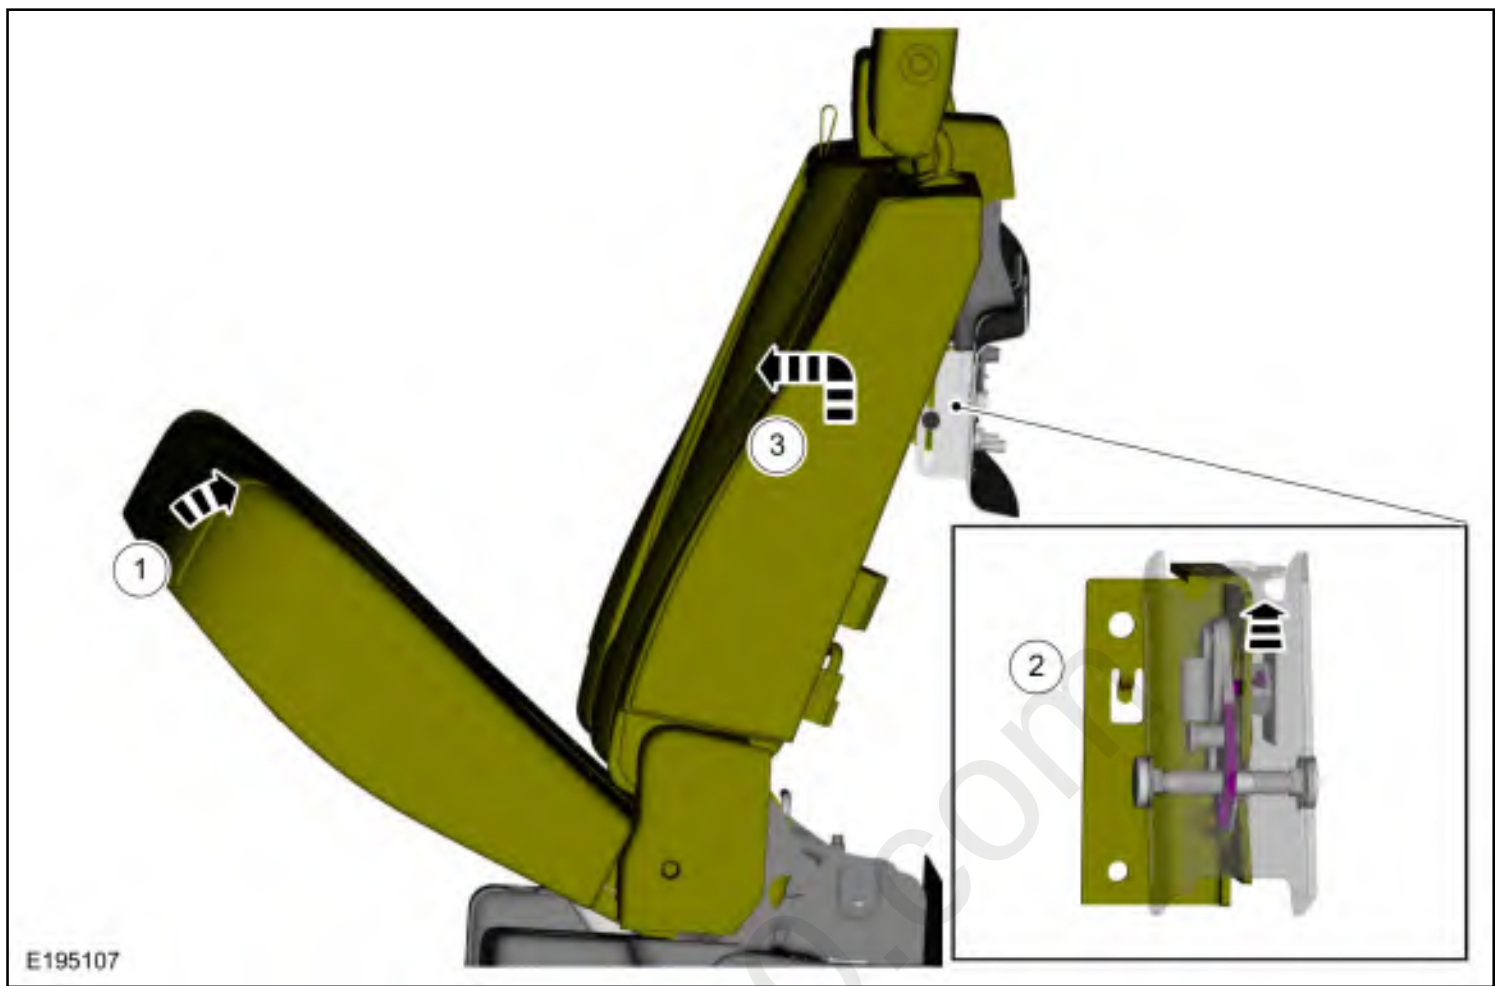


1. Disconnect the electrical connector.
2. Remove the bolts.
Torque: 46 lb.in (5.2 Nm)
3. Remove the bolts.
Torque: 46 lb.in (5.2 Nm)
4. Remove the nut and the subwoofer.
Torque: 62 lb.in (7 Nm)

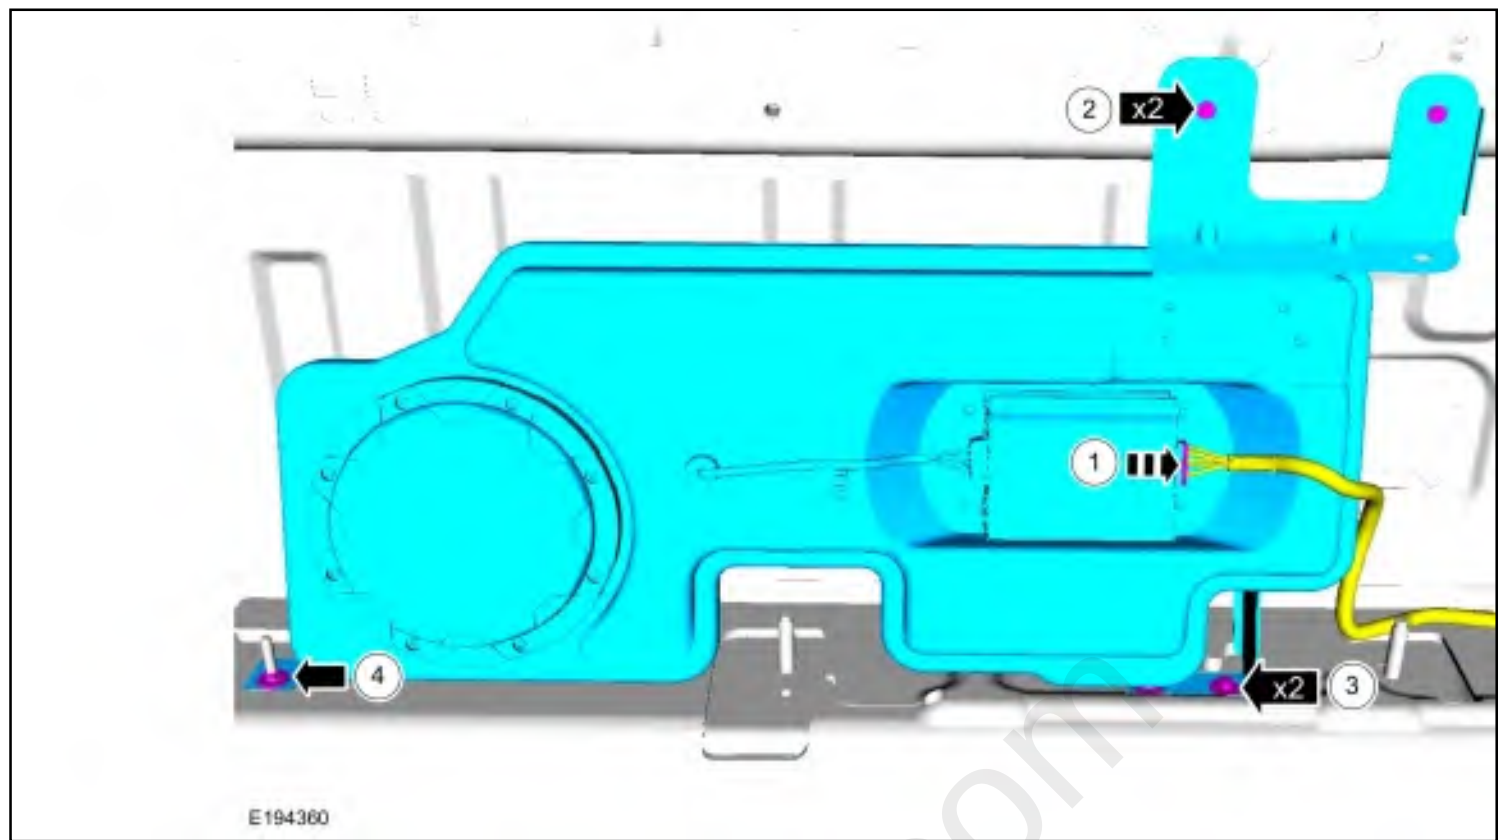

KICKER® amplifier

9. Remove the screws and the amplifier.
 - Disconnect the electrical connectors.

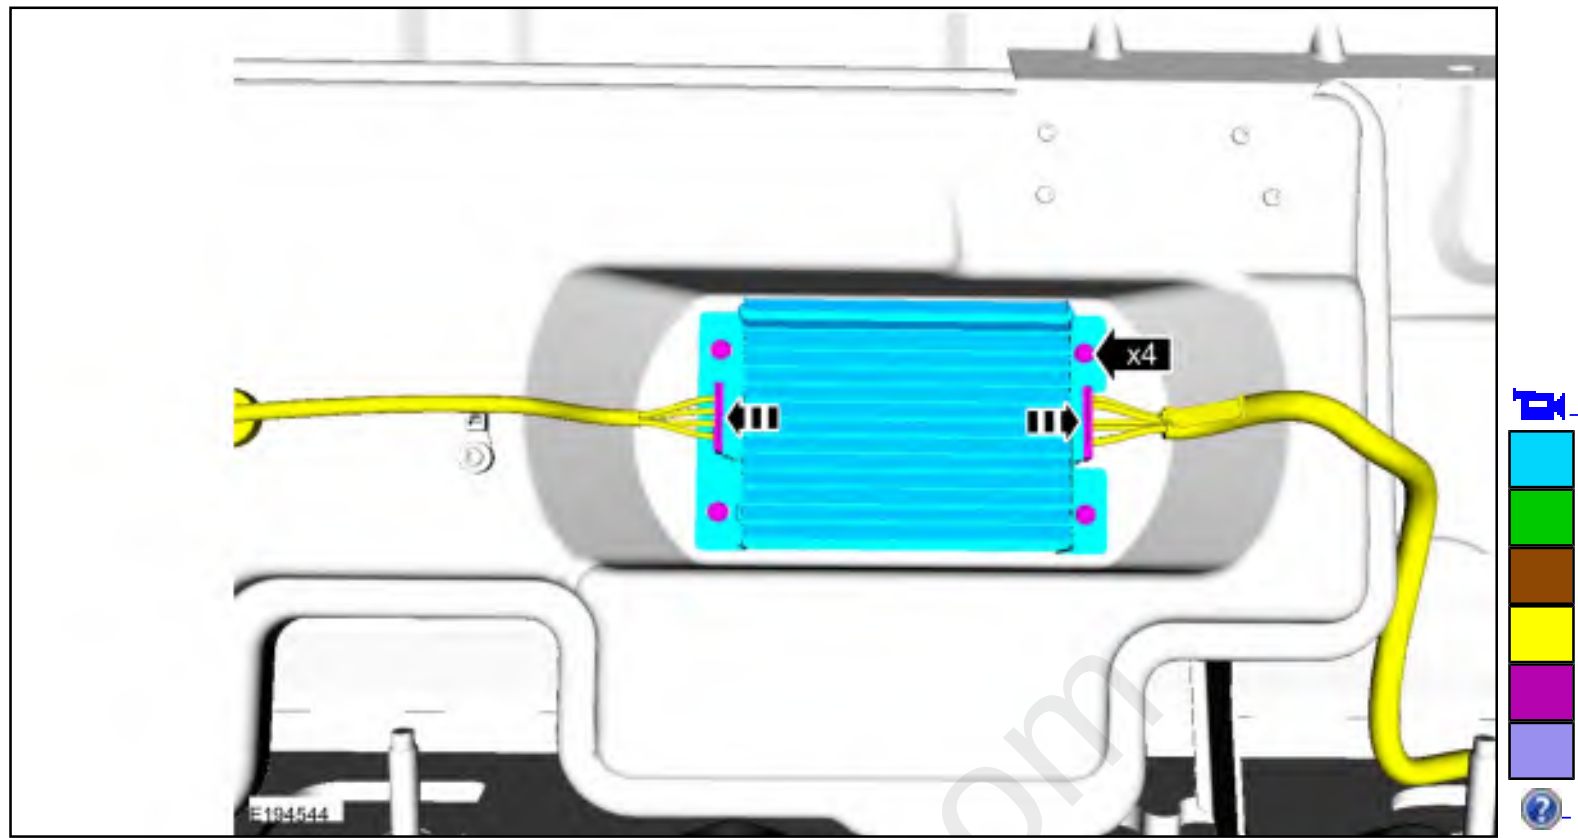

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company