


Rear Door Speaker LH

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the rear door trim panel.
Refer to: [Rear Door Trim Panel - SuperCab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: [Rear Door Trim Panel - SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the bolts and the door speaker.
 - Disconnect the electrical connector.
Torque: 22 lb.in (2.5 Nm)

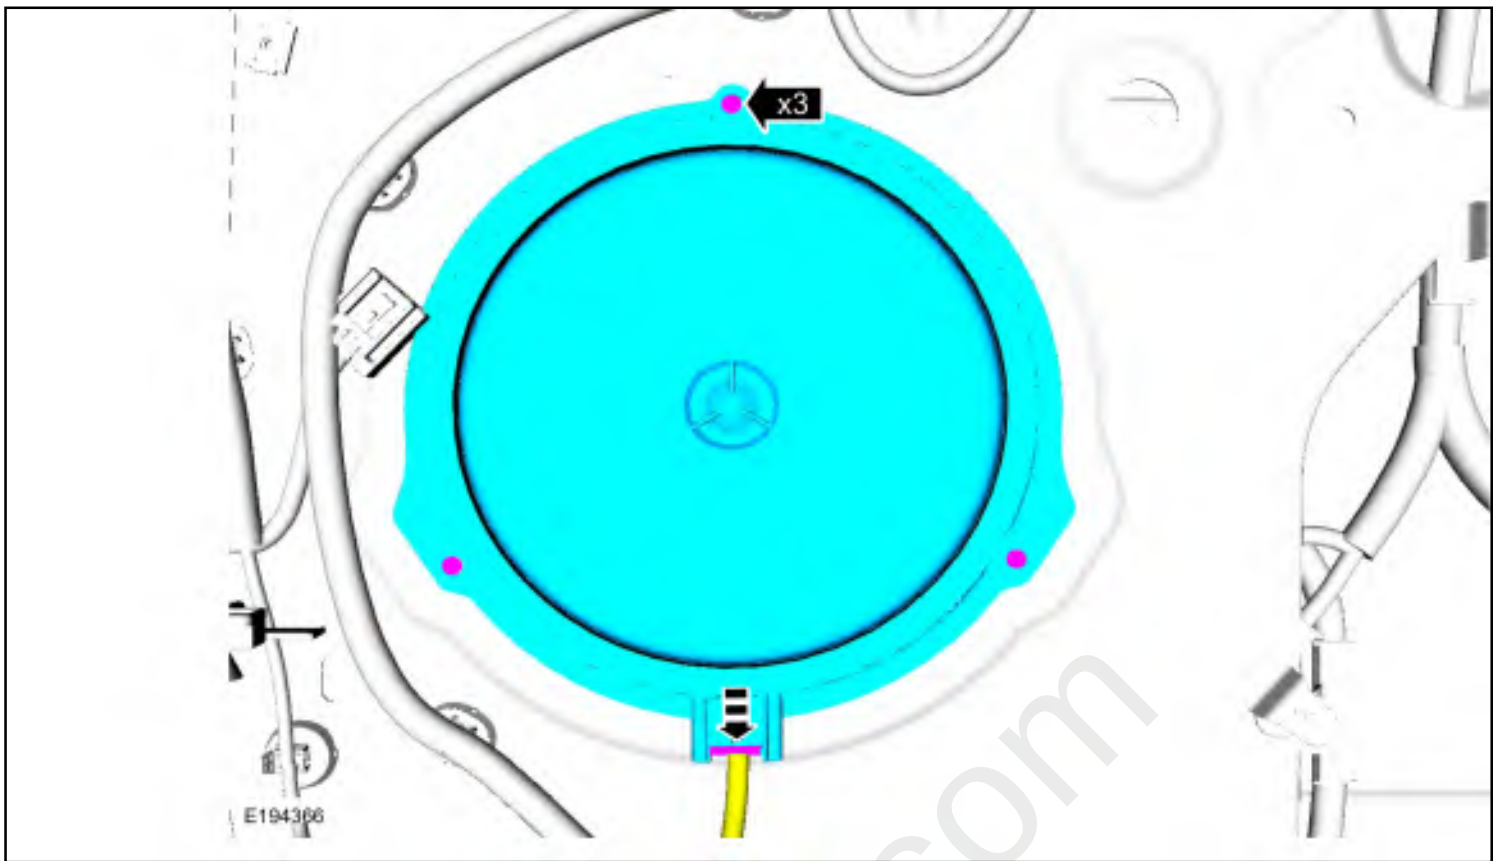

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
