


Front Door Speaker RH

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the front door trim panel.
Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the bolts and the door speaker.
 - Disconnect the electrical connector.
Torque: 13 lb.in (1.5 Nm)

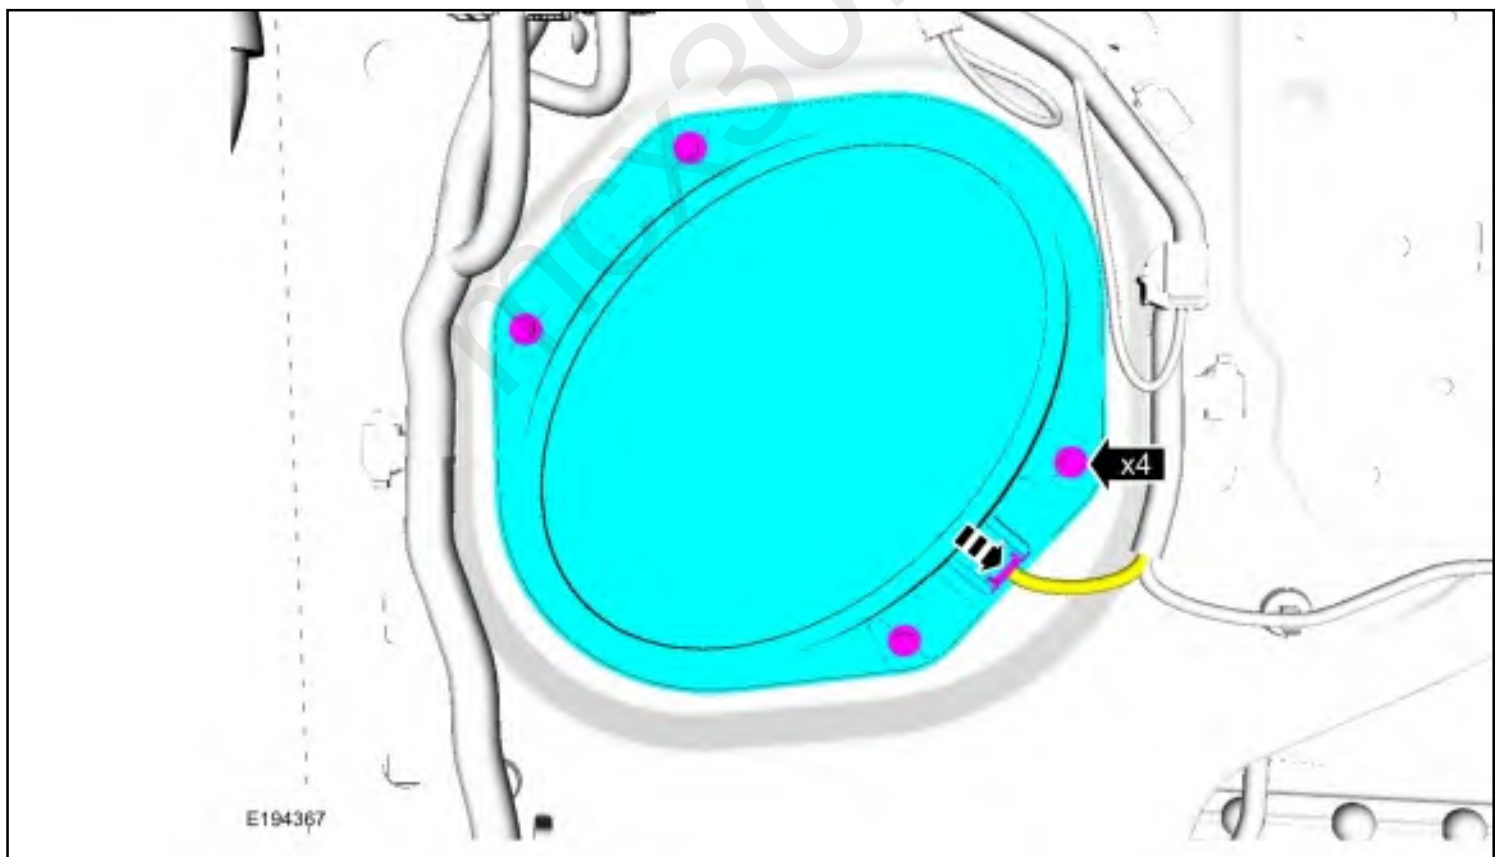

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

mcx30.com