

Front Control/Display Interface Module (FCDIM)


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.

Using a diagnostic scan tool, begin the PMI process for the FCDIM following the on-screen instructions.

2. Remove the FCIM.
Refer to: [Front Controls Interface Module \(FCIM\)](#) (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC Without Touchscreen, Removal and Installation).
3. Remove the bolts and the FCDIM.
 - Disconnect the electrical connector.
Torque: 22 lb.in (2.5 Nm)

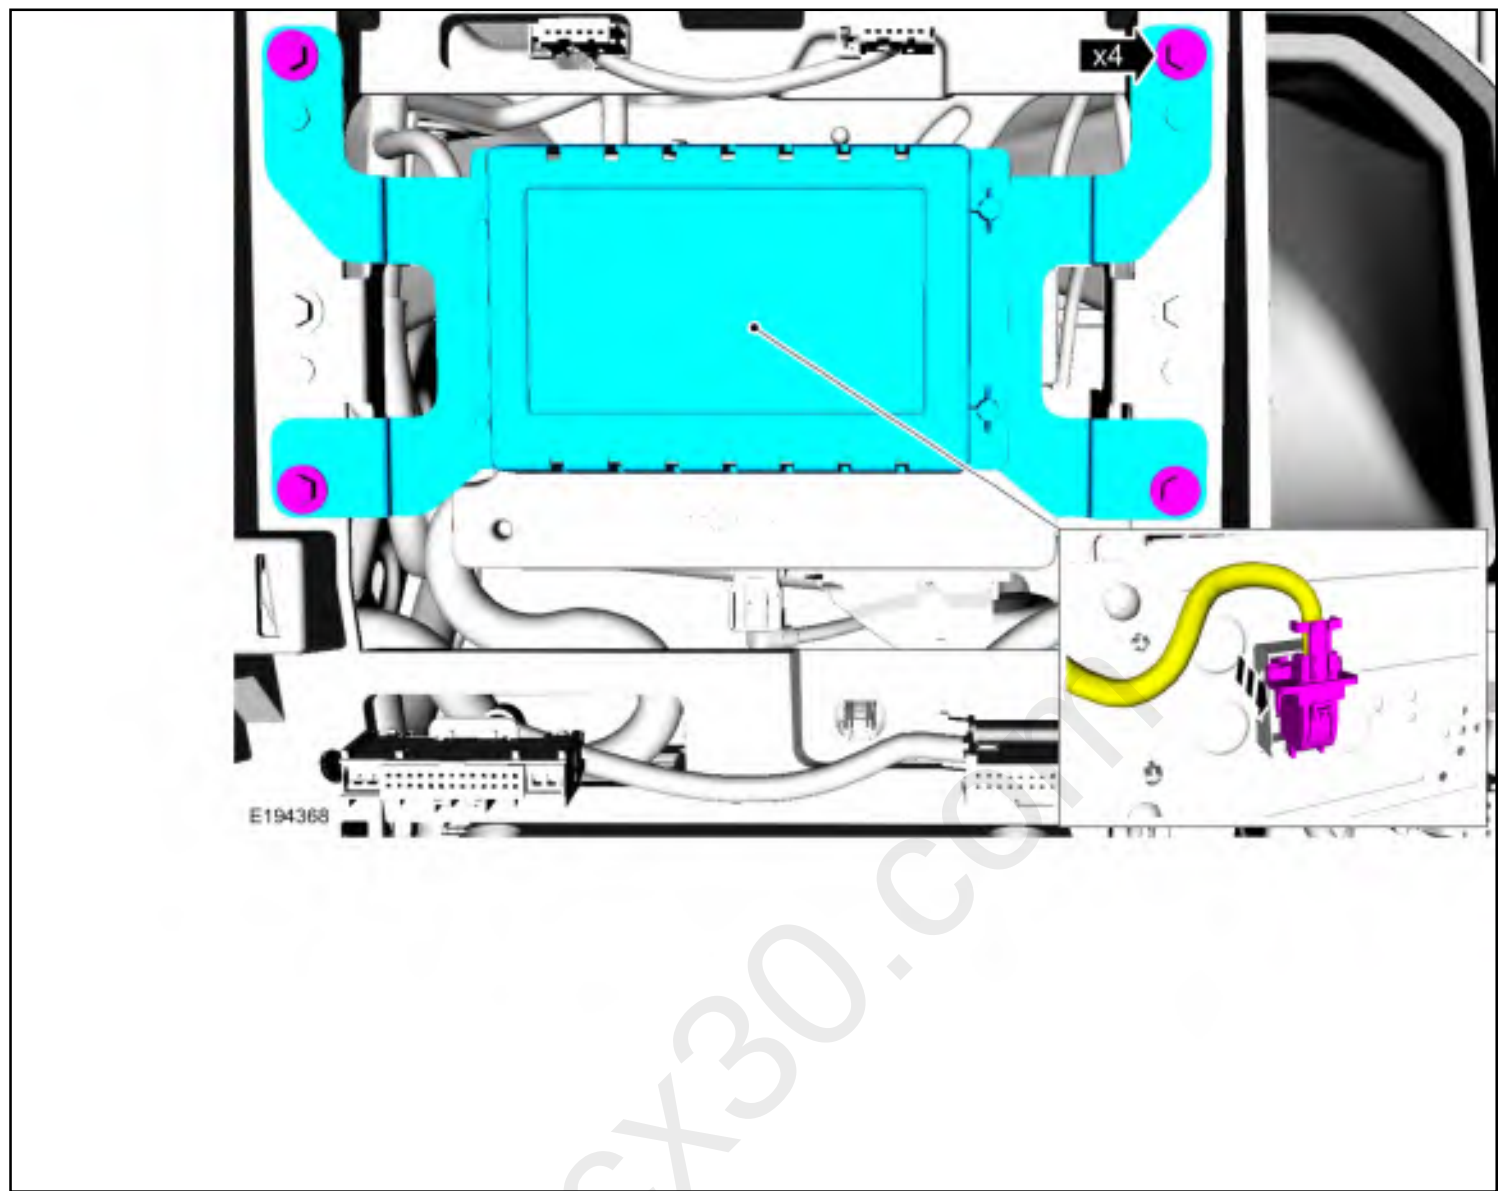

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary if replacing the component.*

Using a diagnostic scan tool, complete the PMI process for the FCDIM following the on-screen instructions.