

Audio Input Jack

Special Tool(s) / General Equipment

Interior Trim Remover


Removal

Vehicles with floor console

1. Open the floor console storage bin door.




1. Remove the bezel.
Use the General Equipment: Interior Trim Remover
2. Disconnect the electrical connector.
3. Remove the audio input jack.

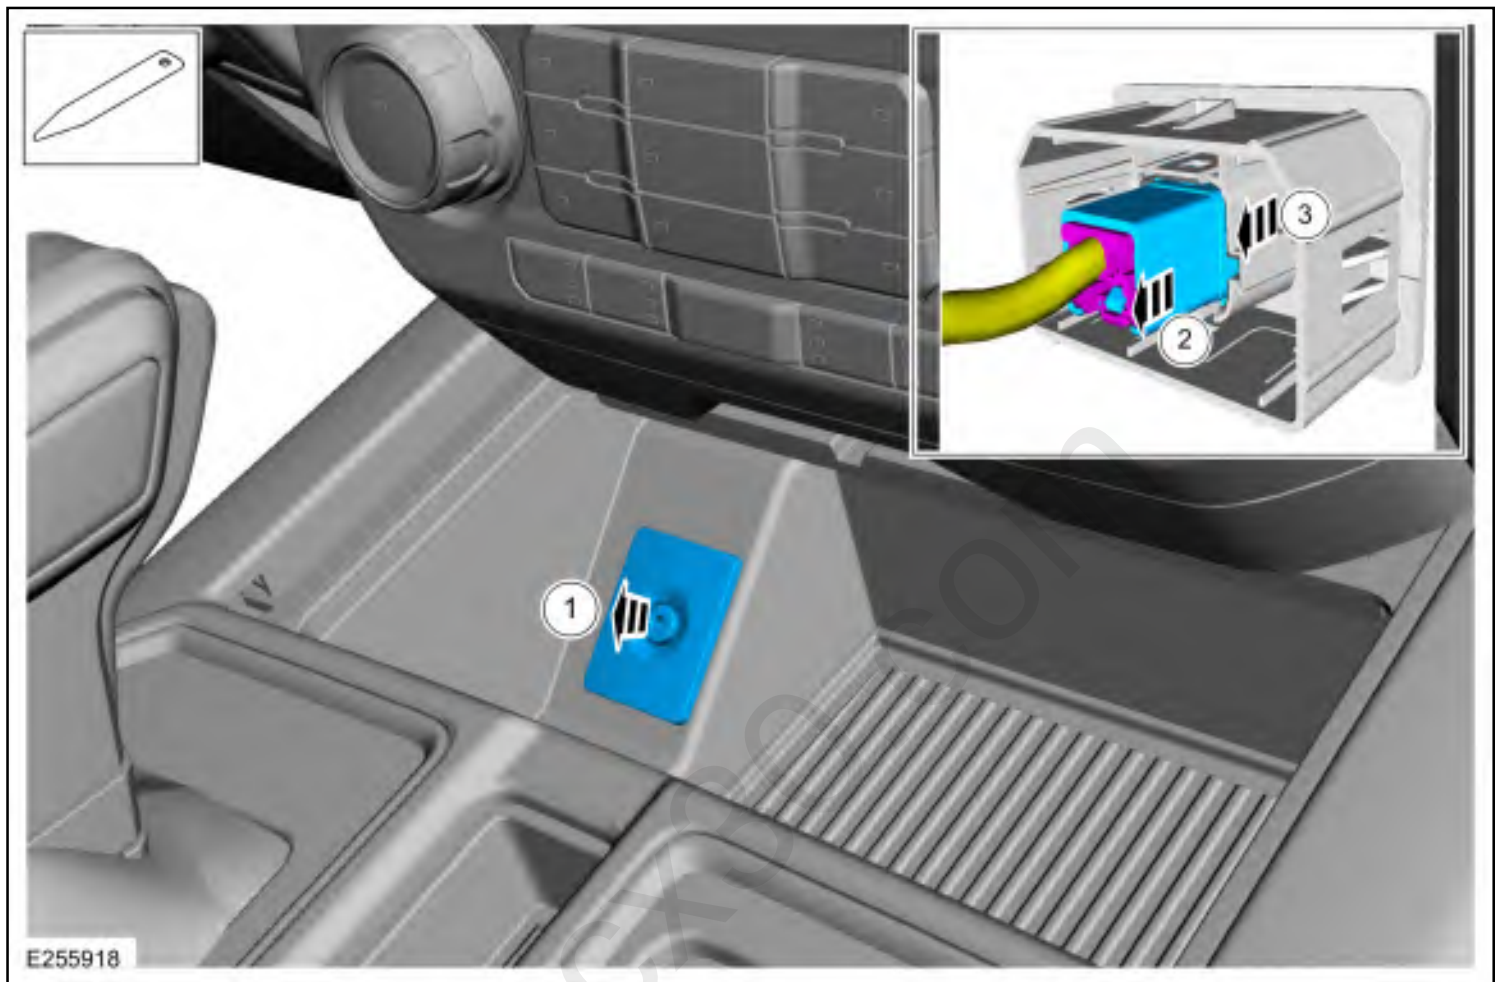

Vehicles with out floor console

1. Remove the bezel.
Use the General Equipment: Interior Trim Remover
2. Disconnect the electrical connector.
3. Remove the audio input jack.

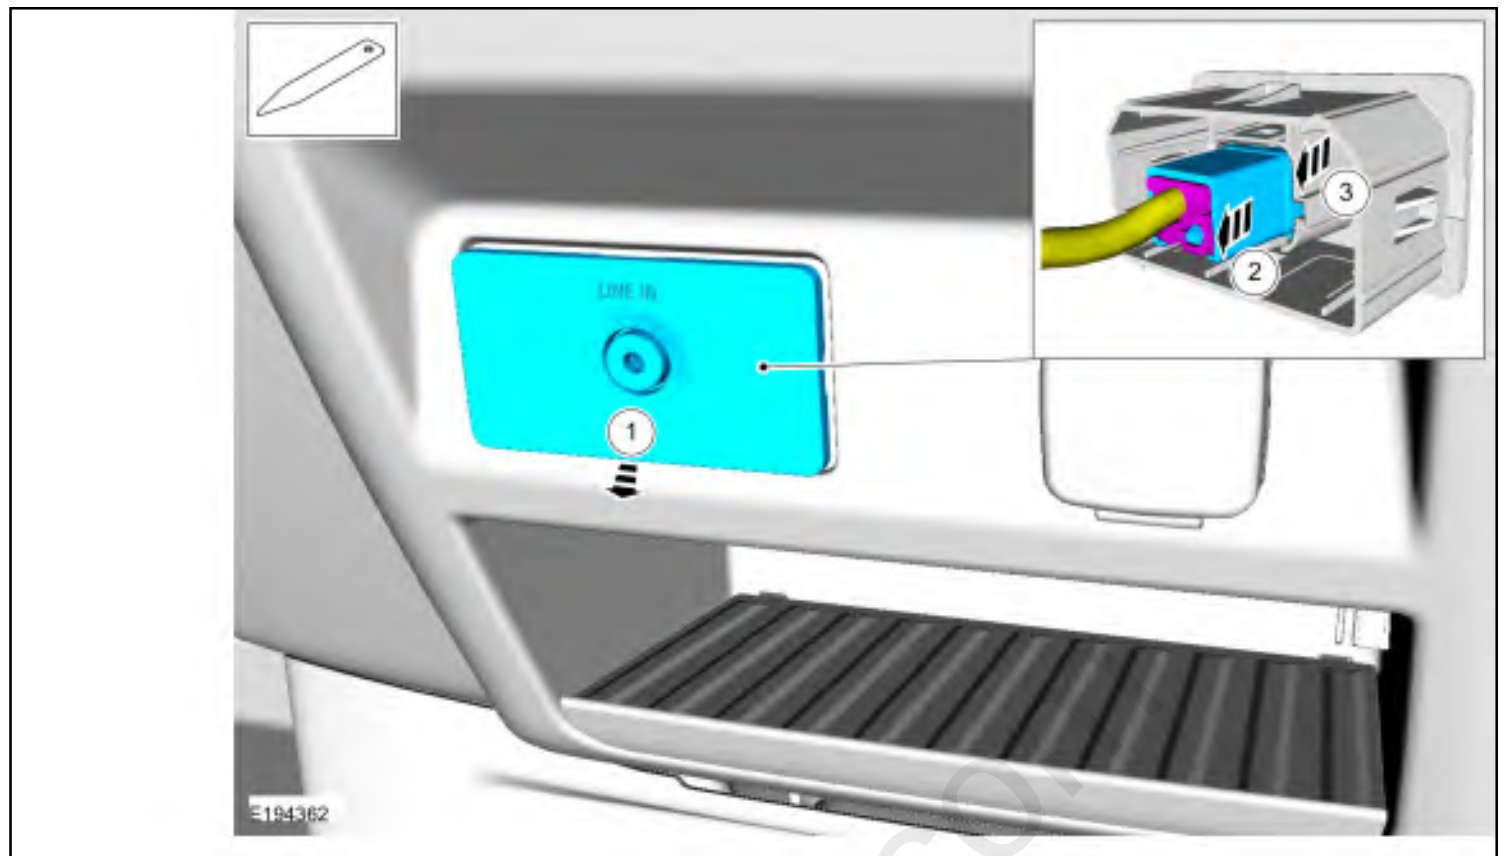

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company