


Front Control/Display Interface Module (FCDIM)

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the APIM.
Refer to: SYNC Module [APIM] (415-00B) .
2. Disconnect and remove the LVDS cable.

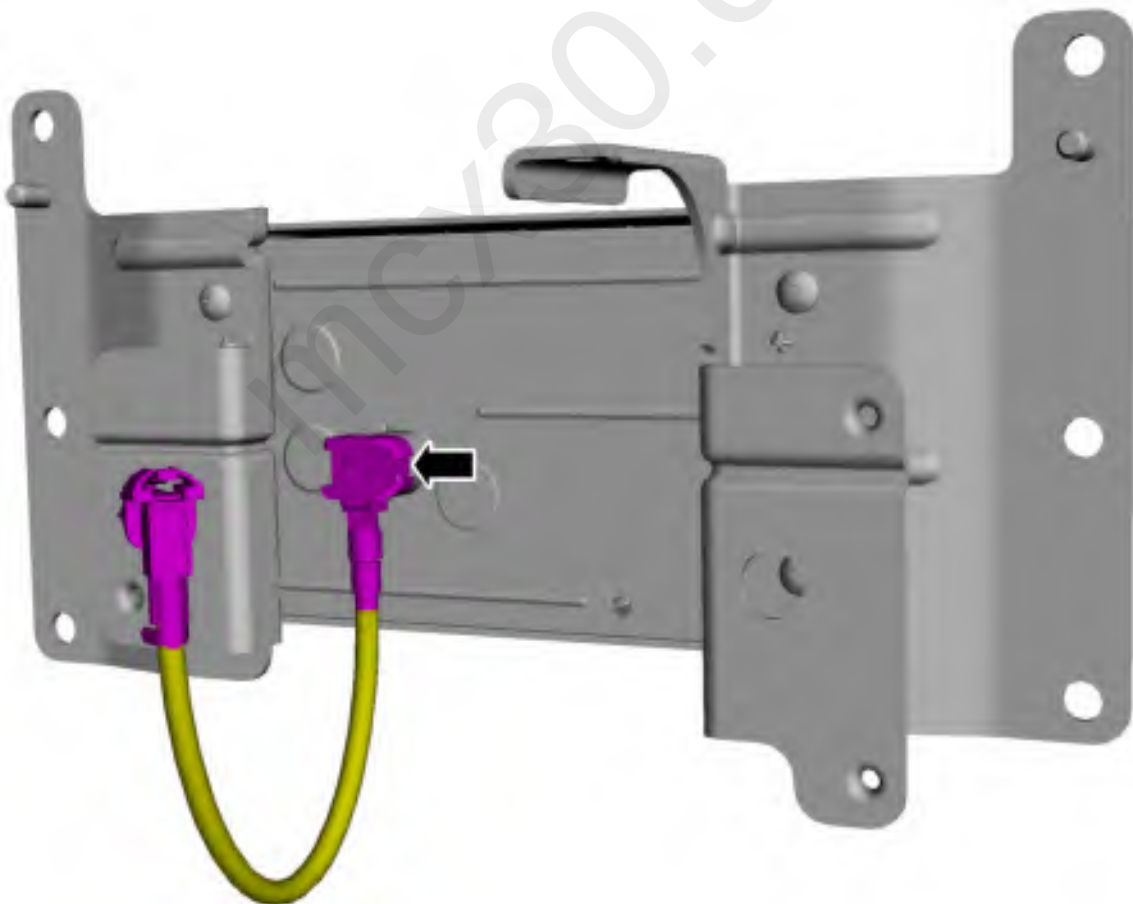

E258821



3. Remove the screws and FCDIM from the brackets.
Torque: 22 lb.in (2.5 Nm)

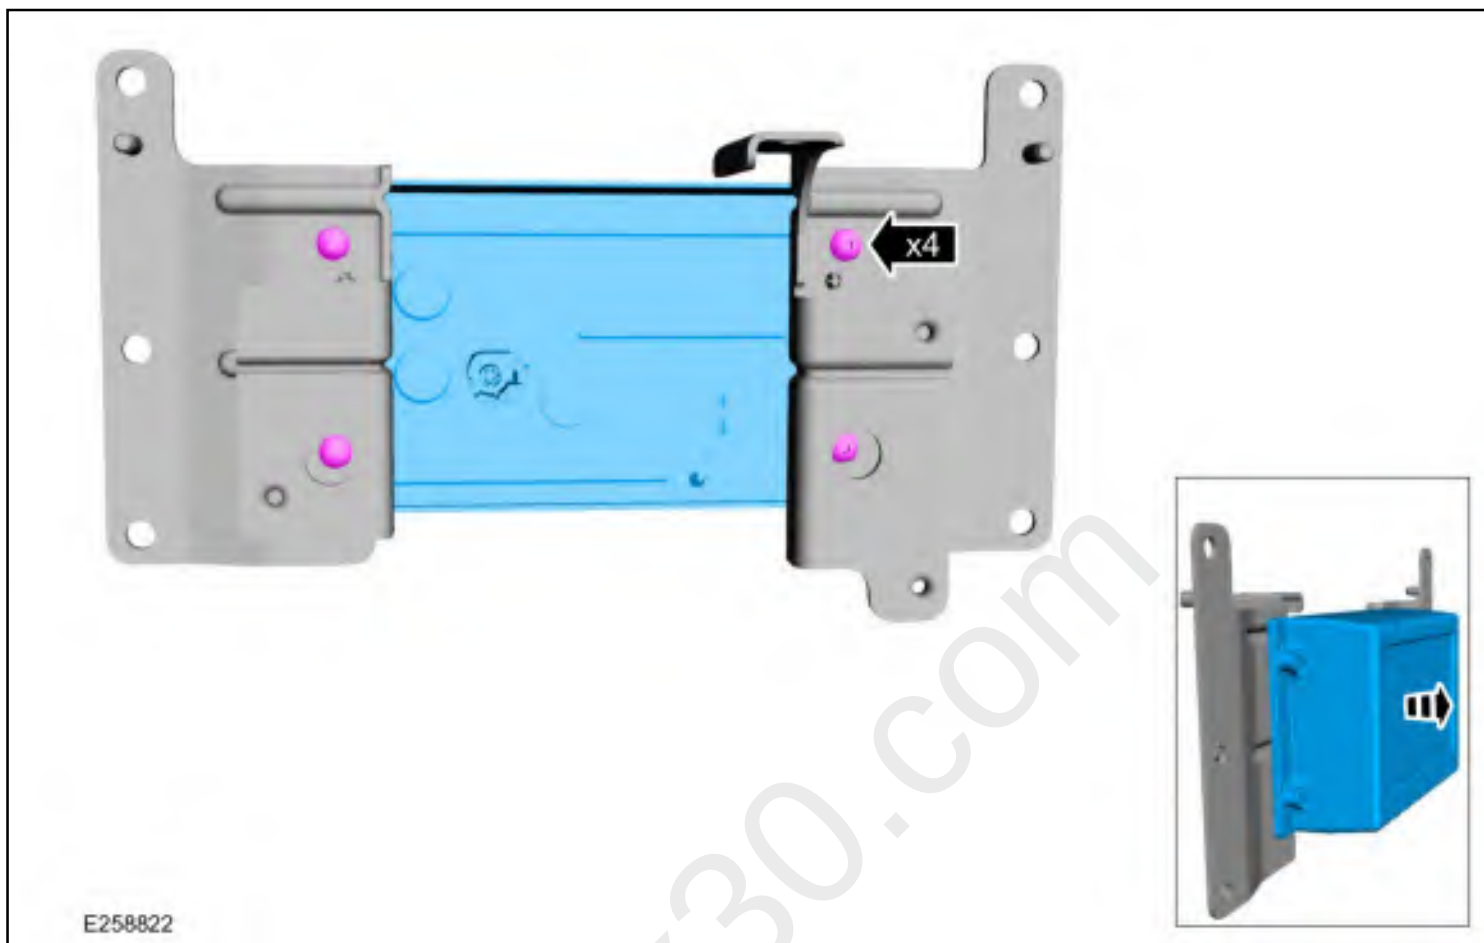

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company