
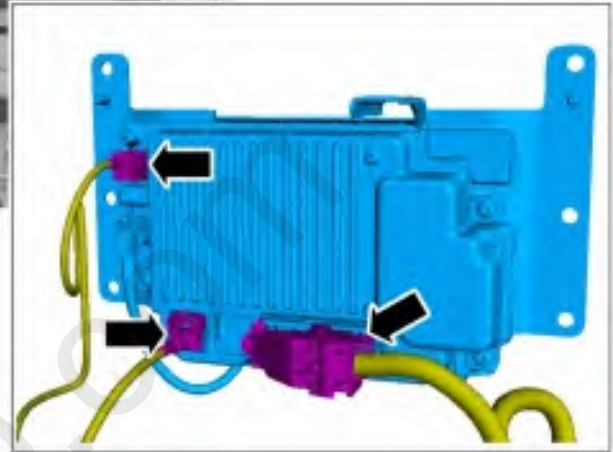


SYNC Module [APIM]

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the FCIM.
Refer to: [Front Controls Interface Module \(FCIM\)](#) (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC Without Touchscreen, Removal and Installation).
2. Remove the bolts and the FCDIM/ APIM as an assembly.
 - Disconnect the electrical connectors.
Torque: 22 lb.in (2.5 Nm)

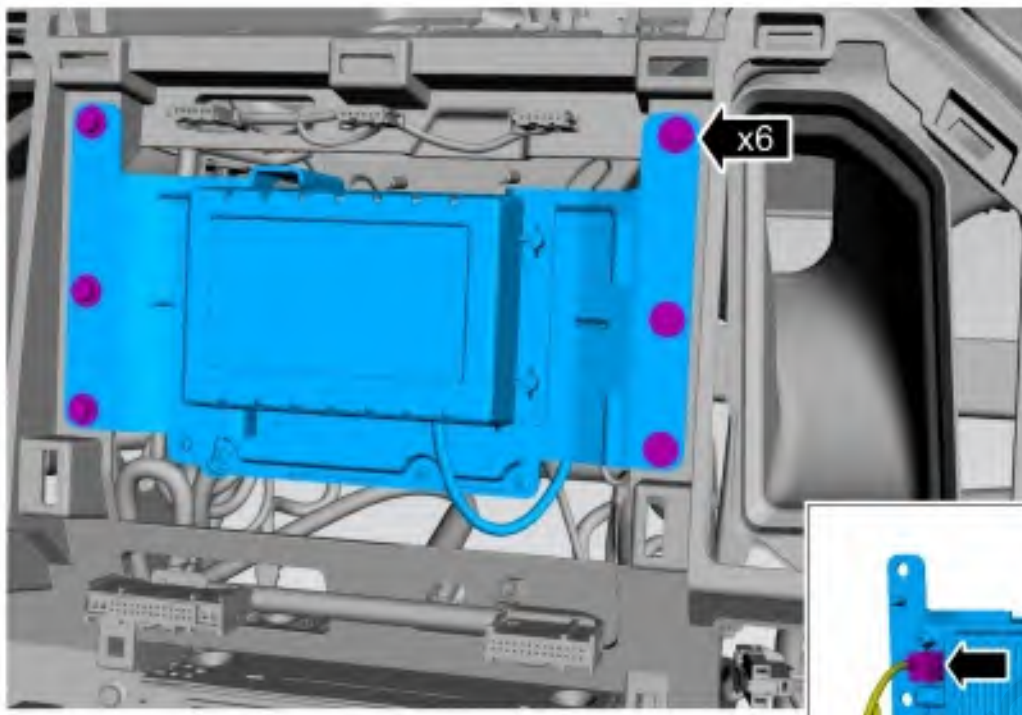


E258832




3. Disconnect the LVDS cable connector.

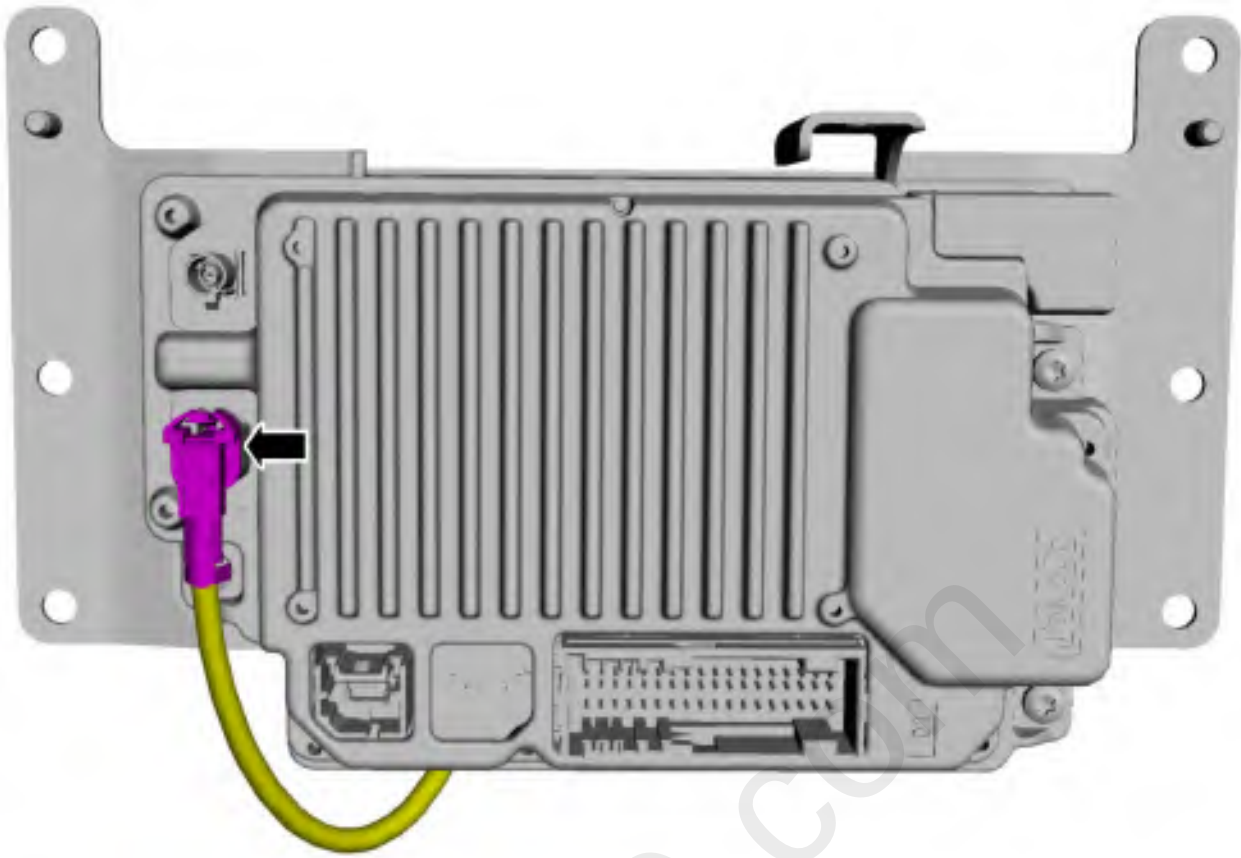

4. Remove the screws and the APIM.

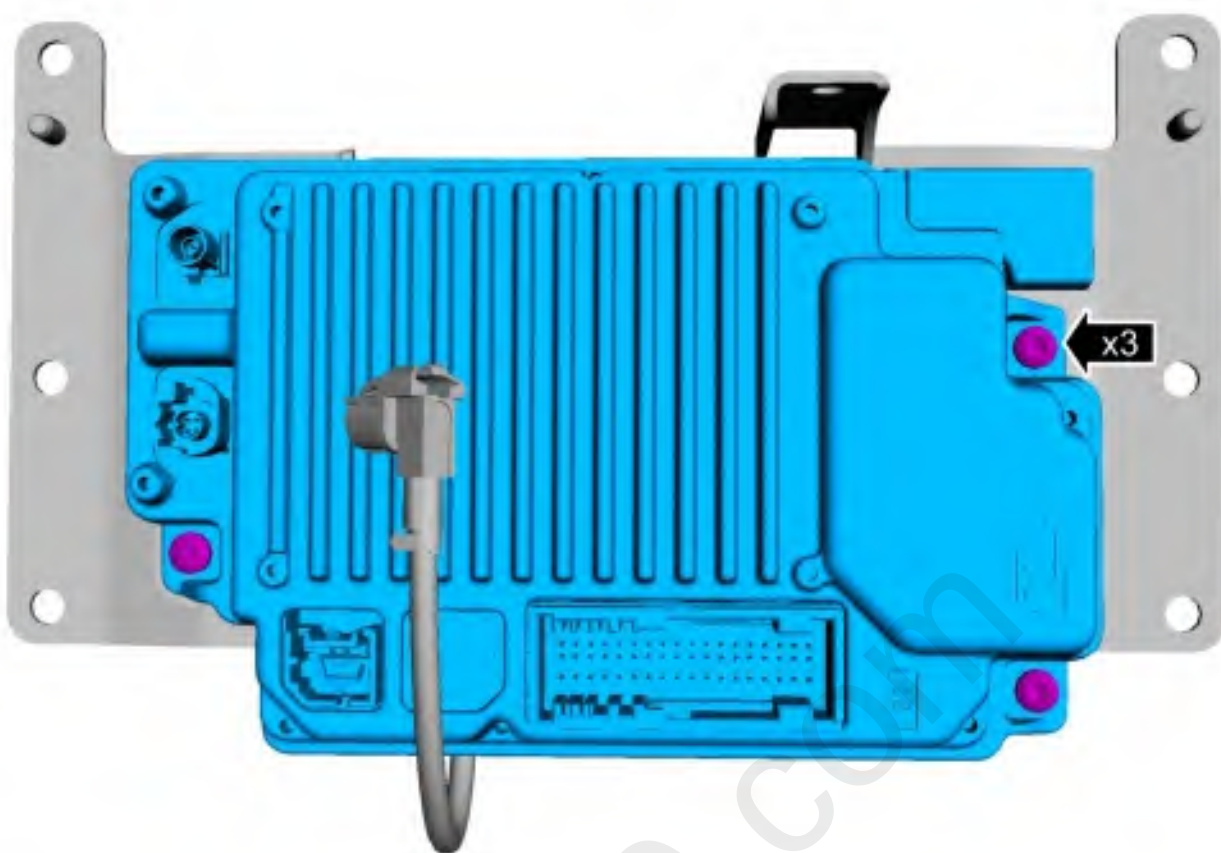

E258834

 

Installation

1. To install, reverse the removal procedure.
2. If a new APIM is being installed, program the APIM to the correct software level.
Refer to: [SYNC Module \[APIM\] Programming](#) (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC Without Touchscreen, General Procedures).

Copyright © 2018 Ford Motor Company