

Telematics Control Unit (TCU) Module

Removal

NOTE: Removal steps in this procedure may contain installation details.


All vehicles

NOTE: If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.

1. Using a diagnostic scan tool, begin the PMI process for the TCU following the on-screen instructions.


Regular Cab

2. Remove the RH lower B-pillar trim panel.
Refer to: [B-Pillar Trim Panel - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Remove the bolts and the TCU.
 - Disconnect the electrical connectors.
Torque: 40 lb.in (4.5 Nm)

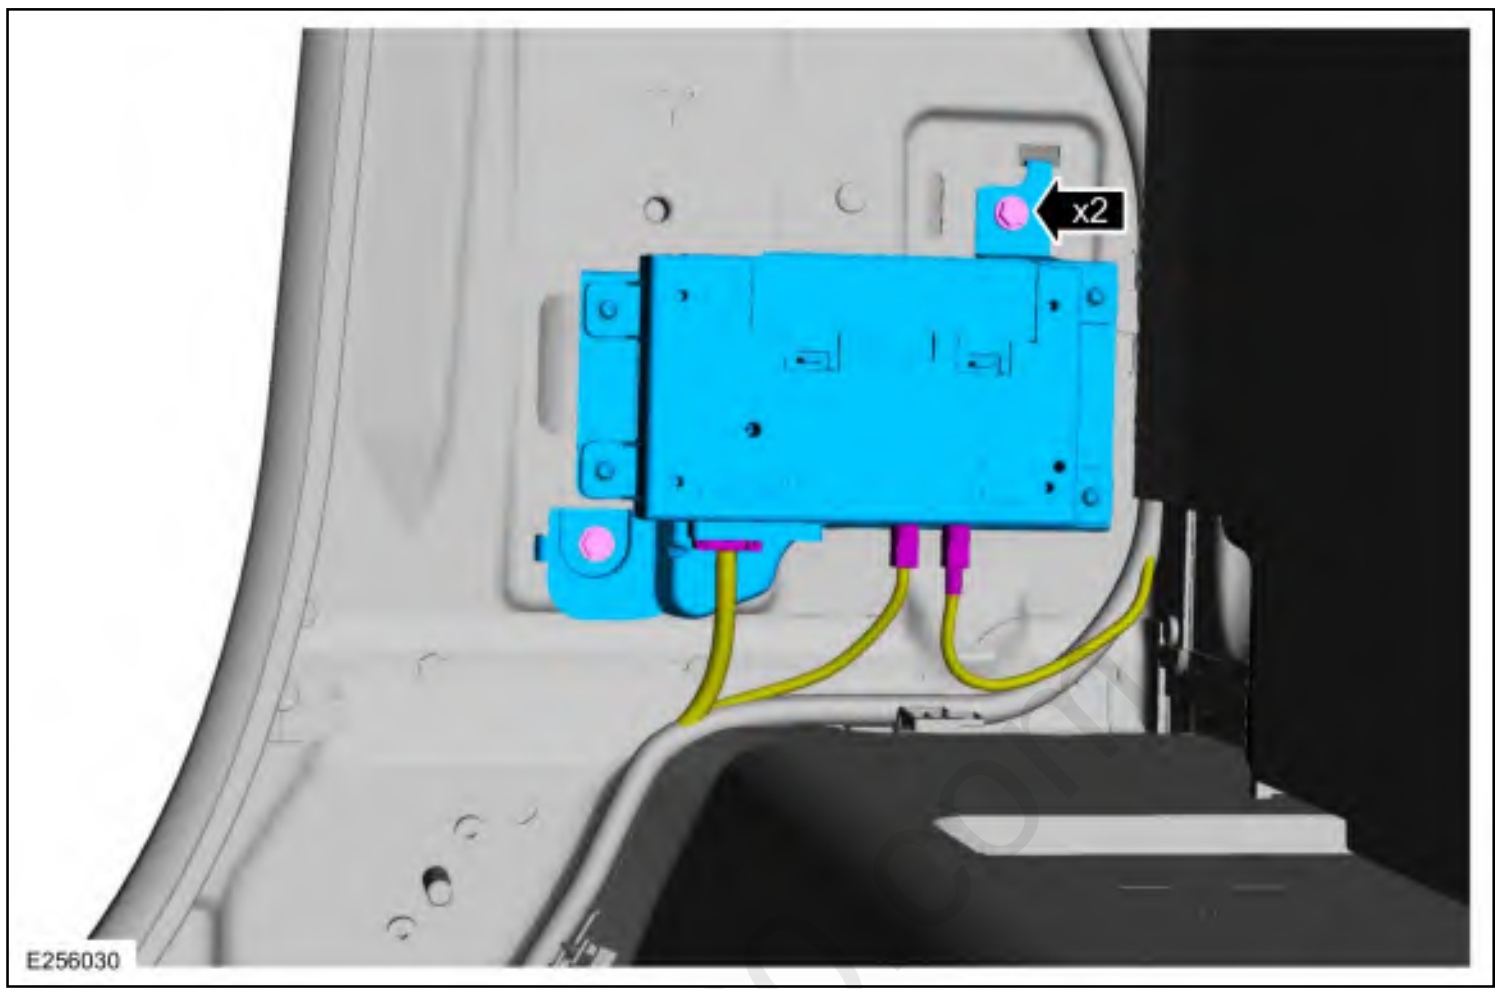

Crew Cab/Super Cab

4. Remove the loadspace trim panel.
Refer to: [Loadspace Trim Panel - SuperCab/SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
5. Remove the bolts and the TCU.
 - Disconnect the electrical connectors.
Torque: 40 lb.in (4.5 Nm)

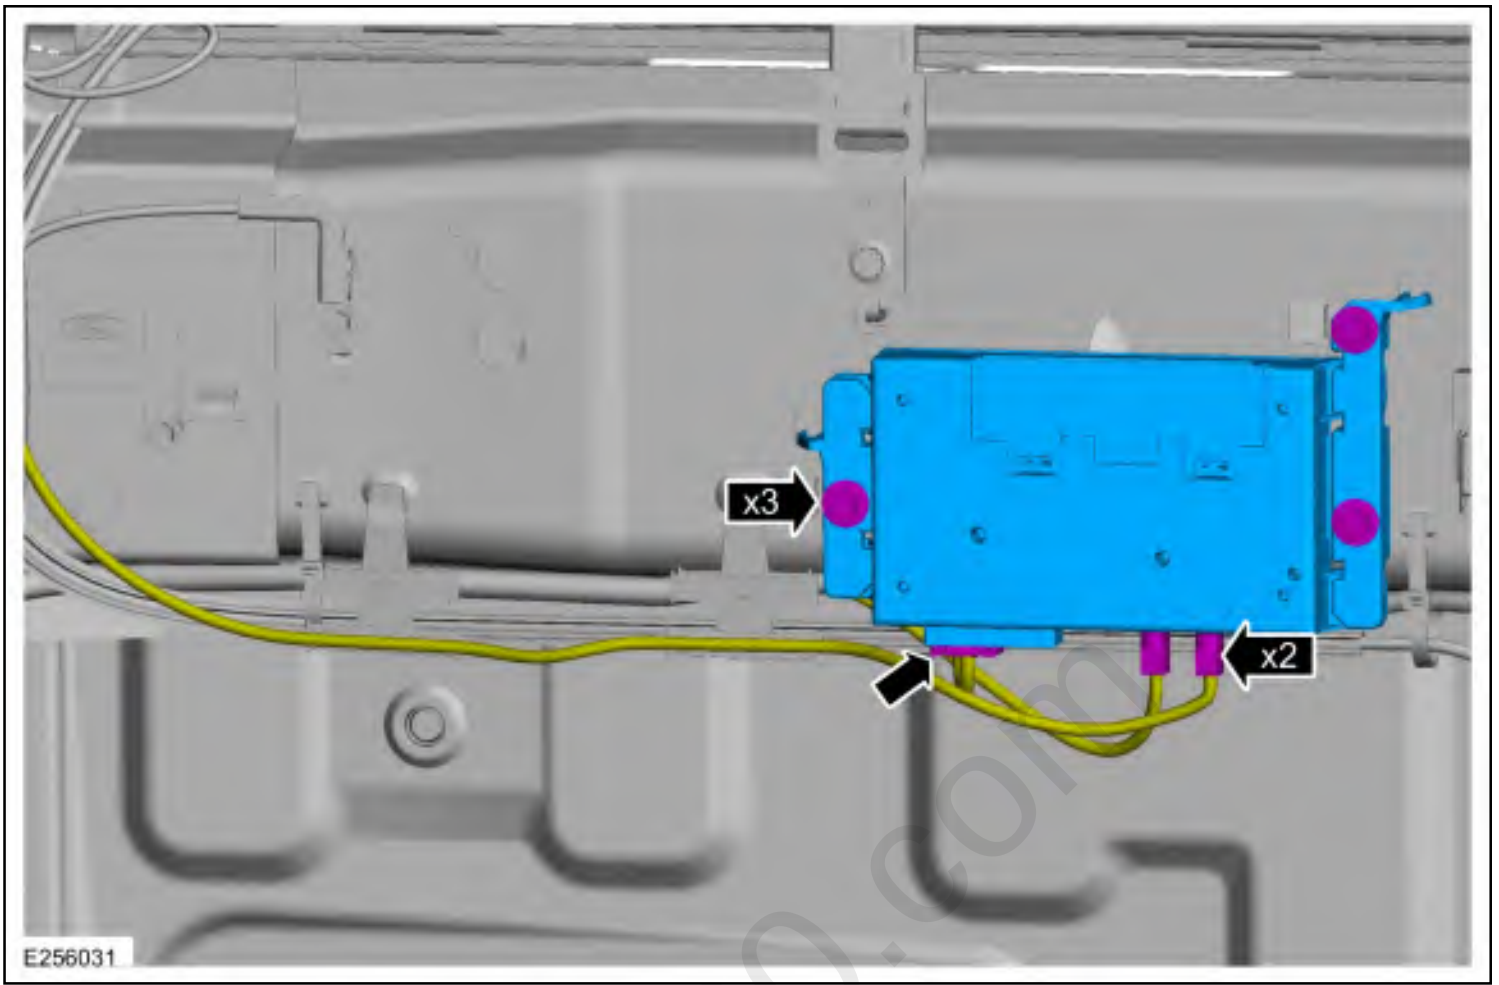

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *NOTE: This step is only necessary if replacing the TCU.*

Using a diagnostic scan tool, complete the PMI process for the TCU following the on-screen instructions.