


Front Display Interface Module (FDIM)

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the FCIM.
Refer to: [Front Controls Interface Module \(FCIM\)](#) (415-00C Information and Entertainment System - General Information - Vehicles With: Touchscreen Display, Removal and Installation).
2. Remove the bolts and the FDIM.
 - Disconnect the electrical connectors.
Torque: 22 lb.in (2.5 Nm)

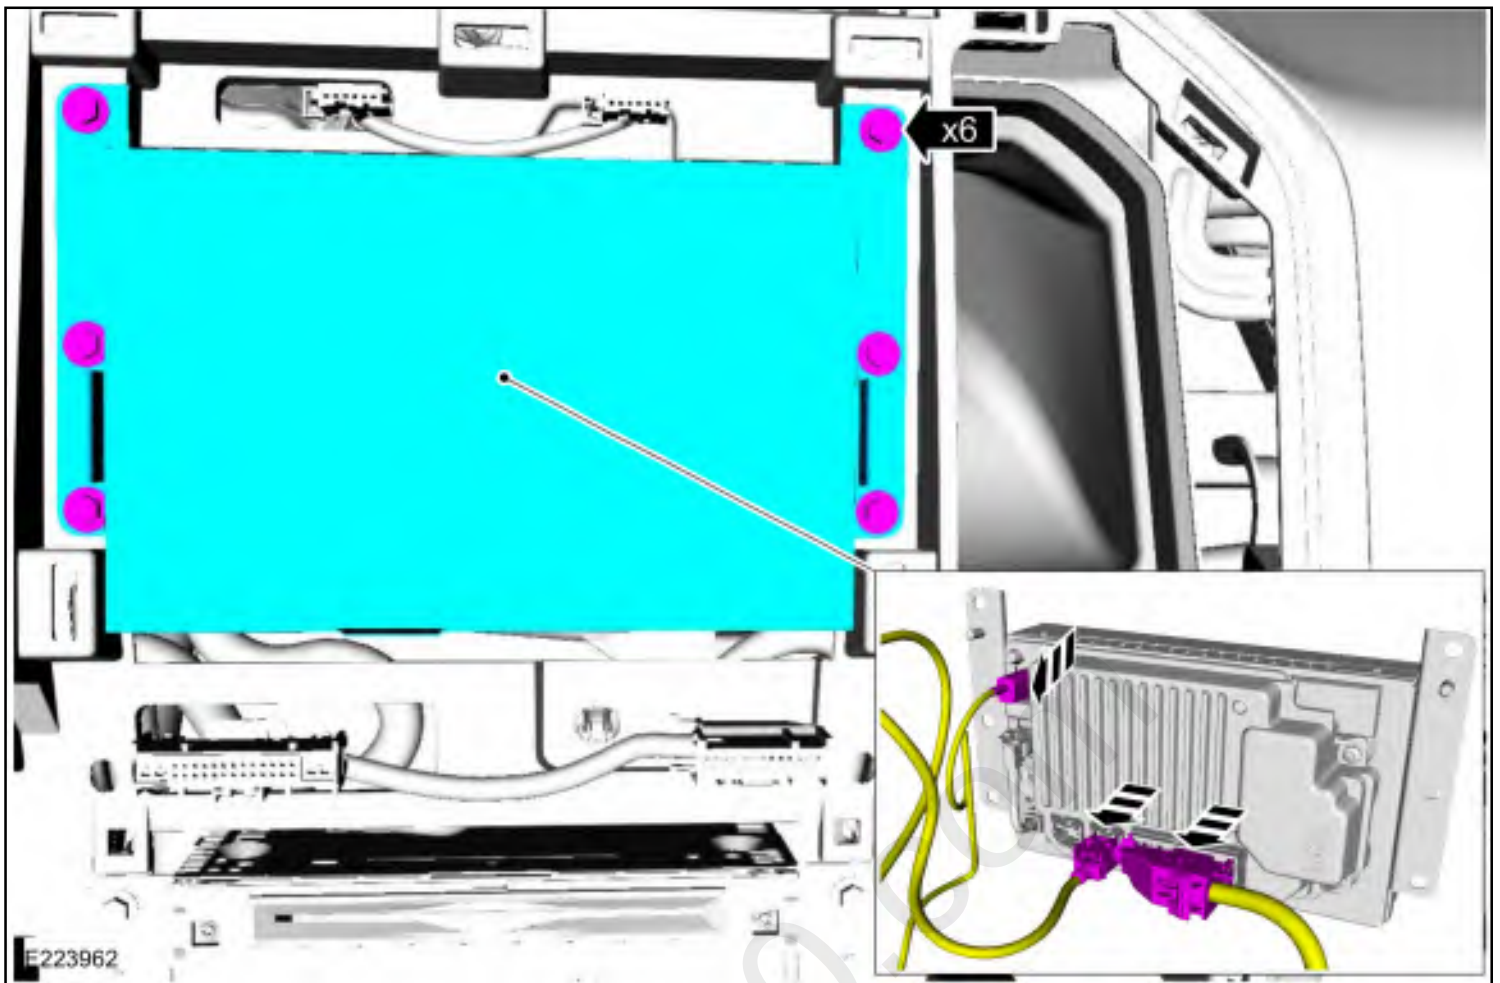

3. **NOTE:** *This step is only necessary if replacing the FDIM.*

Remove the screws, disconnect the electrical connector and separate the APIM from the FDIM.
Torque: 9 lb.in (1 Nm)

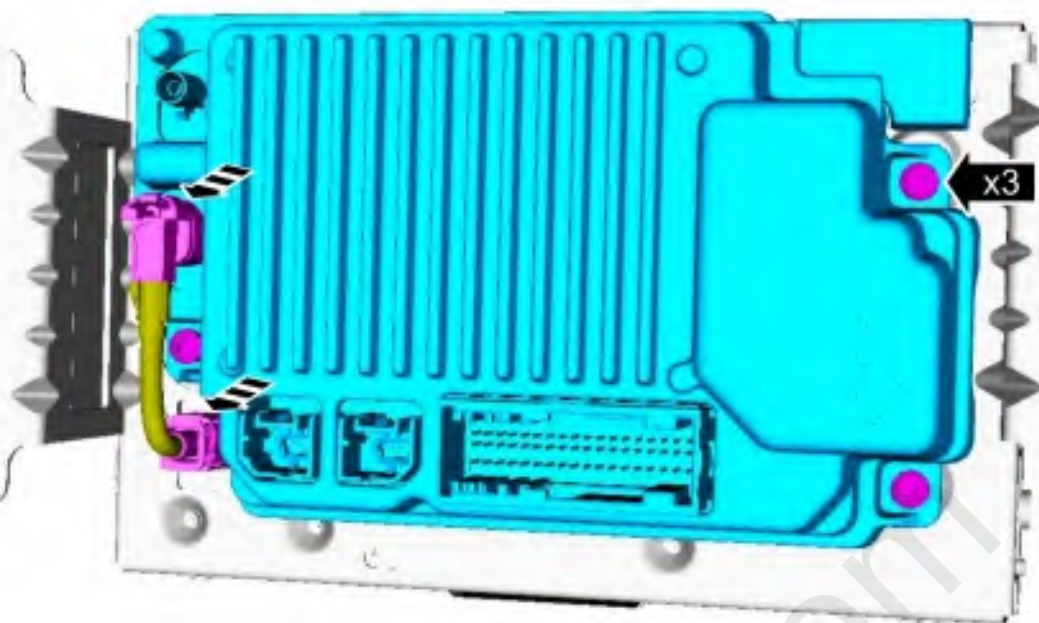

E213615



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company