

Universal Serial Bus (USB) Hub

Special Tool(s) / General Equipment

Interior Trim Remover


Removal

Vehicles with floor console

1. Open the floor console storage bin door.




2.
Remove the USB hub.
 - Disconnect the electrical connectors.
Use the General Equipment: Interior Trim Remover

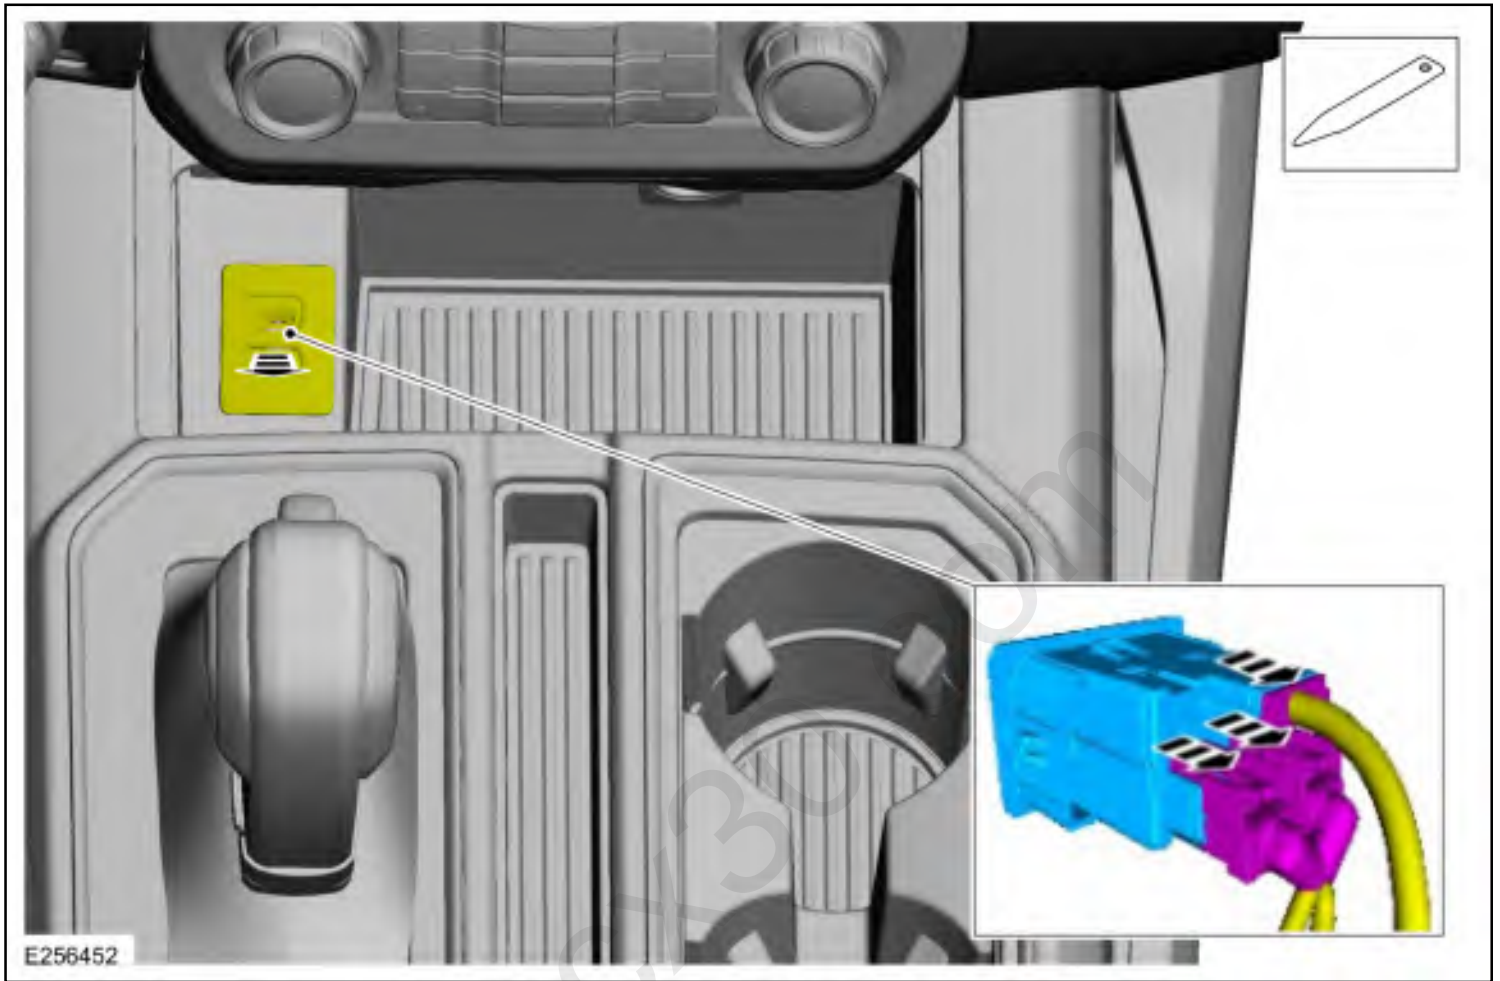

Vehicles without floor console

3.
Remove the USB hub.
 - Disconnect the electrical connectors.
Use the General Equipment: Interior Trim Remover

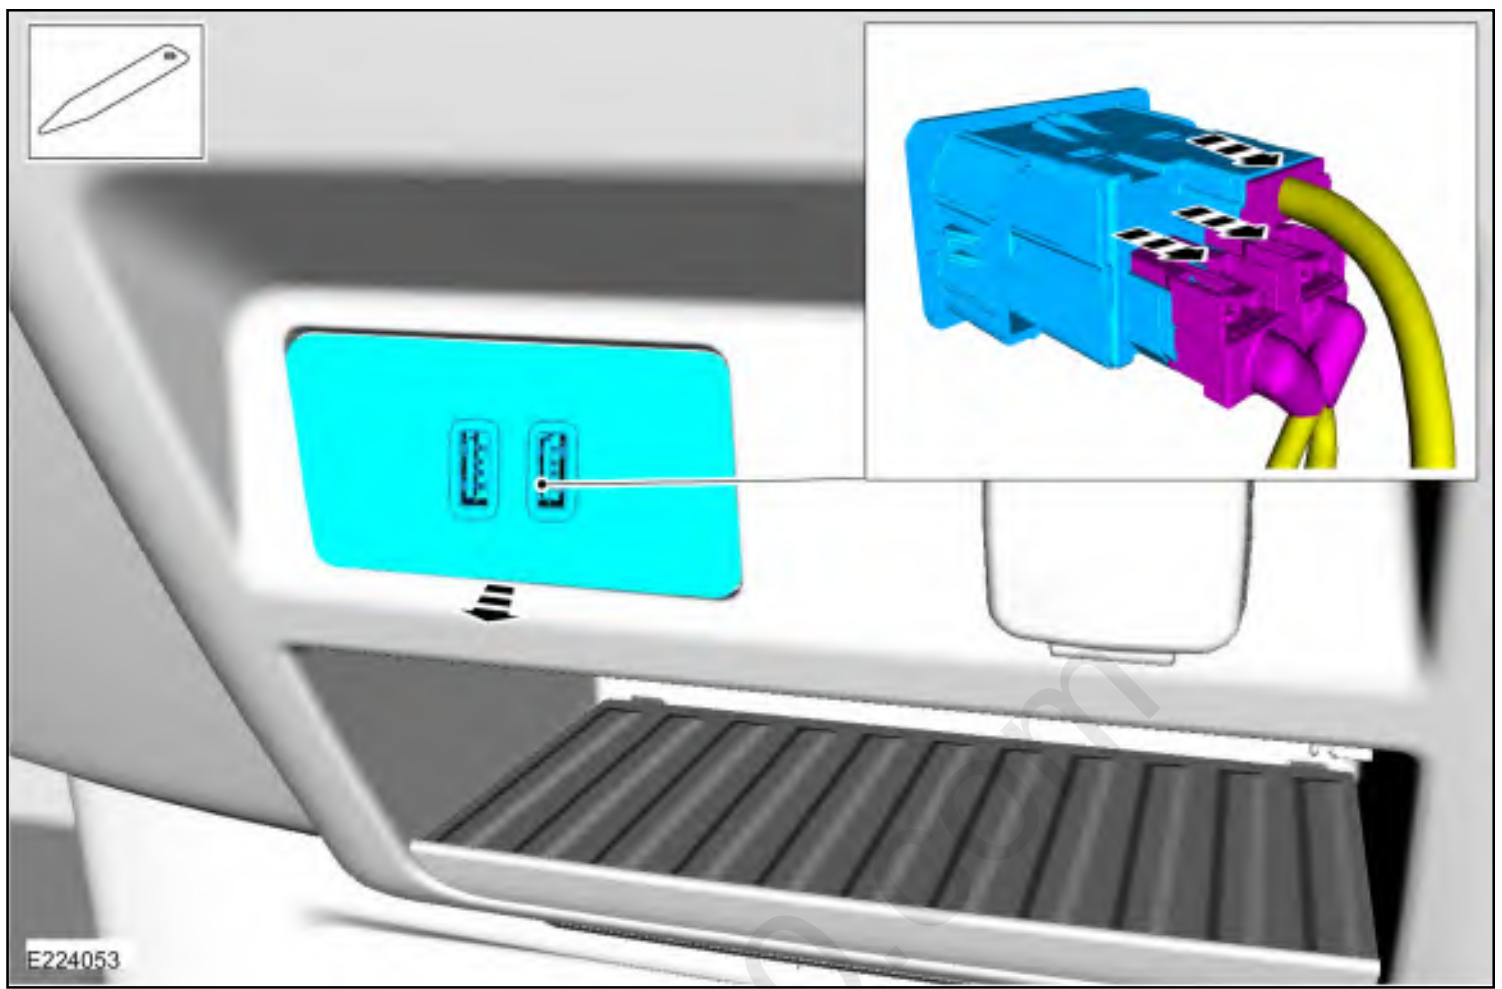

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company