

Instrument Panel Center Speaker


Special Tool(s) / General Equipment

Interior Trim Remover

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Release the clips and remove the instrument panel speaker grille.
Use the General Equipment: Interior Trim Remover

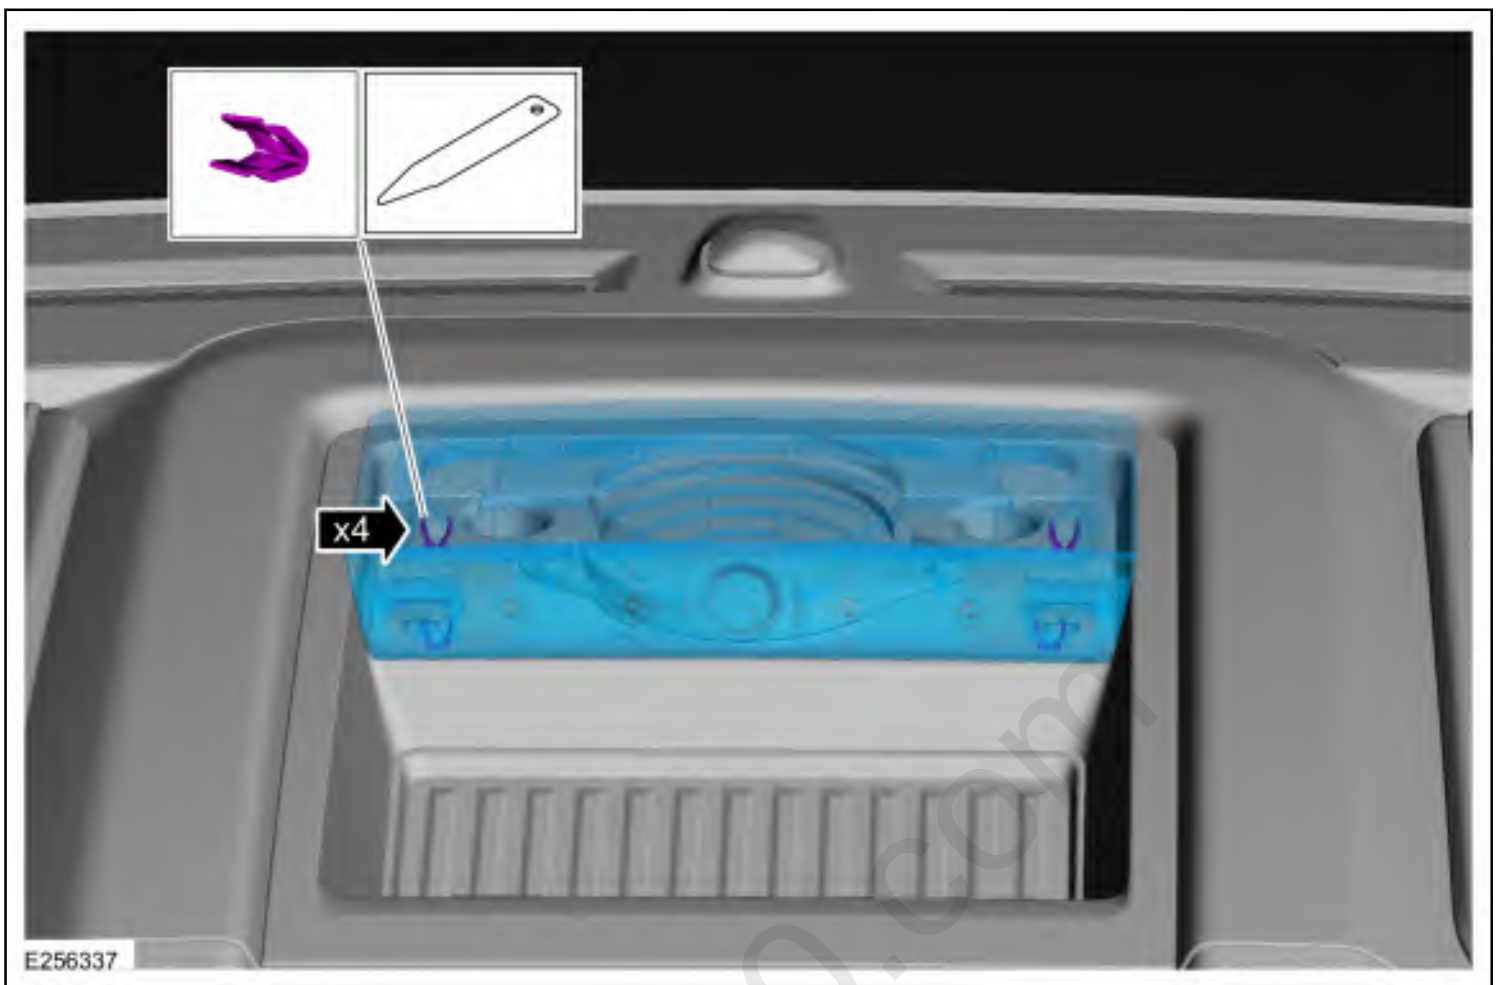

2. Remove the bolts and the instrument panel speaker.
 - Disconnect the electrical connector.

Torque: 22 lb.in (2.5 Nm)

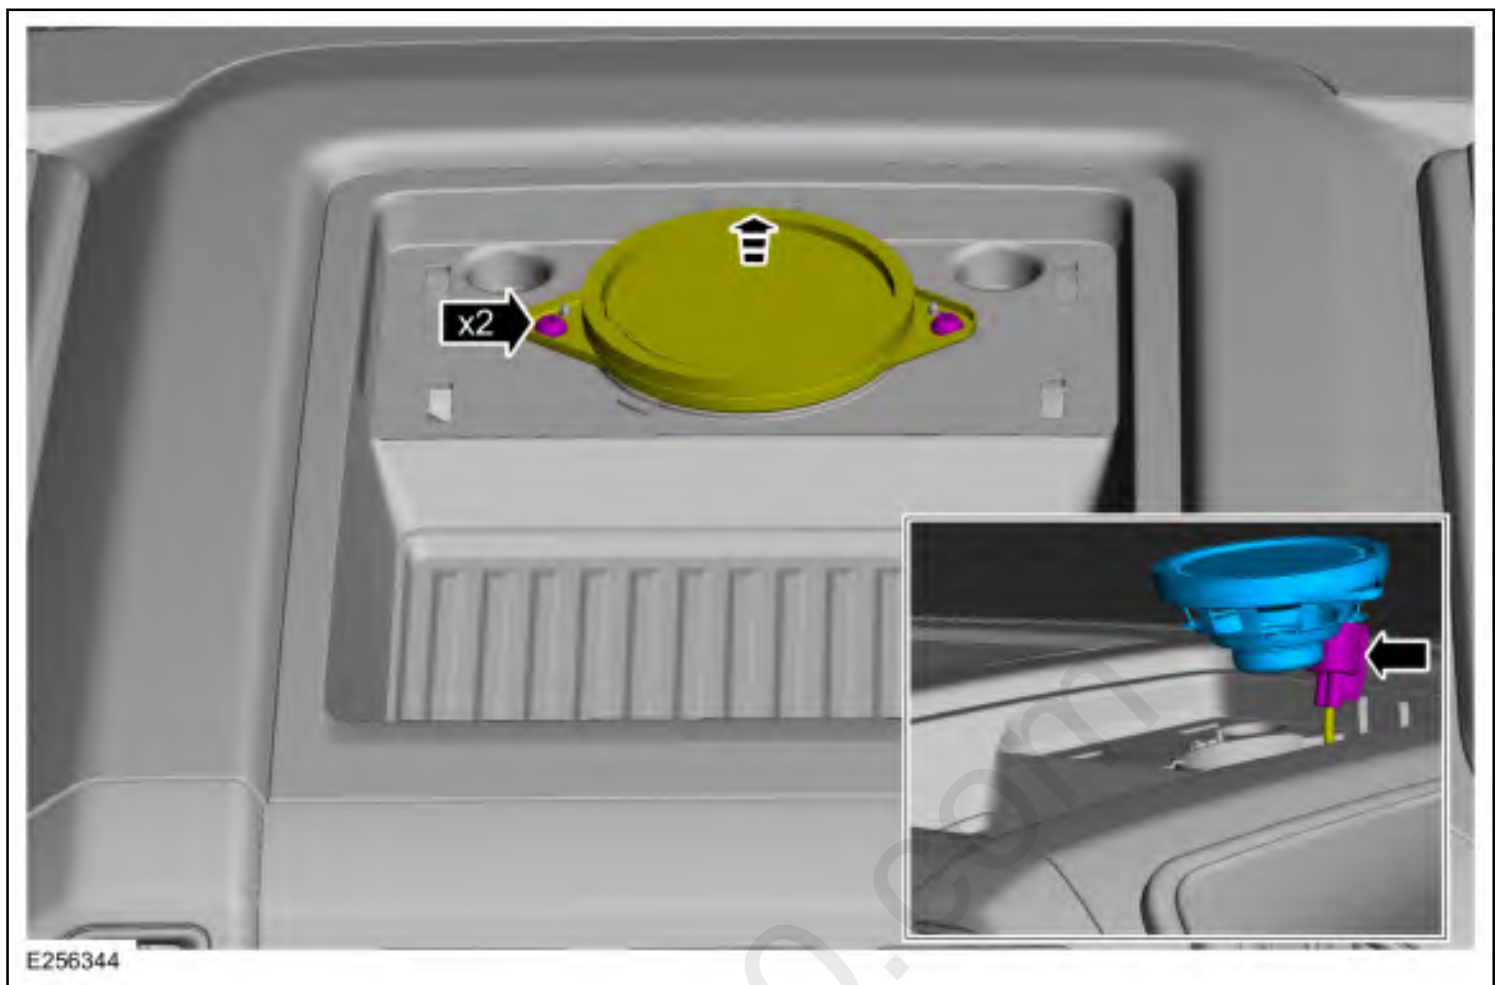

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company