

Audio Digital Signal Processing (DSP) Module

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.


Using a diagnostic scan tool, begin the PMI process for the DSP following the on-screen instructions.

2. **NOTE:** SuperCab equipped vehicles

NOTE: The striker should be in its lowest position for the latch to engage.

Lower the LH seat backrest.

1. Pull the backrest release strap and release the latch from the striker.
2. Lower the backrest.

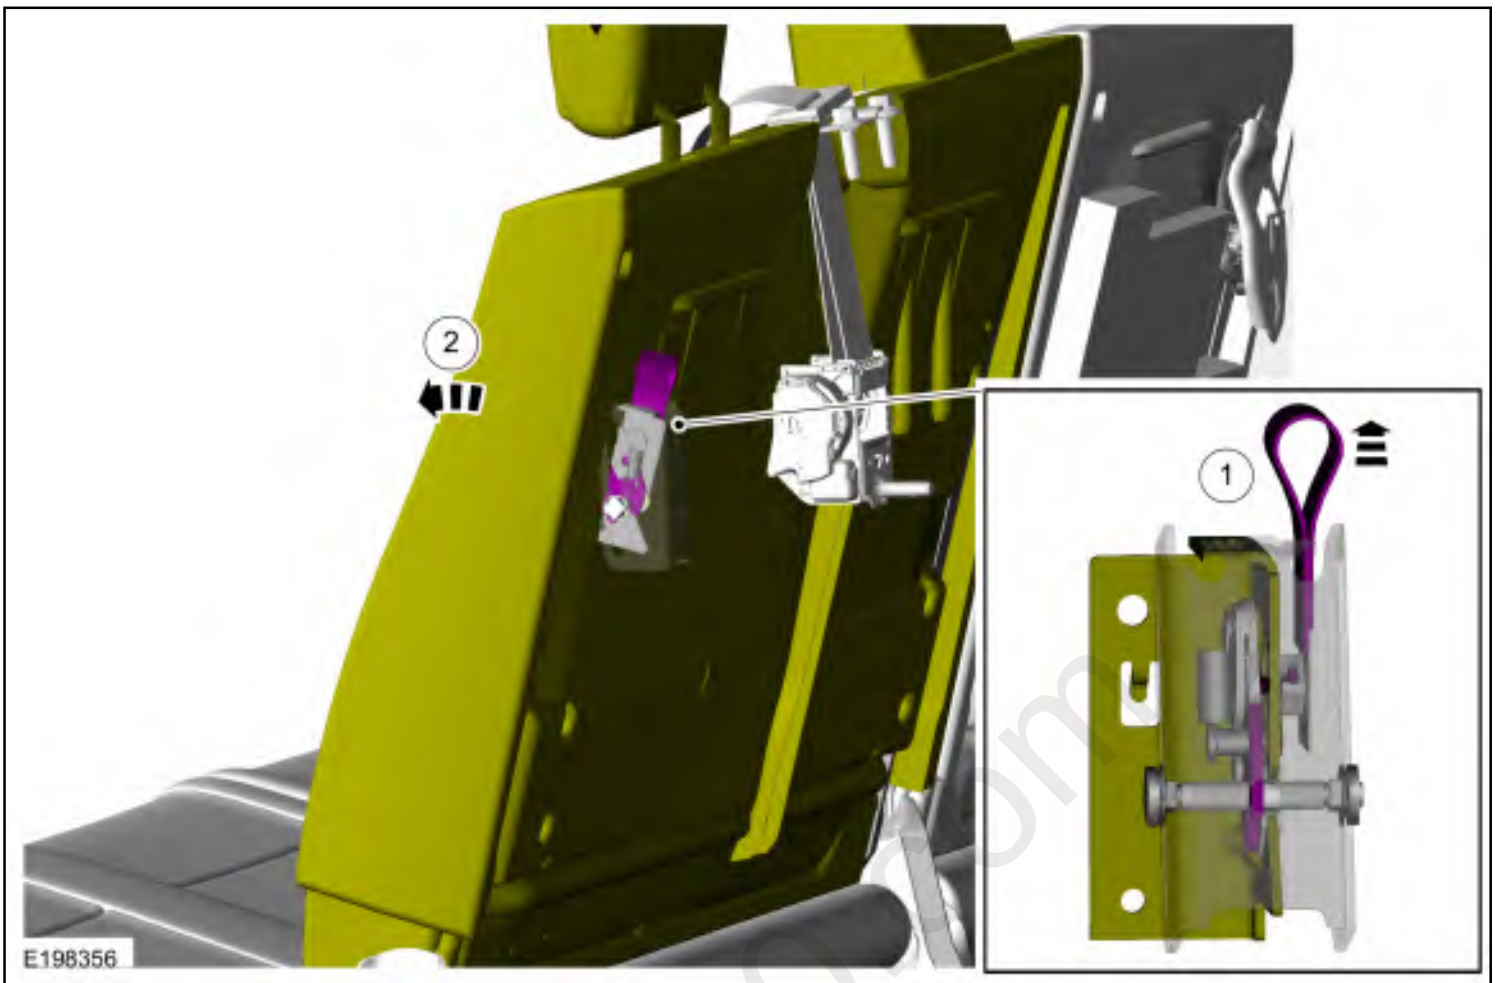


3. **NOTE:** *SuperCrew equipped vehicles*

NOTE: *The seat backrest latch is only accessible when the seat cushion is raised.*


NOTE: *The striker should be in its lowest position for the latch to engage.*

Lower the LH rear seat backrest.


1. Raise the seat cushion.
2. Release the backrest latch.
3. Lower the backrest down.

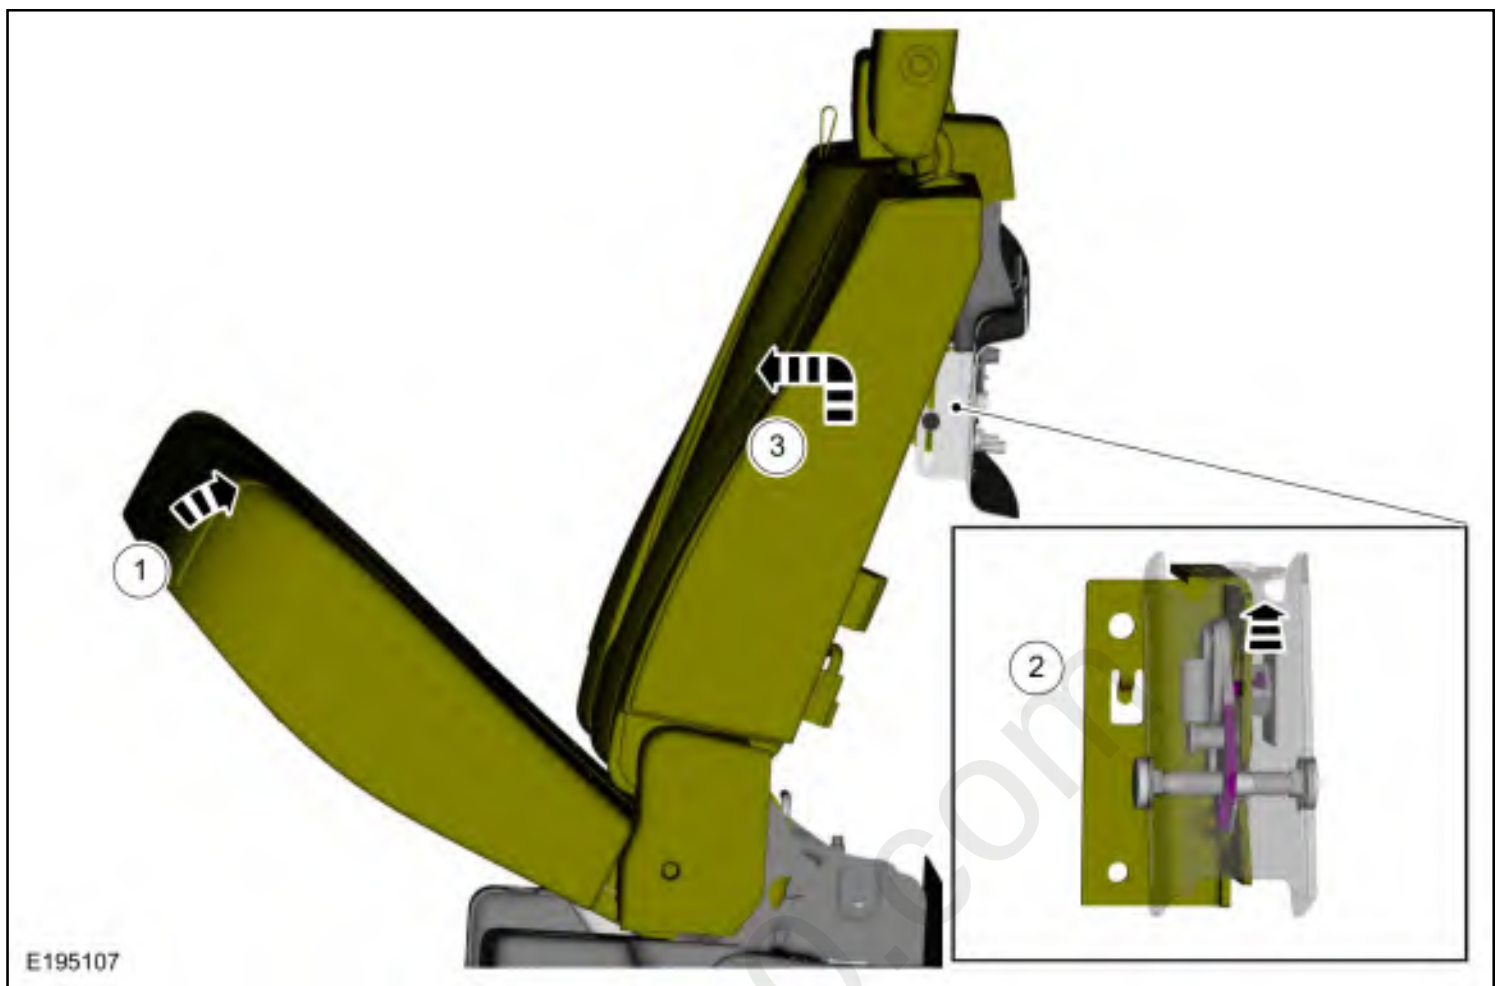

4. Remove the push pin and the wire shield.

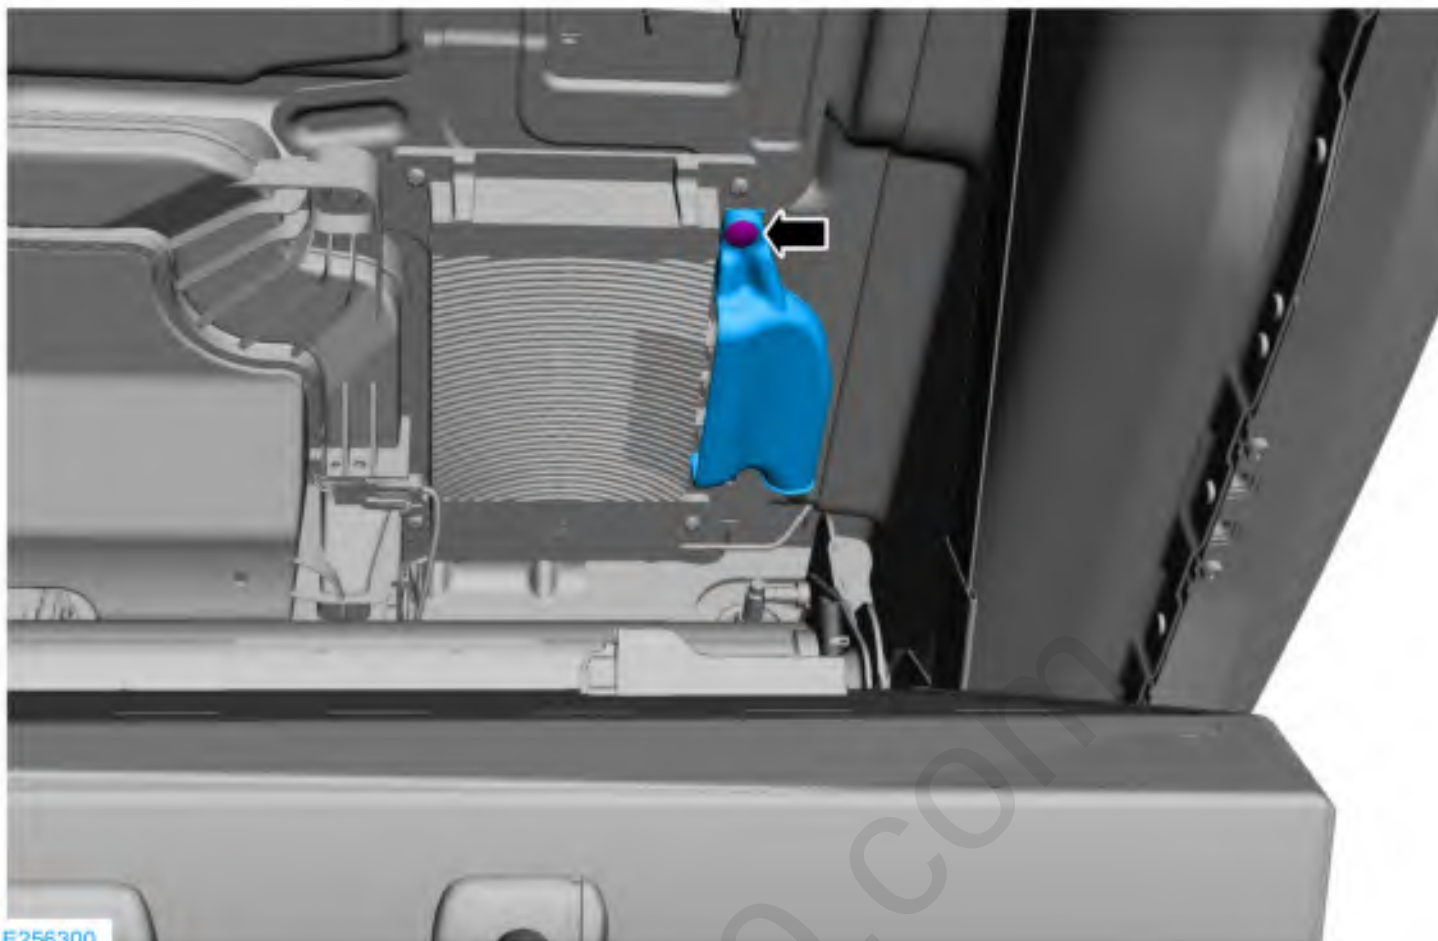

5. Remove the 4 screws and the DSP.
 - Disconnect the electrical connectors.

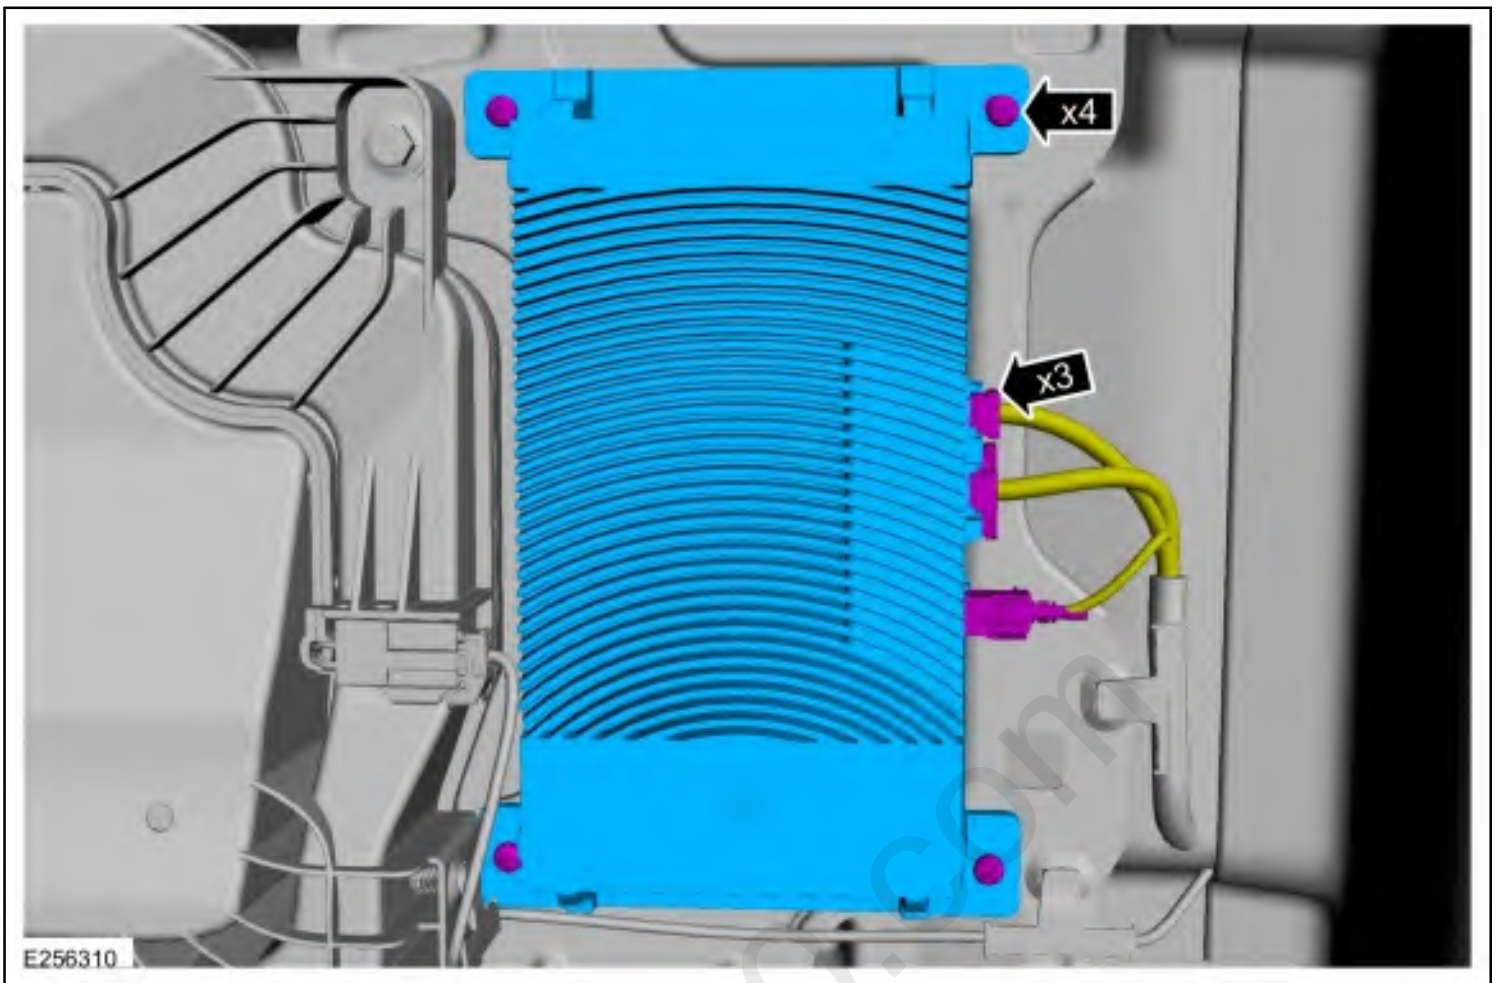

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only required if the component is being replaced.*

Using a diagnostic scan tool, complete the PMI process for the DSP following the on-screen instructions.