

Telematics Module

Special Tool(s) / General Equipment


Interior Trim Remover

Removal


NOTE: Removal steps in this procedure may contain installation details.

All telematics model versions

1. Release the clips and remove the LH instrument panel finish panel.
 - Position aside the weatherstrip.
 - Use the General Equipment: Interior Trim Remover

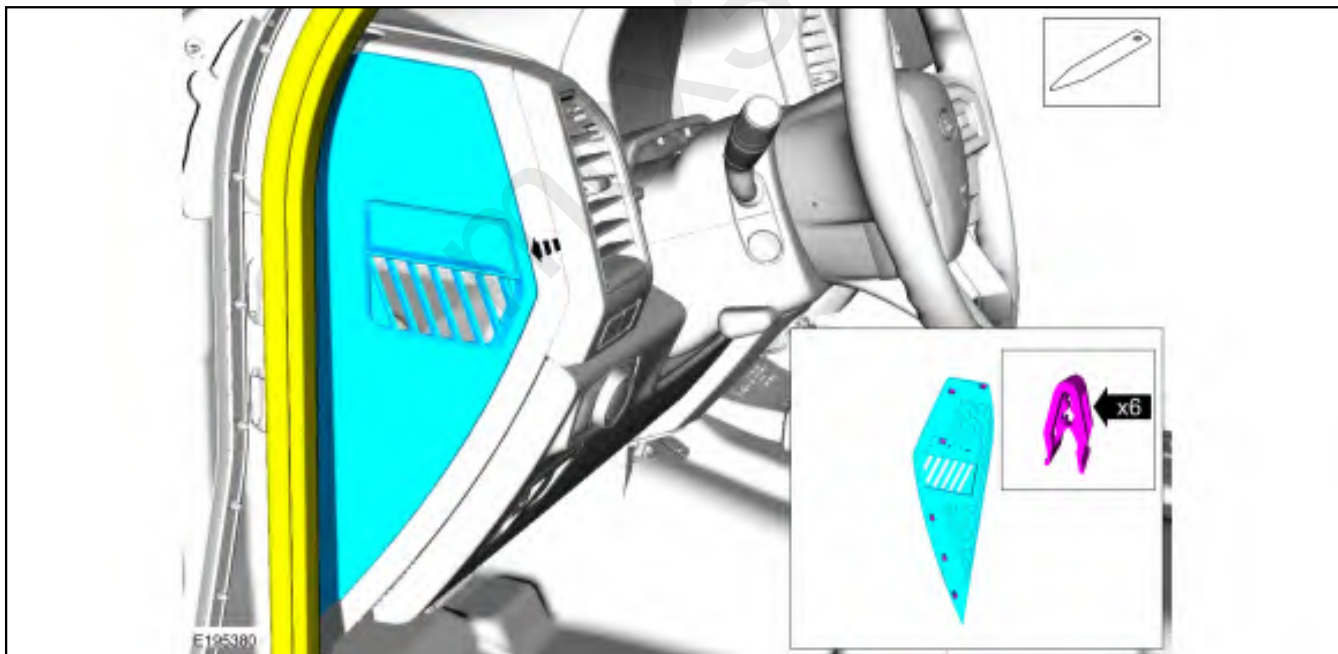


2. Remove the bolt and position the defroster duct off the alignment stud and down.

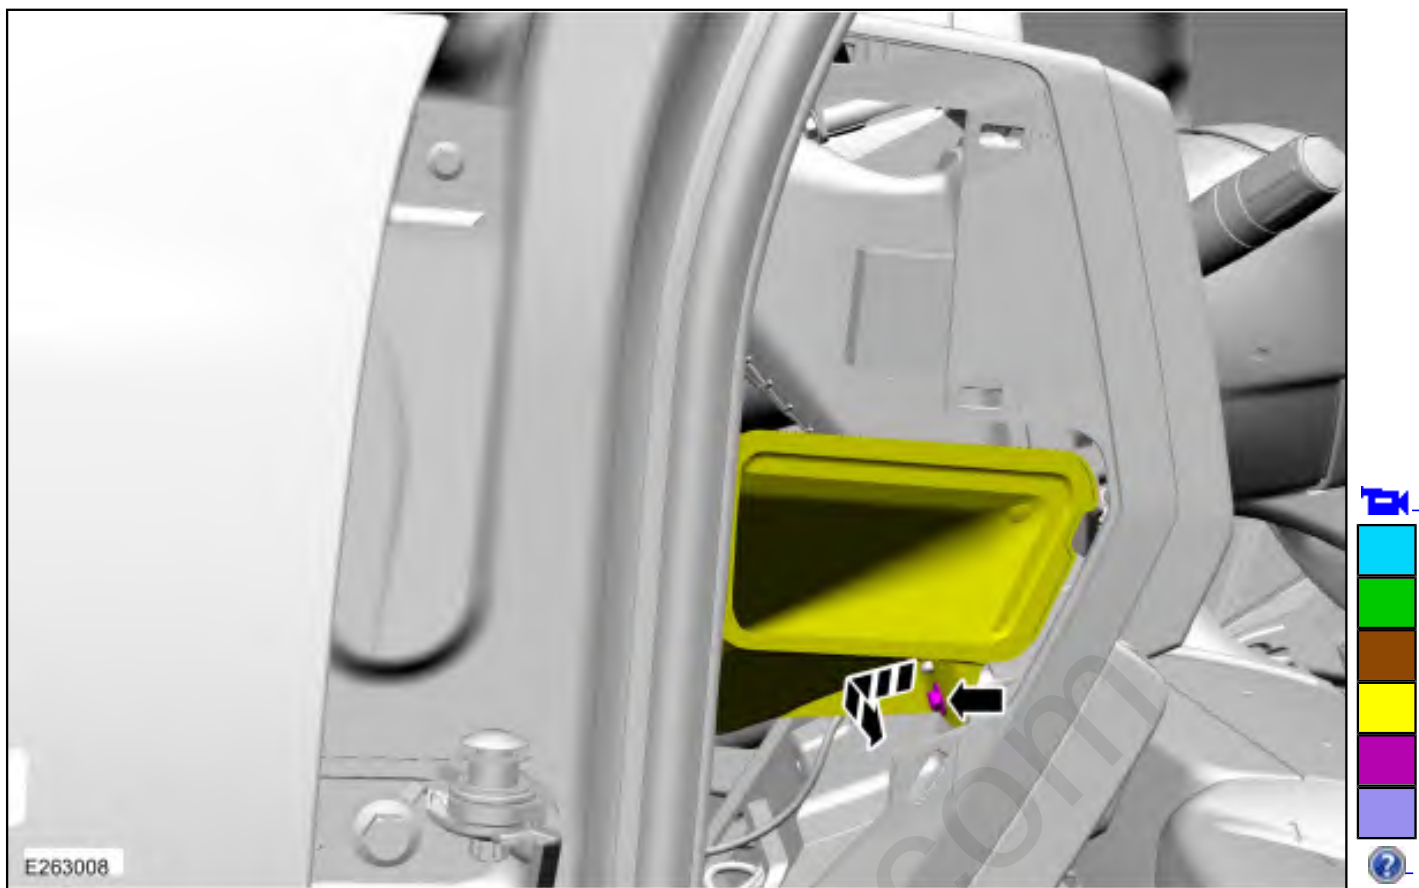


Vehicles equipped with version 1 telematics module

3. Using a non-marring tool release the hook and loop fastener and position the telematics module up and out.
Use the General Equipment: Interior Trim Remover

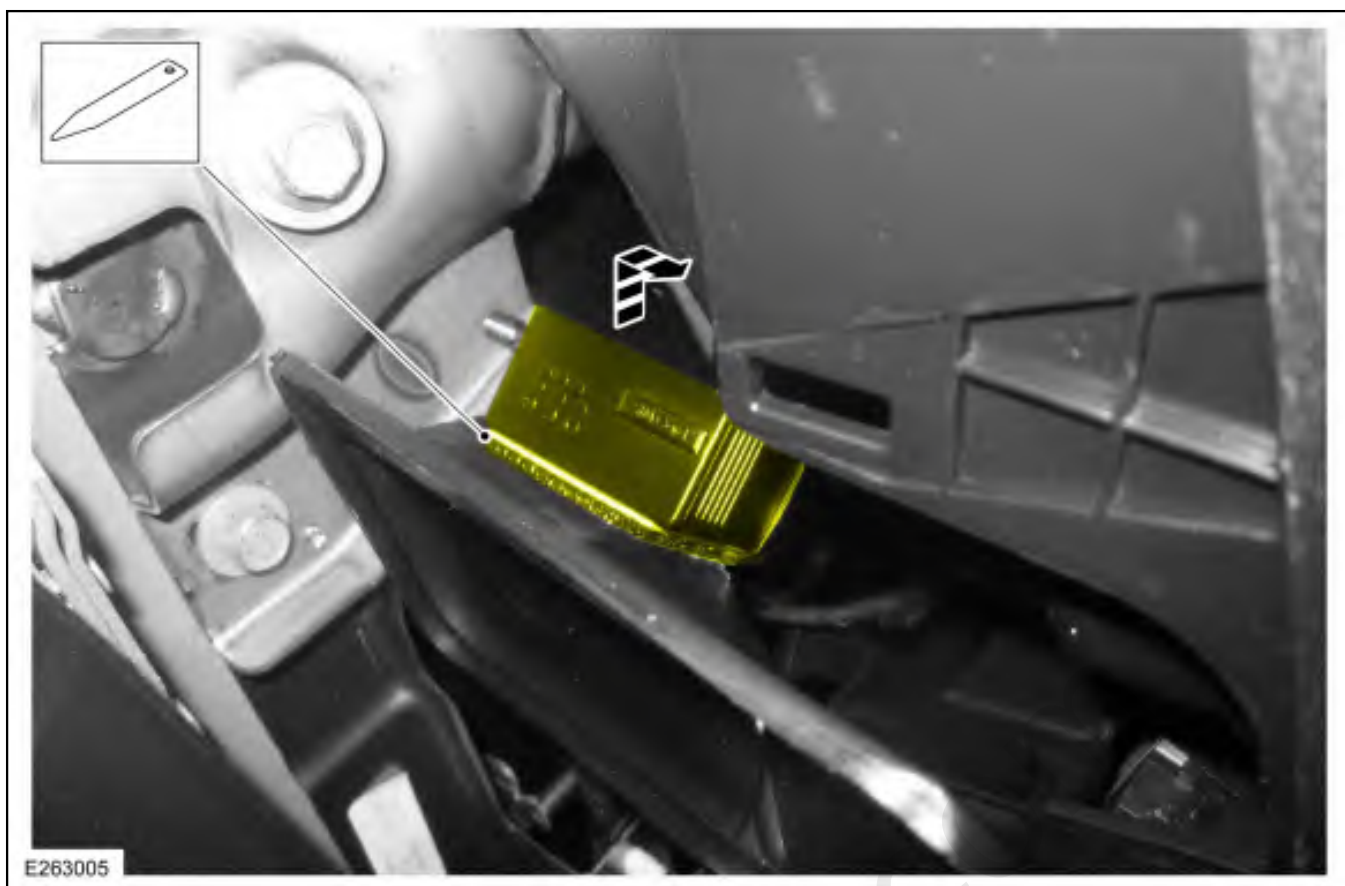

4. Disconnect the telematics module electrical connector and remove the telematics module.

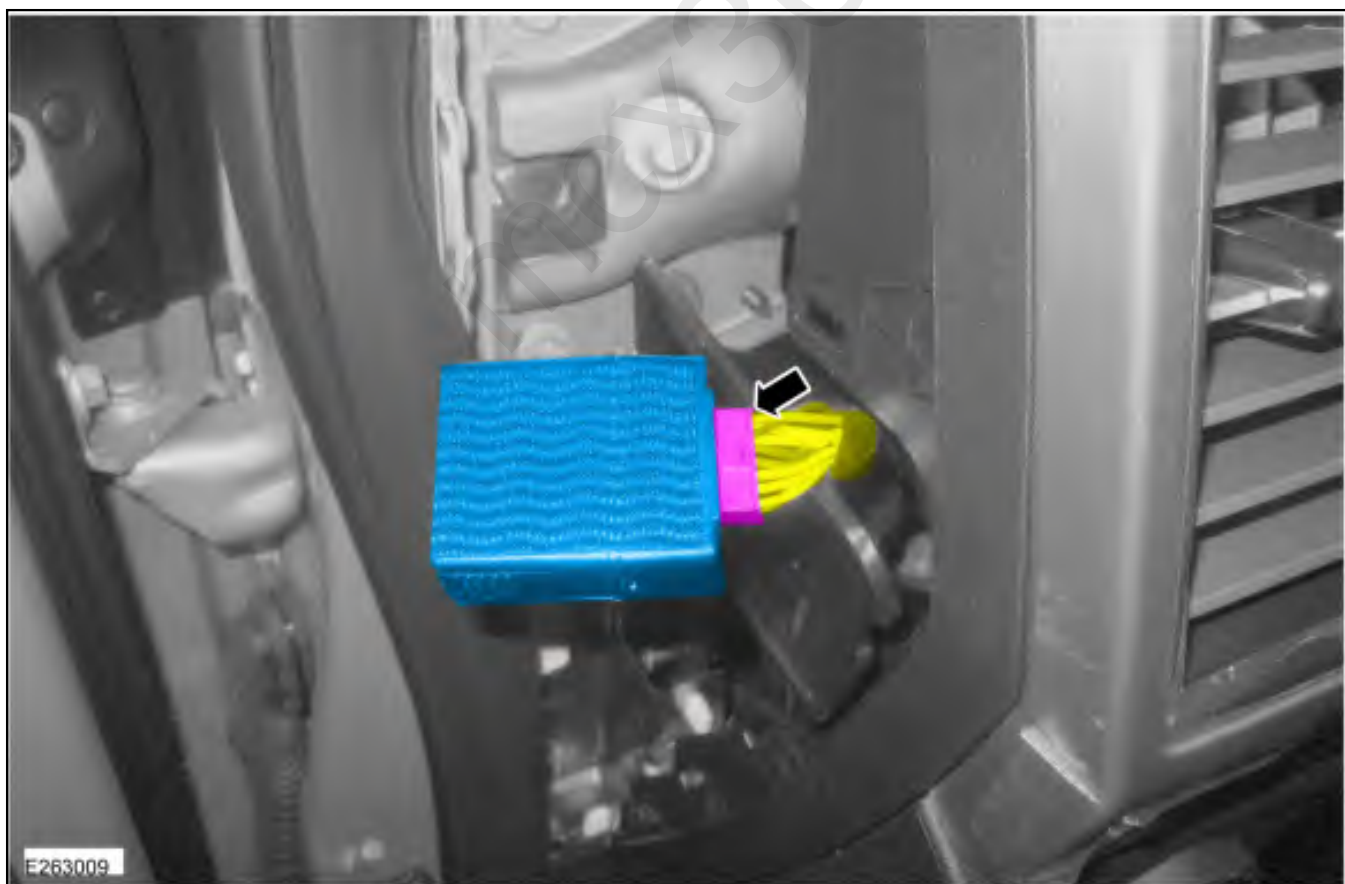

Vehicles equipped with version 2 telematics module

5. Using a non-marring tool release the hook and loop fastener and position the telematics module up and out.
Use the General Equipment: Interior Trim Remover





6. Disconnect the telematics module electrical connector and remove the telematics module.





All telematics model versions

7. Route the telematics harness down through the instrument panel.

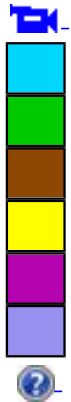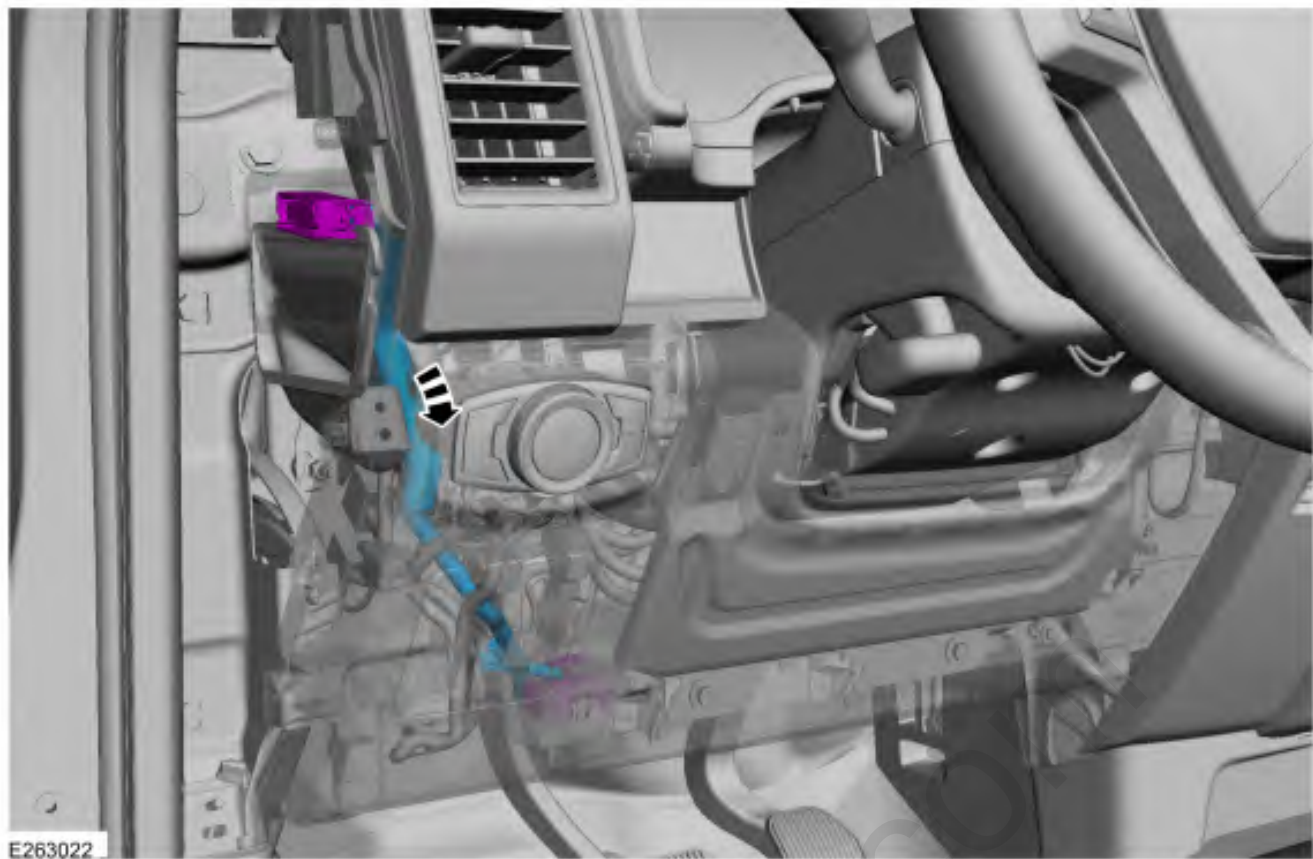

8. Disconnect the electrical connectors and remove the telematics harness.

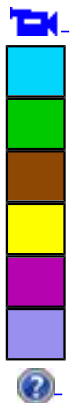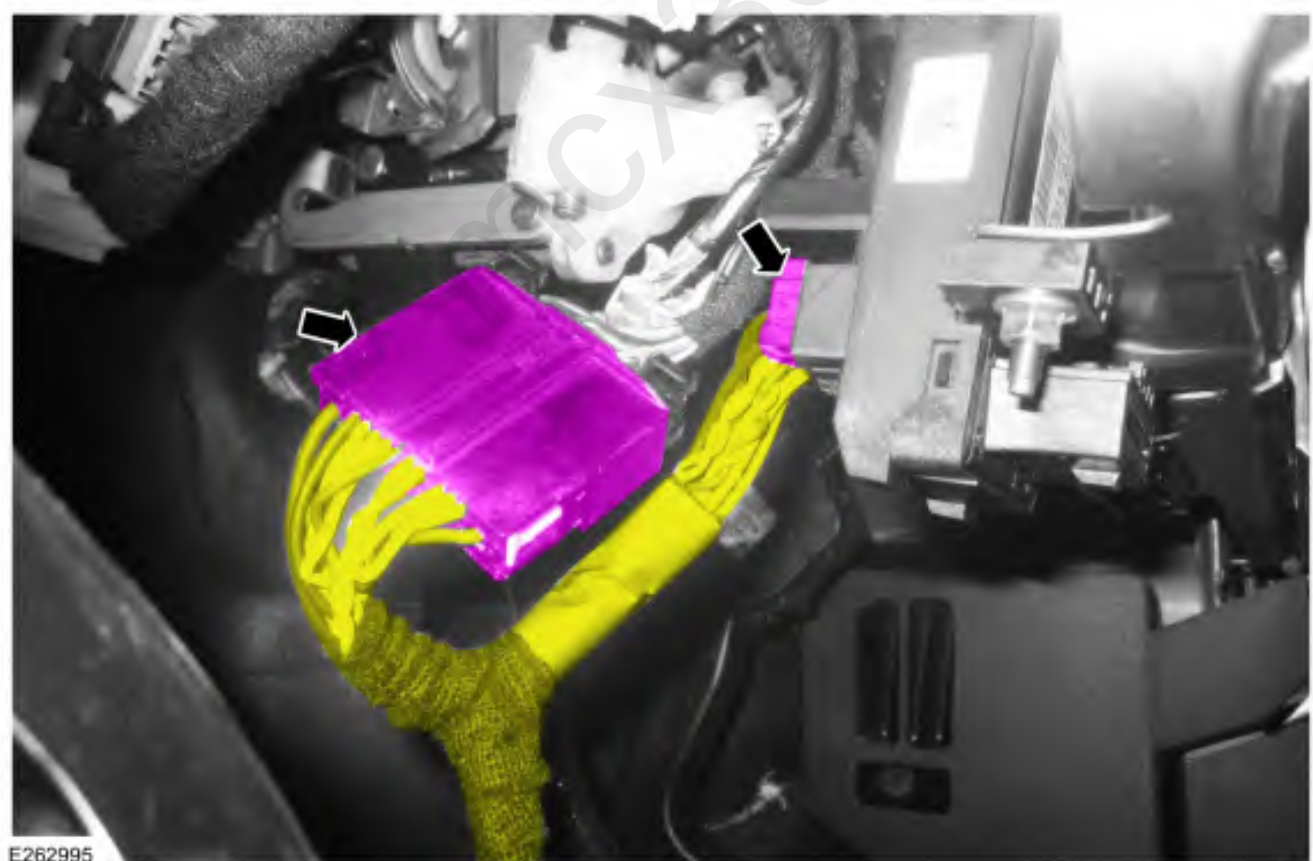

Installation

1. To install, reverse the removal procedure.
2. Verify that the telematics module is operating correctly.
Refer to: [Information and Entertainment System](#) (415-00E Information and Entertainment System - General Information - Vehicles With: Ford Telematics, Diagnosis and Testing).

Copyright © 2018 Ford Motor Company

mcx30.com