

Autolamps

DTC Chart: Body Control Module (BCM)

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices.

REFER to: [Diagnostic Methods](#) (100-00 General Information, Description and Operation).

BCM DTC Chart

DTC	Description	Action
B1A85:11	Ambient Light Sensor: Circuit Short To Ground	GO to Pinpoint Test B
B1A85:13	Ambient Light Sensor: Circuit Open	GO to Pinpoint Test B
For other BCM Diagnostic Trouble Codes (DTCs)	-	REFER to: Body Control Module (BCM) (419-10 Multifunction Electronic Modules, Diagnosis and Testing).

Symptom Chart(s)

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices.

REFER to: [Diagnostic Methods](#) (100-00 General Information, Description and Operation).

Symptom Chart: Autolamps

Symptom Chart