

Headlamp Bulb

Base Part Number: Base Part Number: 13N021


Removal

Vehicles with headlamps

1. Bulbs are not serviceable on LED headlamps. Replace the headlamp assembly.

Vehicles equipped with halogen headlamps

2. Raise the vehicle on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
3. Remove the pushpins and screws, and position the fender liner aside.

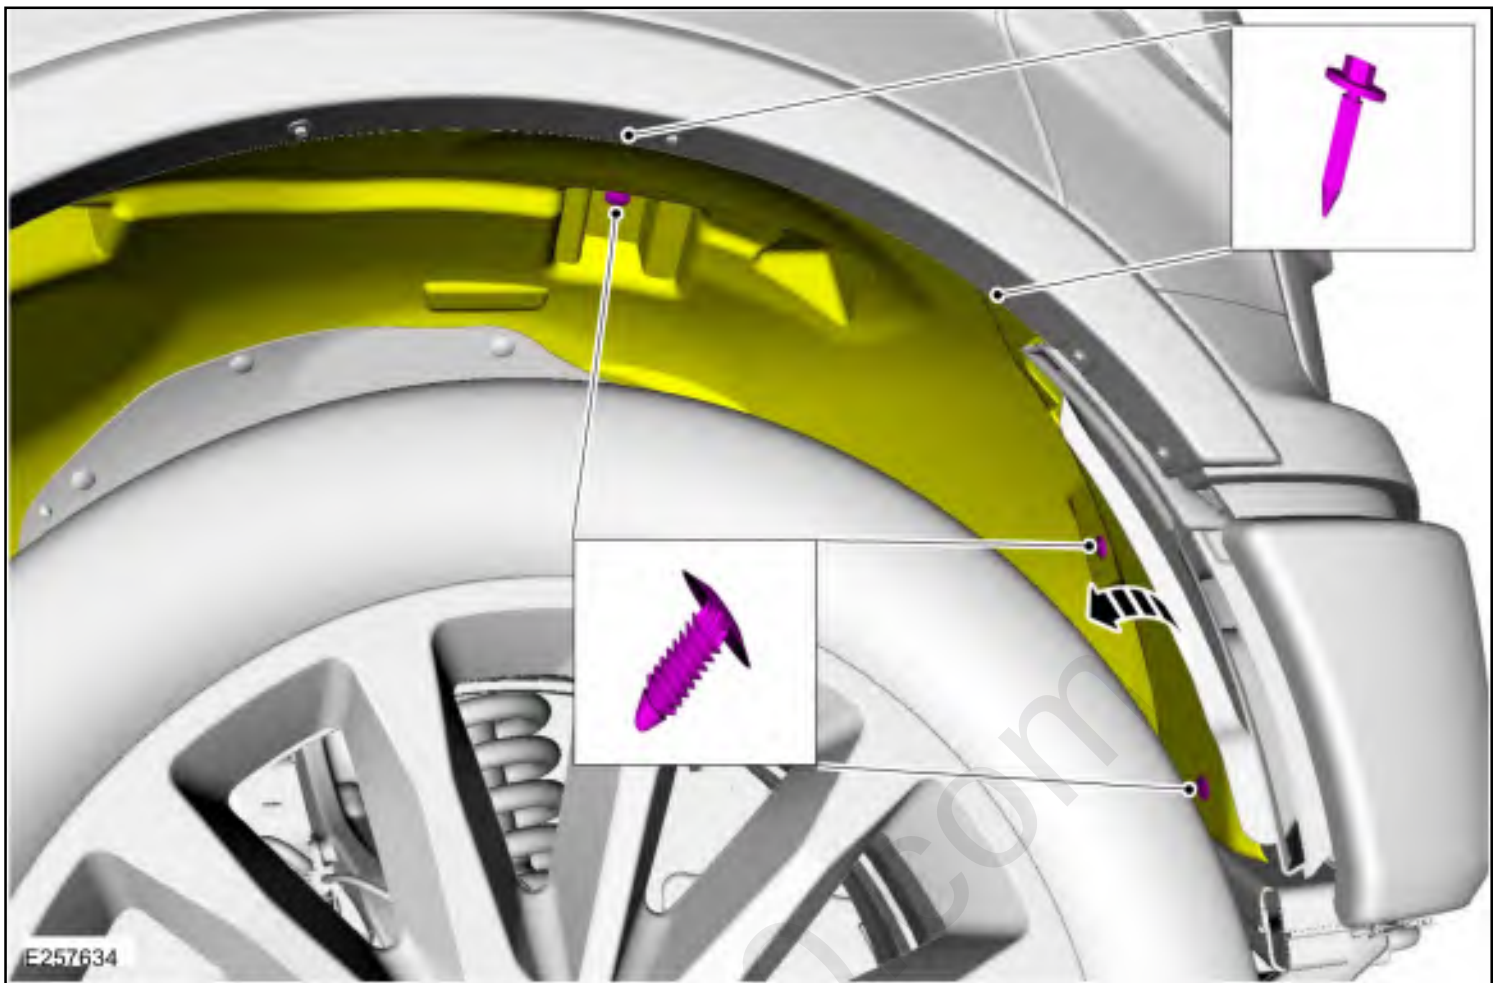


4. **⚠ WARNING:** The bulb contains gas under pressure. The bulb may shatter if the glass envelope is scratched or if the bulb is dropped. Handle the bulb only by its base. Avoid touching the glass envelope. Failure to follow these instructions may result in personal injury.

NOTE: The headlamp bulb should not be removed from the headlamp assembly until just before a new bulb is installed. Removing the bulb for an extended period of time may affect headlamp bulb performance. Contaminants may enter the headlamp assembly where they can settle on the lens and reflector. Never turn on the headlamps with the bulb removed from the headlamp assembly.

NOTE: Make sure the headlamp switch and ignition switch are in the OFF position.

NOTE: The headlamp assembly is shown removed for clarity.

Remove the low beam bulb cover.

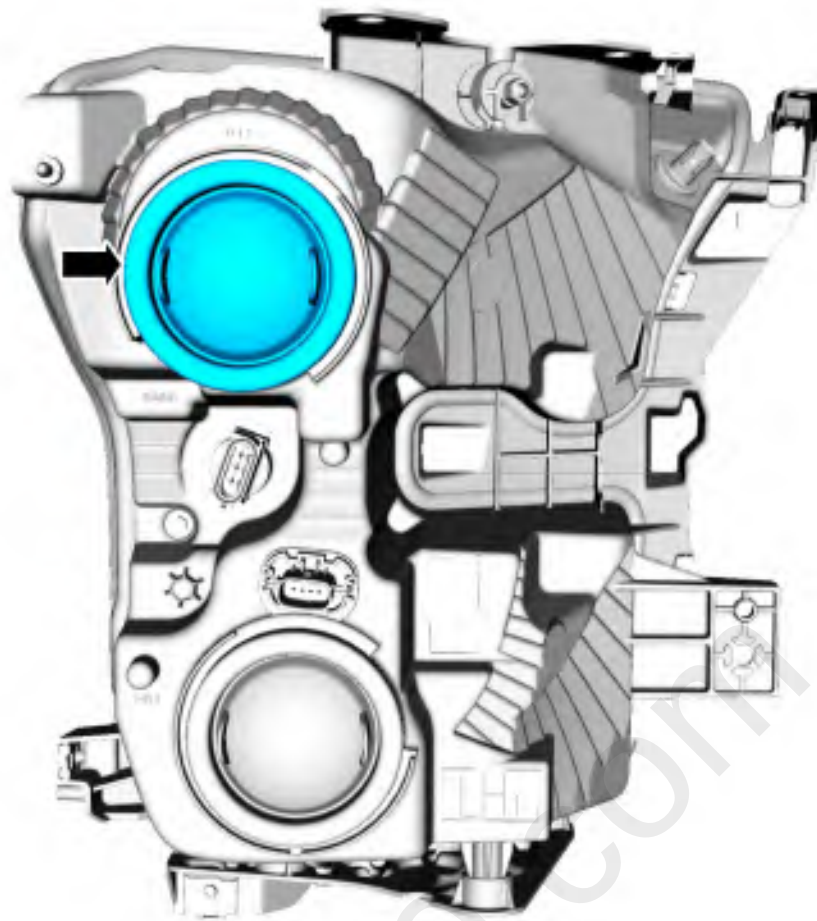


E190432



5. **NOTE:** *The headlamp assembly is shown removed for clarity.*


Remove the low beam headlamp bulb.

1. Rotate the low beam headlamp bulb counter clock-wise.
2. Disconnect the low beam headlamp bulb electrical connector.

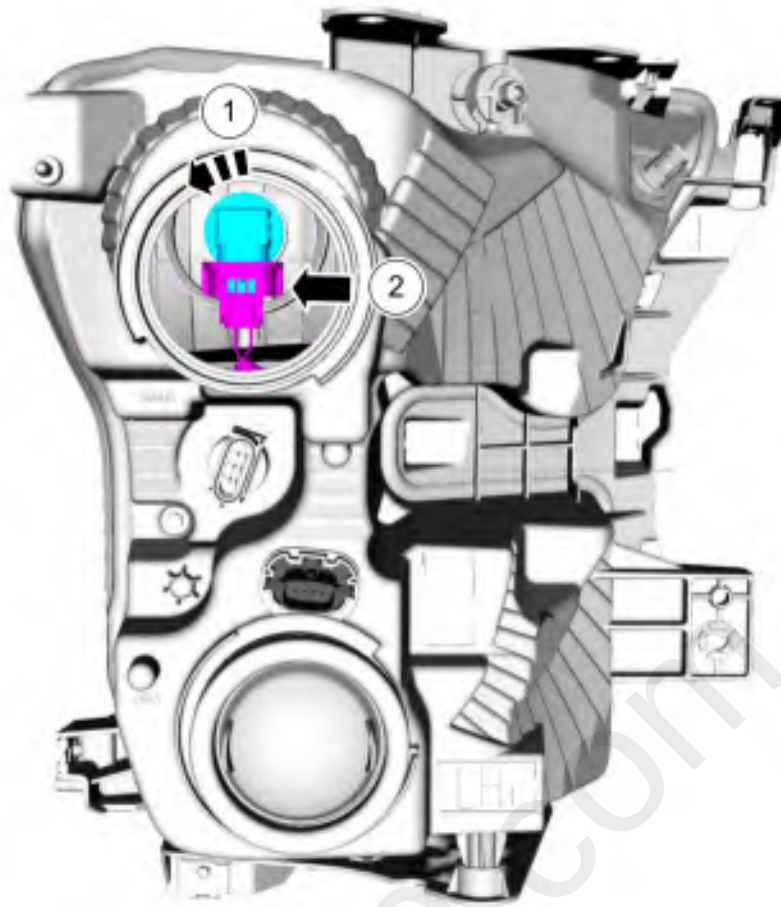

6. **NOTE:** *The headlamp assembly is shown removed for clarity.*

Remove the high beam bulb cover.

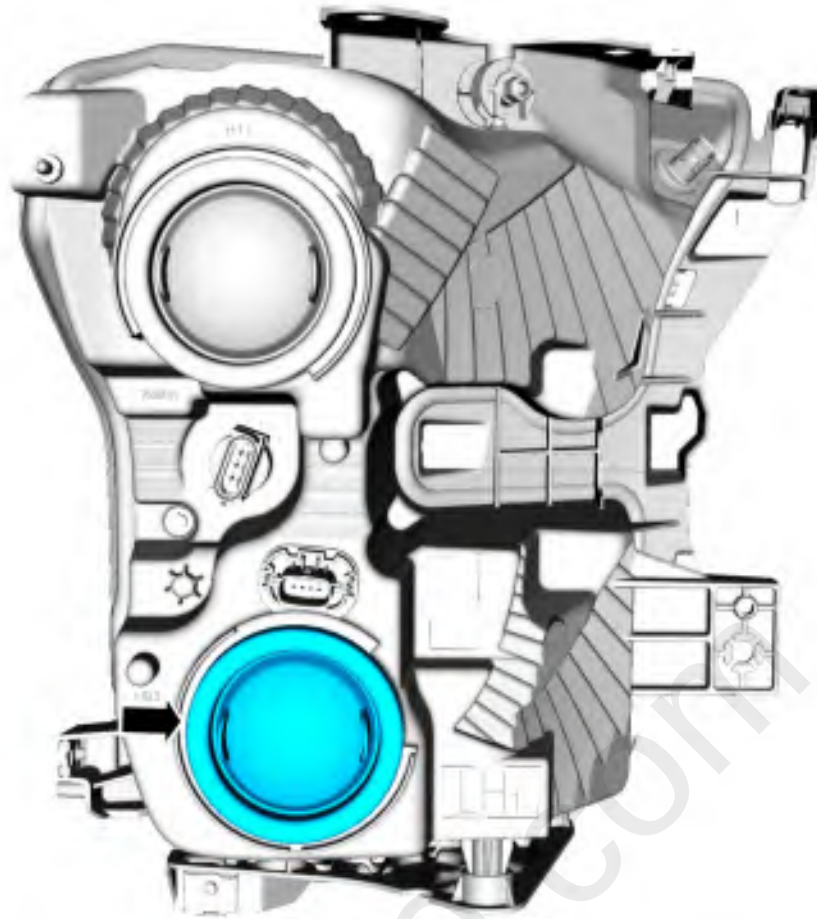

7. **⚠ WARNING:** The bulb contains gas under pressure. The bulb may shatter if the glass envelope is scratched or if the bulb is dropped. Handle the bulb only by its base. Avoid touching the glass envelope. Failure to follow these instructions may result in personal injury.


NOTE: The headlamp bulb should not be removed from the headlamp assembly until just before a new bulb is installed. Removing the bulb for an extended period of time may affect headlamp bulb performance. Contaminants may enter the headlamp assembly where they can settle on the lens and reflector. Never turn on the headlamps with the bulb removed from the headlamp assembly.

NOTE: Make sure the headlamp switch and ignition switch are in the OFF position.

NOTE: The headlamp assembly is shown removed for clarity.

Remove the high beam headlamp bulb.

1. Rotate the high beam headlamp bulb counter clock-wise.
2. Disconnect the high beam headlamp bulb electrical connector.

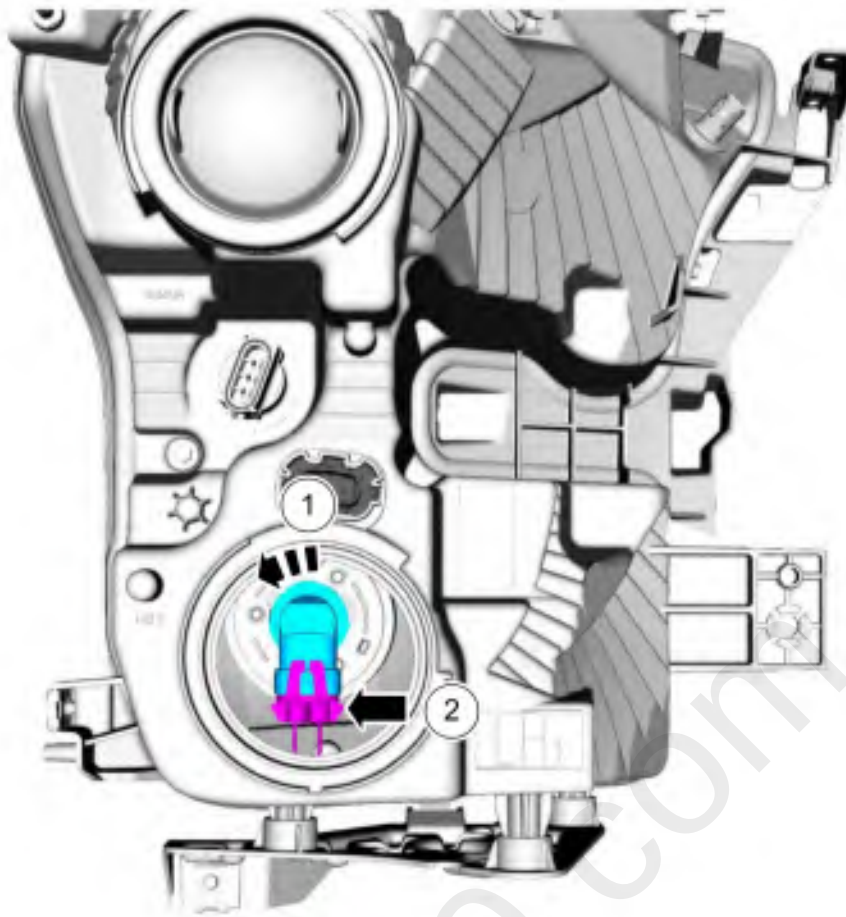

Installation

1. To install, reverse the removal procedure.
2. Adjust the headlamps.
Refer to: [Headlamp Adjustment](#) (417-01 Exterior Lighting, General Procedures).