


Rear Lamp Assembly

Base Part Number: Base Part Number: 13404

Removal


All vehicles

1. Remove the screws and position the rear lamp assembly aside.

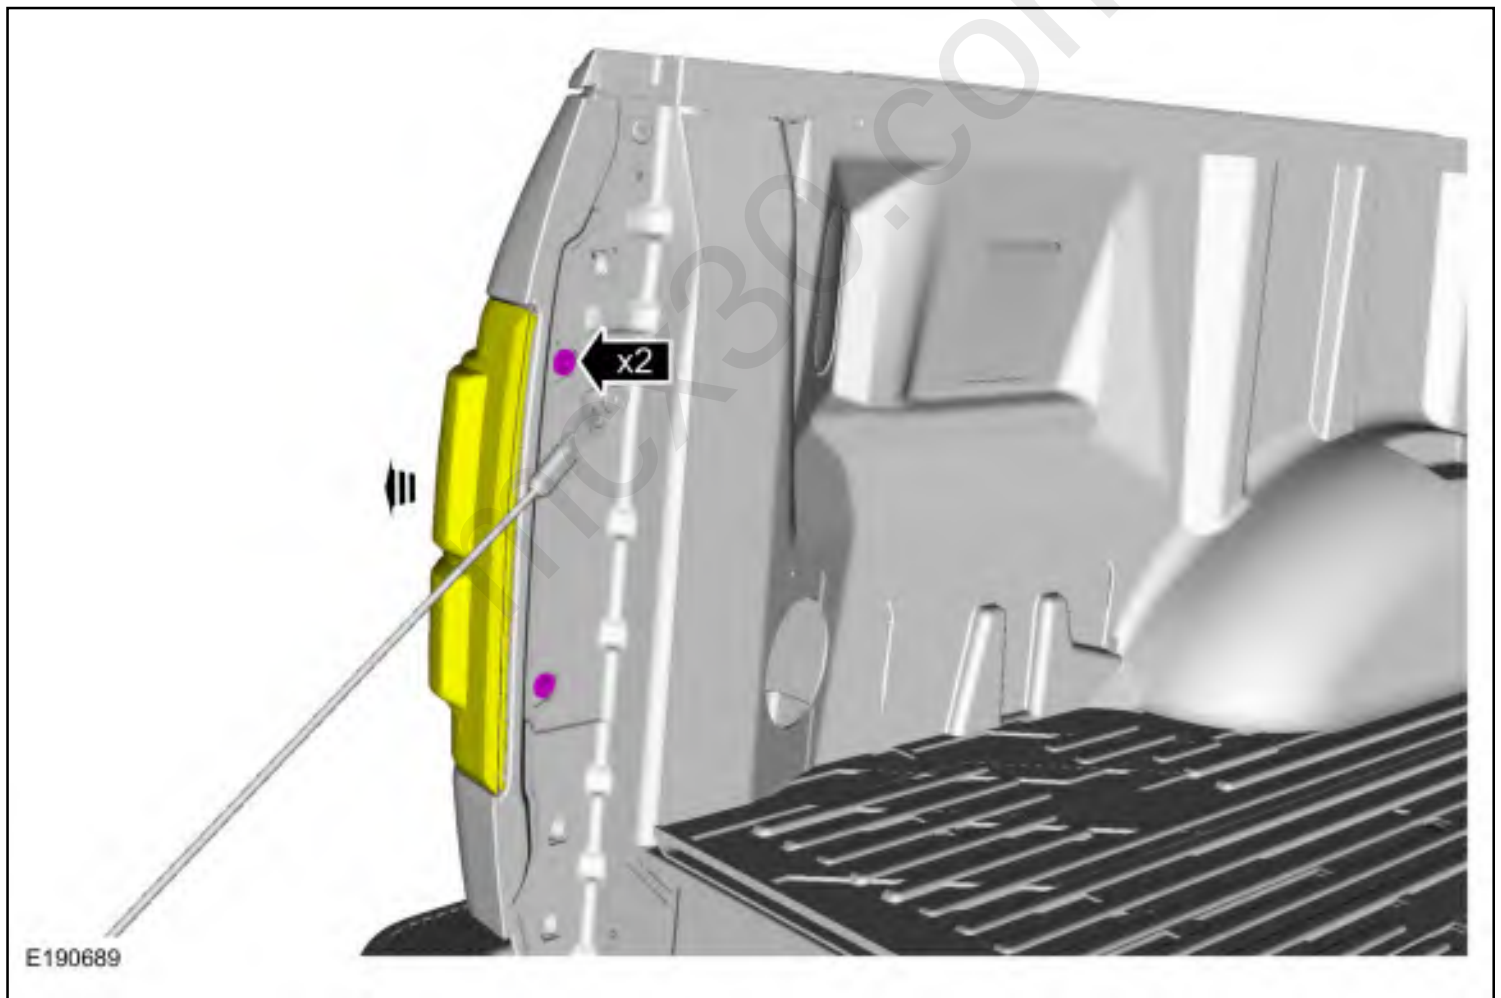


Vehicles with incandescent lamps

2. Disconnect the rear lamp assembly electrical connectors.

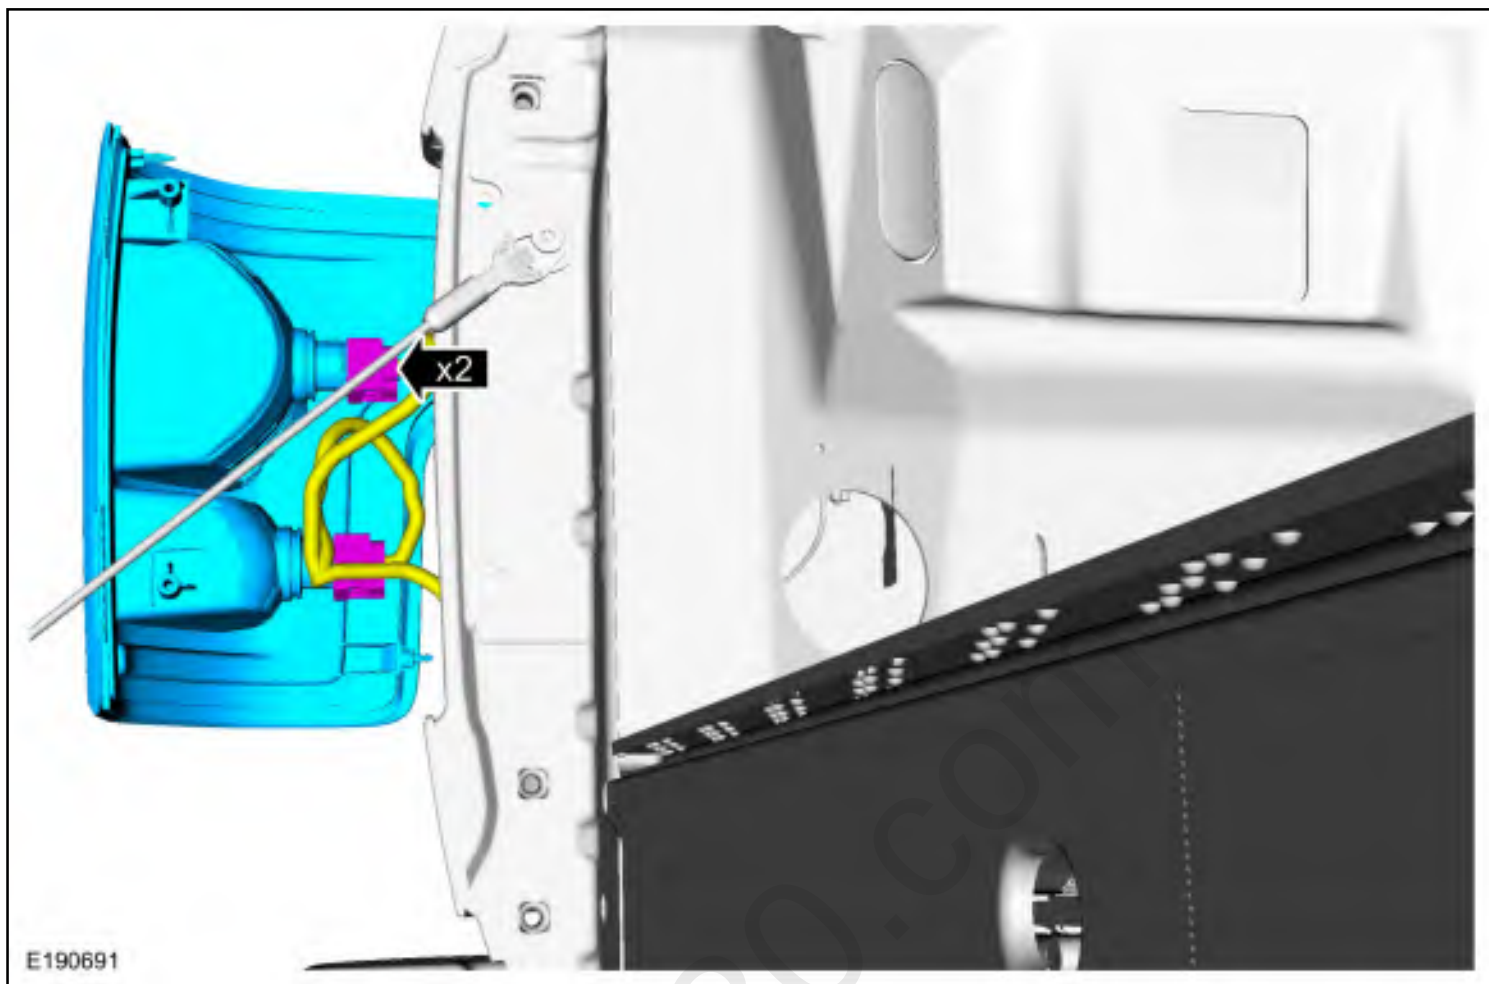

Vehicles with LED lamps

3. Disconnect the rear lamp assembly electrical connector.

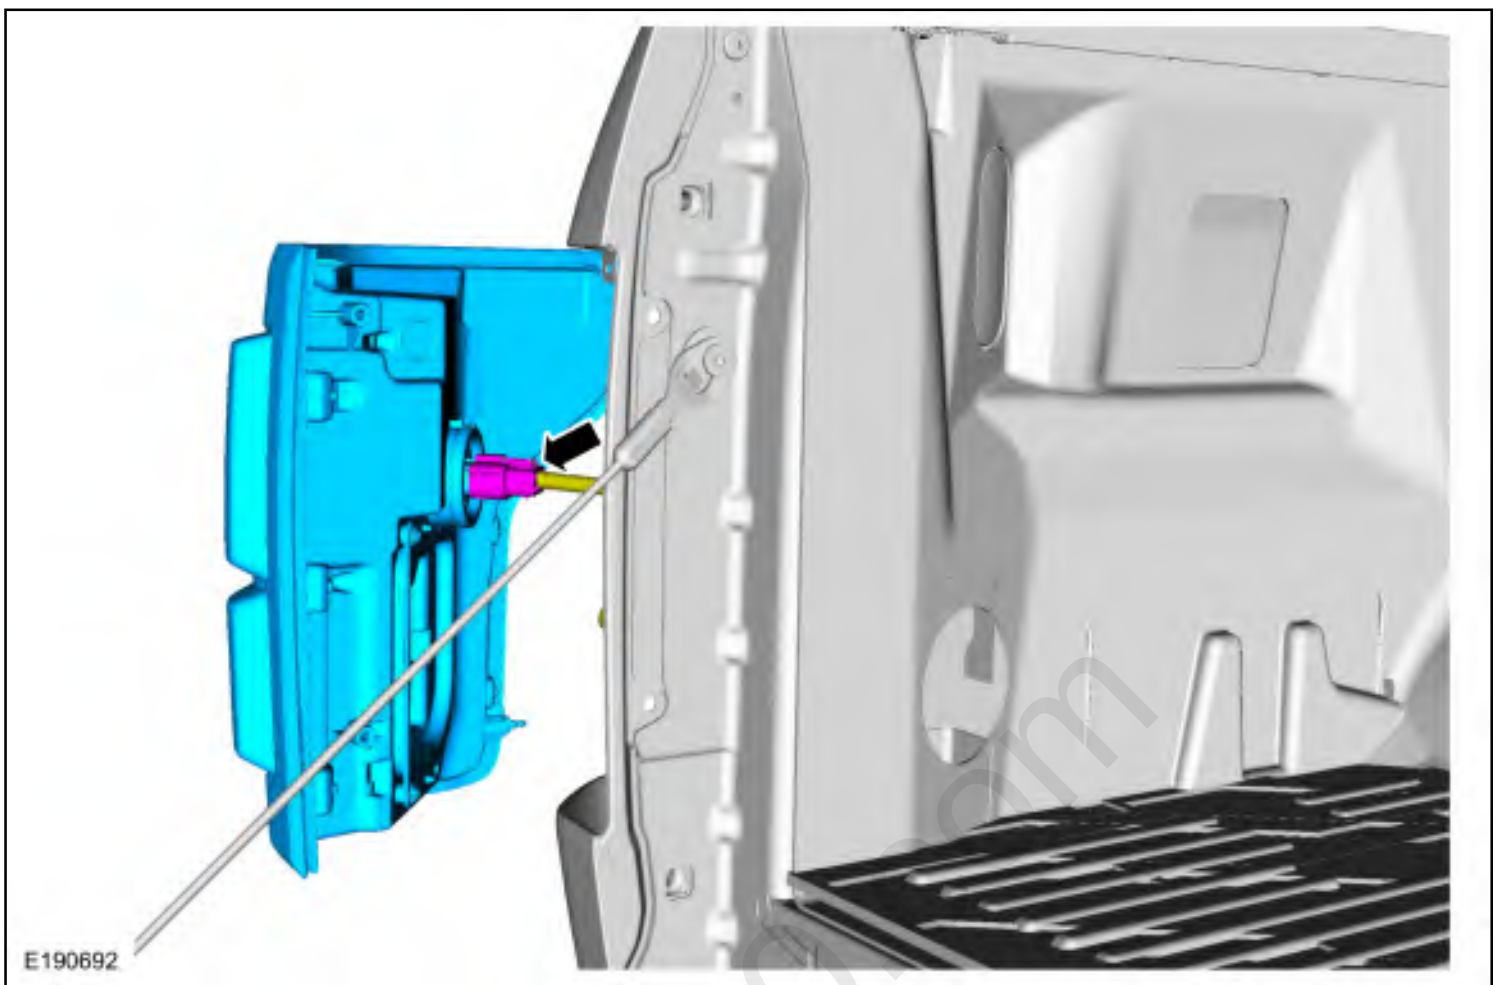


4. Remove the rear lamp assembly.
Refer to: Rear Lamp Assembly (417-01 Exterior Lighting) .

5. **NOTE:** *If equipped with SODL or SODR.*

NOTE: *Carry out this step only if installing a new rear lamp assembly.*

Remove the screws and position the SODL or SODR cover aside.

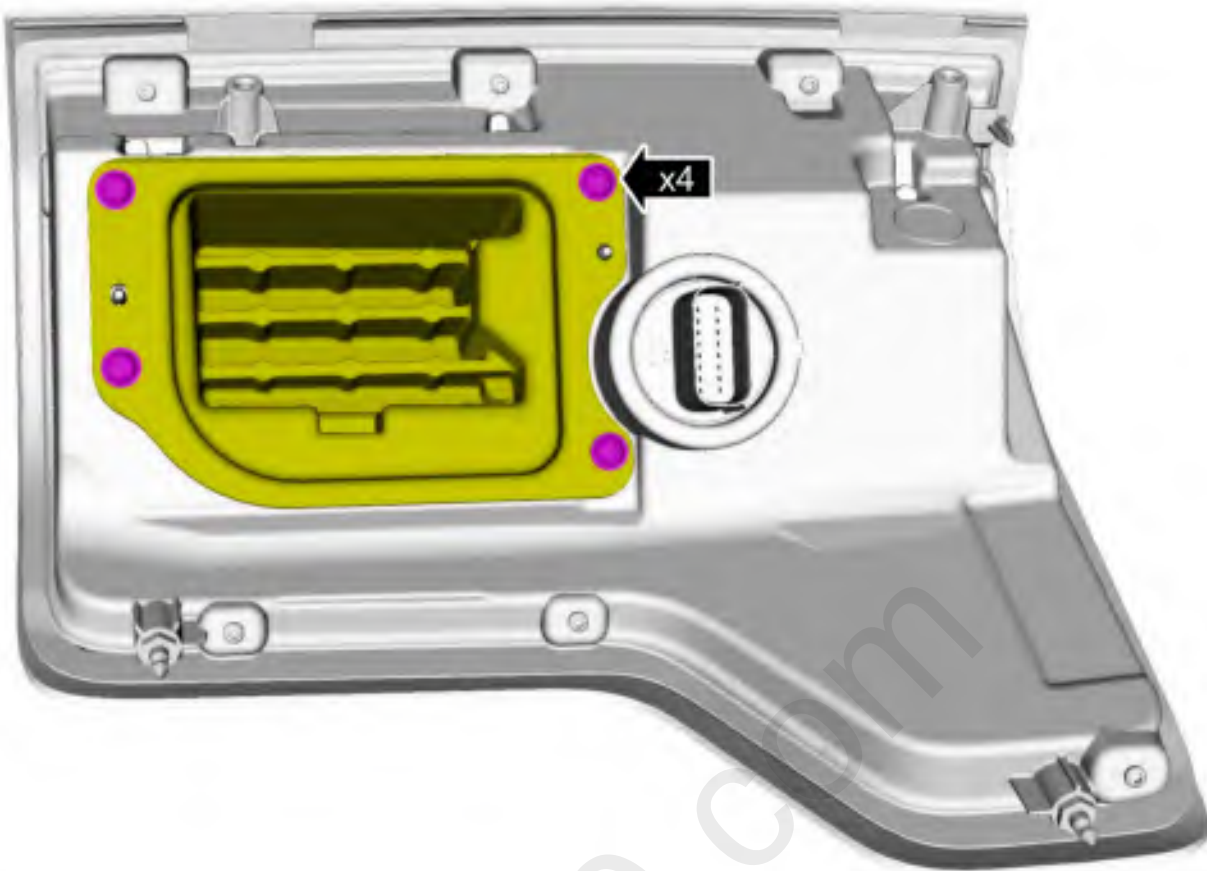

E190328




6. **NOTE:** *If equipped with SODL or SODR.*

NOTE: *Carry out this step only if installing a new rear lamp assembly.*

Remove the SODL or SODR.

1. Disconnect the electrical connector.
2. Remove the screws.

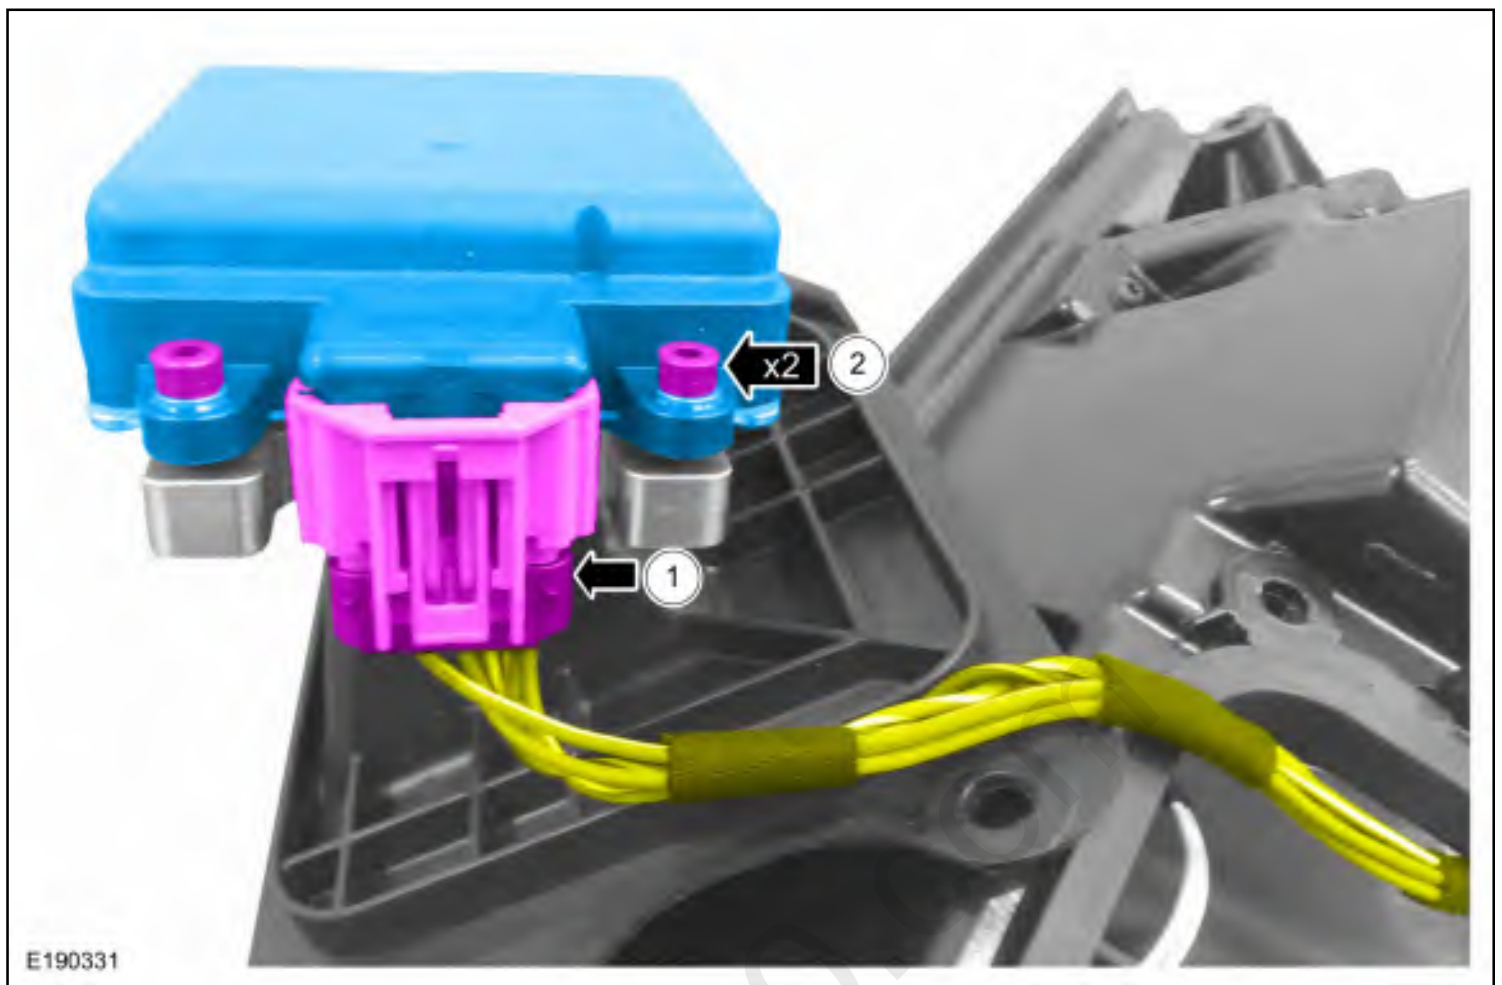

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company