


Ballast

Removal


1. Remove the headlamp assembly.
Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).
2. Remove the screws and the headlamp bracket.

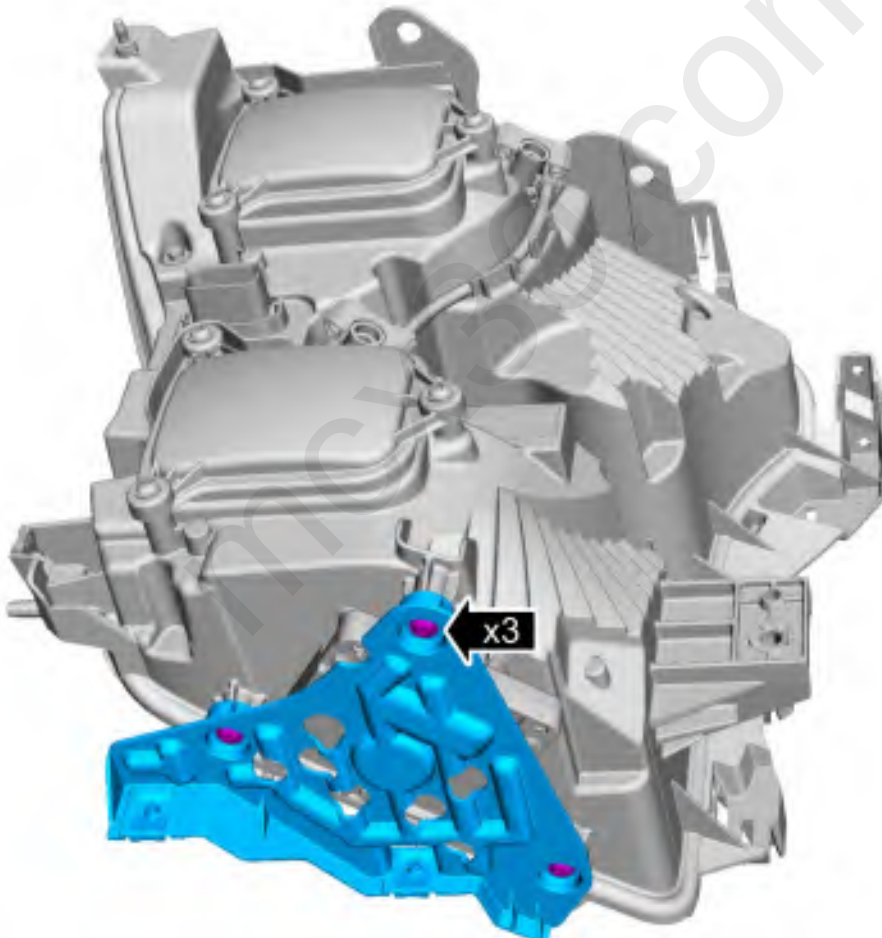

E190427

3. Remove the screws and position the ballast down




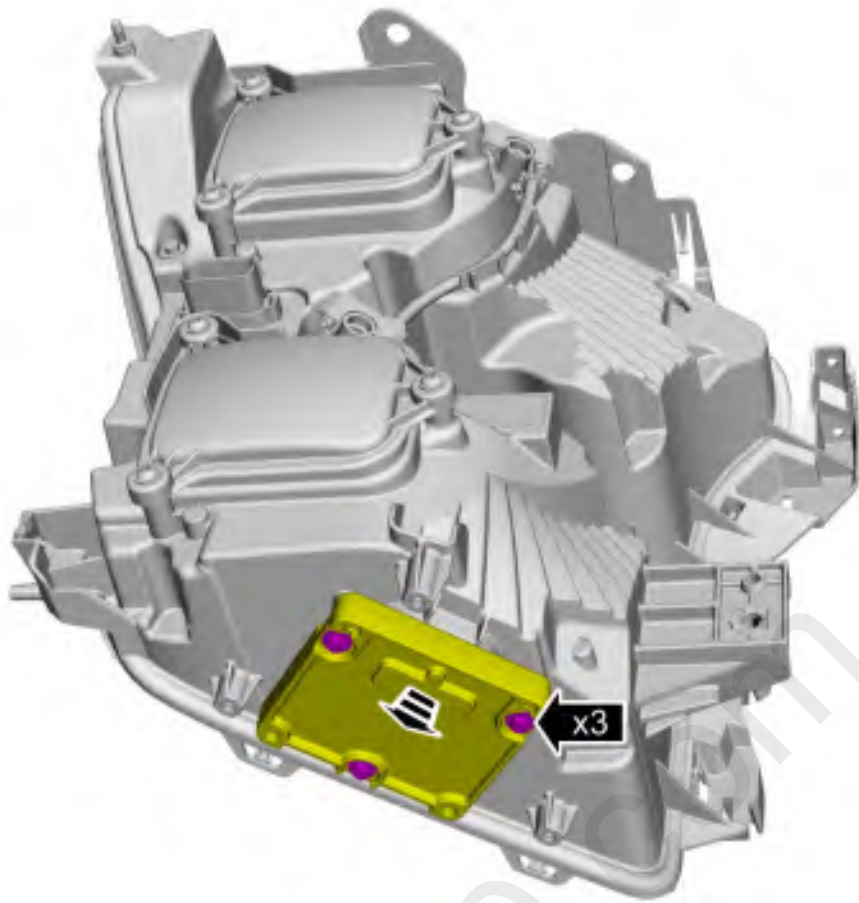

E190429



4. Disconnect the electrical connectors and remove the ballast.

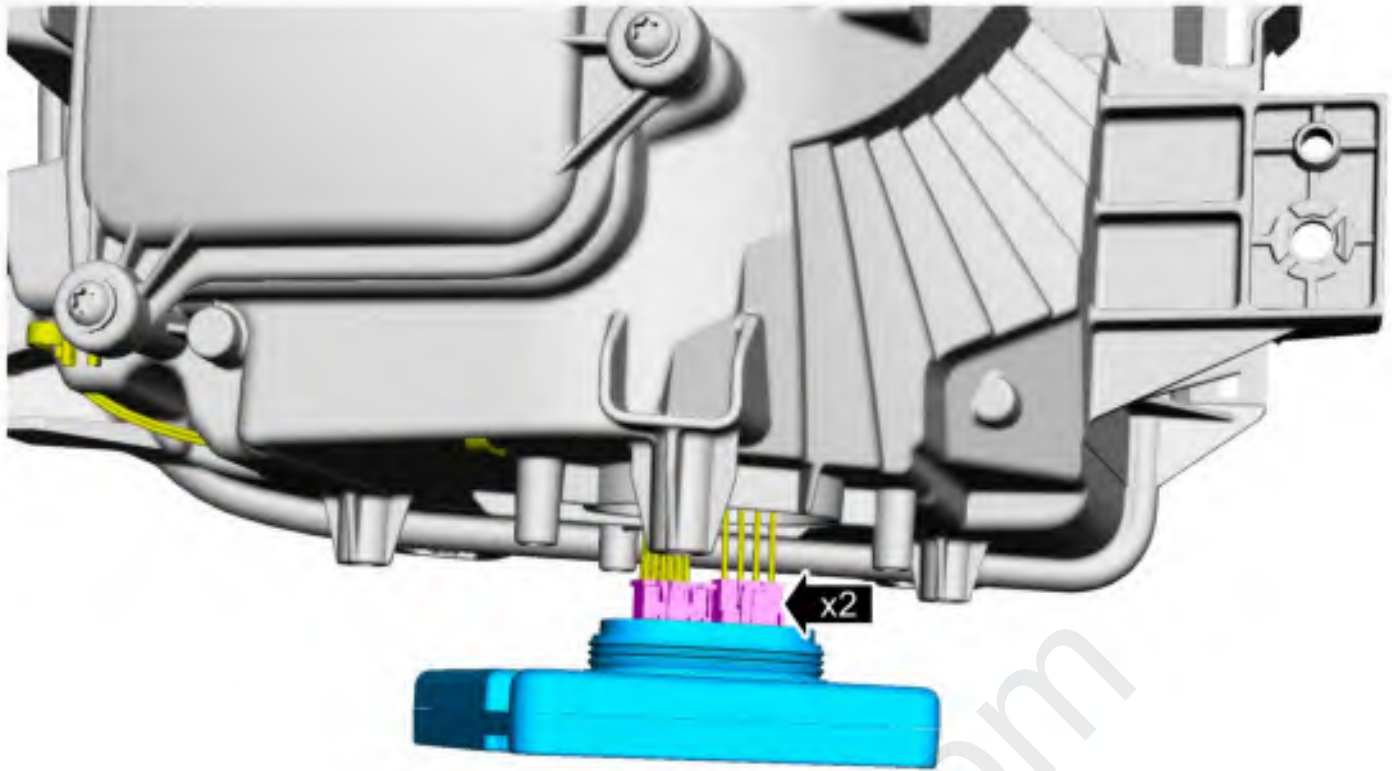

E190430



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company