


Light Sensor

Removal

1. Remove the light sensor.
 1. Using a non-marring tool release and position up the light sensor.
 2. Disconnect the light sensor electrical connector.

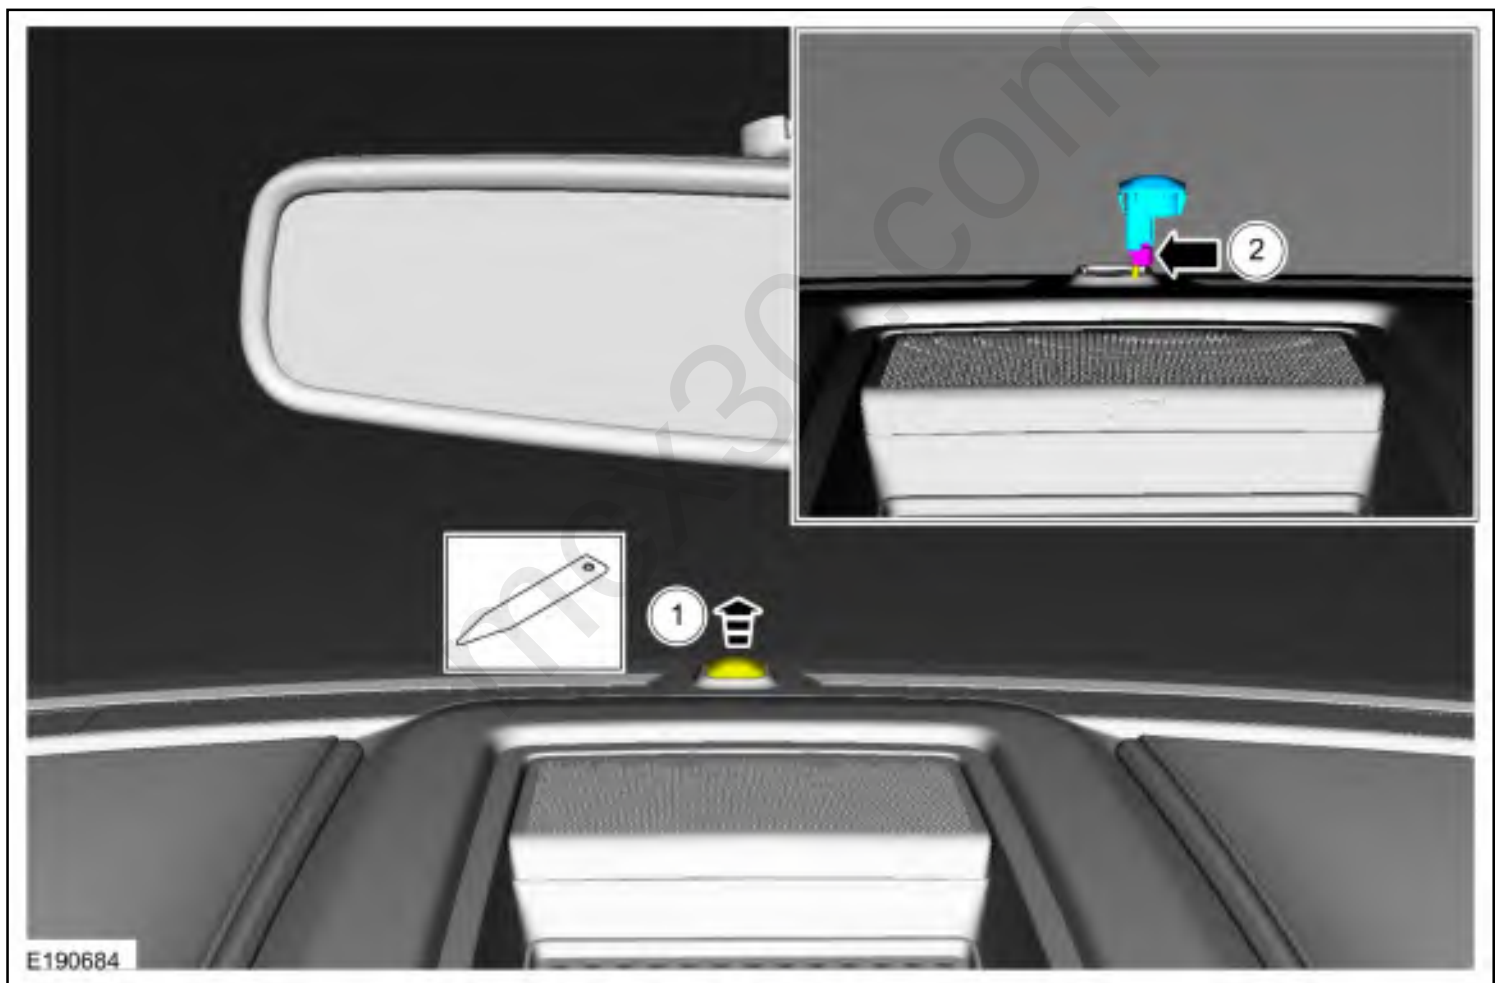

Installation

1. To install, reverse the removal procedure.