

## Front Fog Lamp Bulb

### Removal




**WARNING:** The bulb contains gas under pressure. The bulb may shatter if the glass envelope is scratched or if the bulb is dropped. Handle the bulb only by its base. Avoid touching the glass envelope. Failure to follow these instructions may result in personal injury.


**NOTE:** The fog lamp bulb should not be removed from the fog lamp assembly until just before a new bulb is installed. Removing the bulb for an extended period of time may affect fog lamp bulb performance. Contaminants may enter the fog lamp assembly where they can settle on the lens and reflector. Never turn on the fog lamps with the bulb removed from the fog lamp assembly.

**NOTE:** Make sure the fog lamp switch and ignition switch are in the OFF position.

1. Raise the vehicle on a hoist.  
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the fog lamp electrical connector.

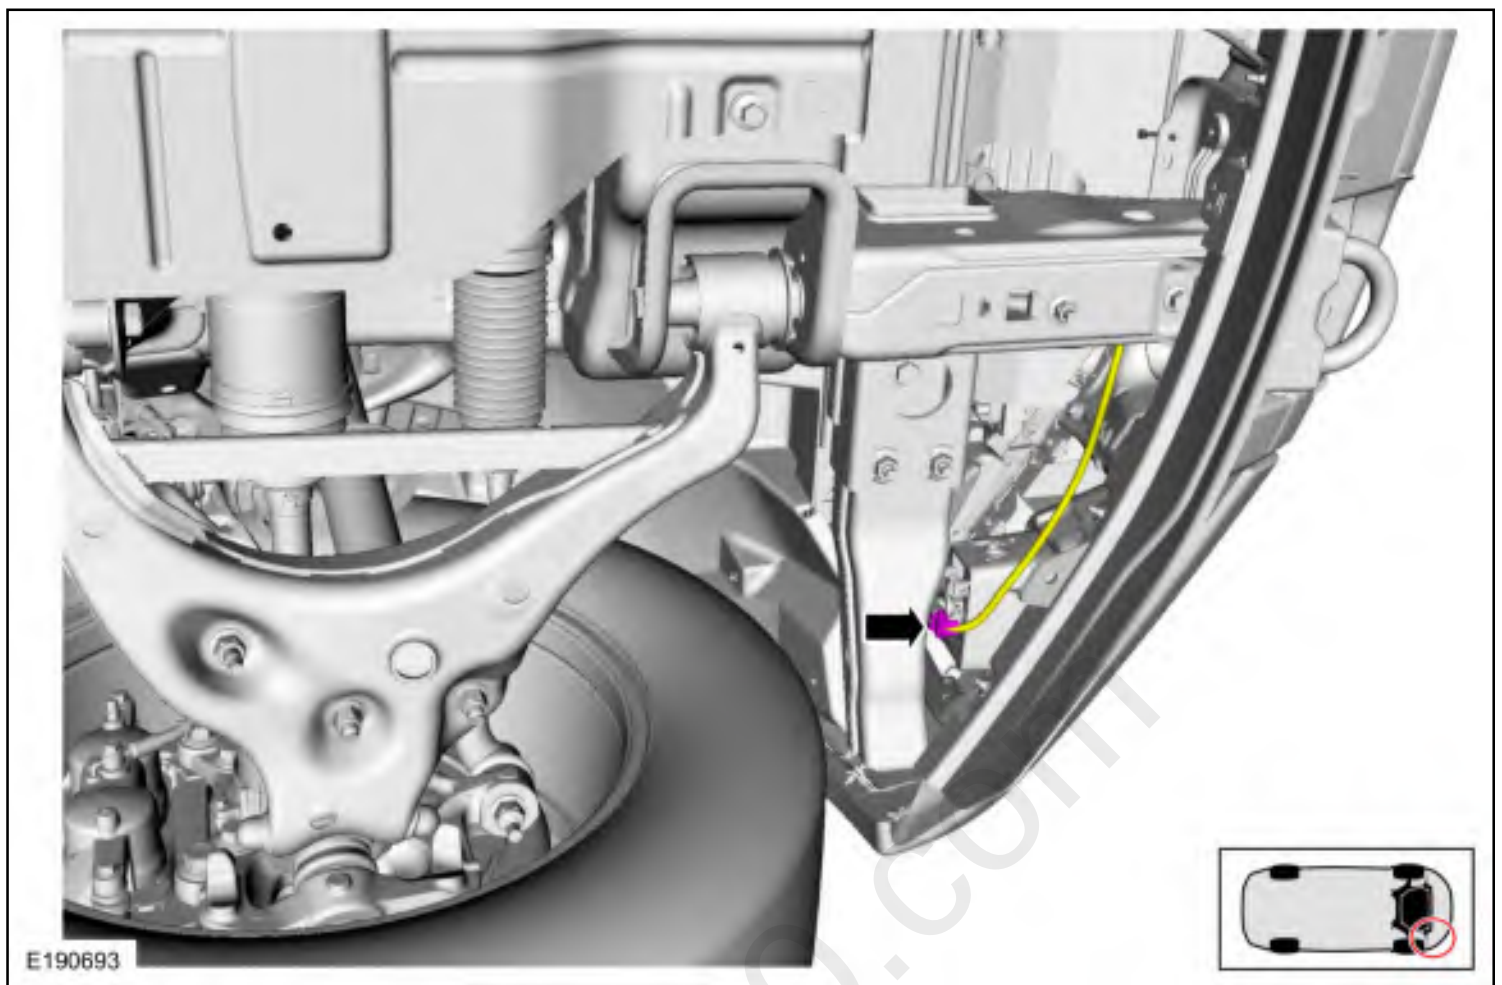

3. Rotate the fog lamp bulb counter clock-wise and remove the bulb.

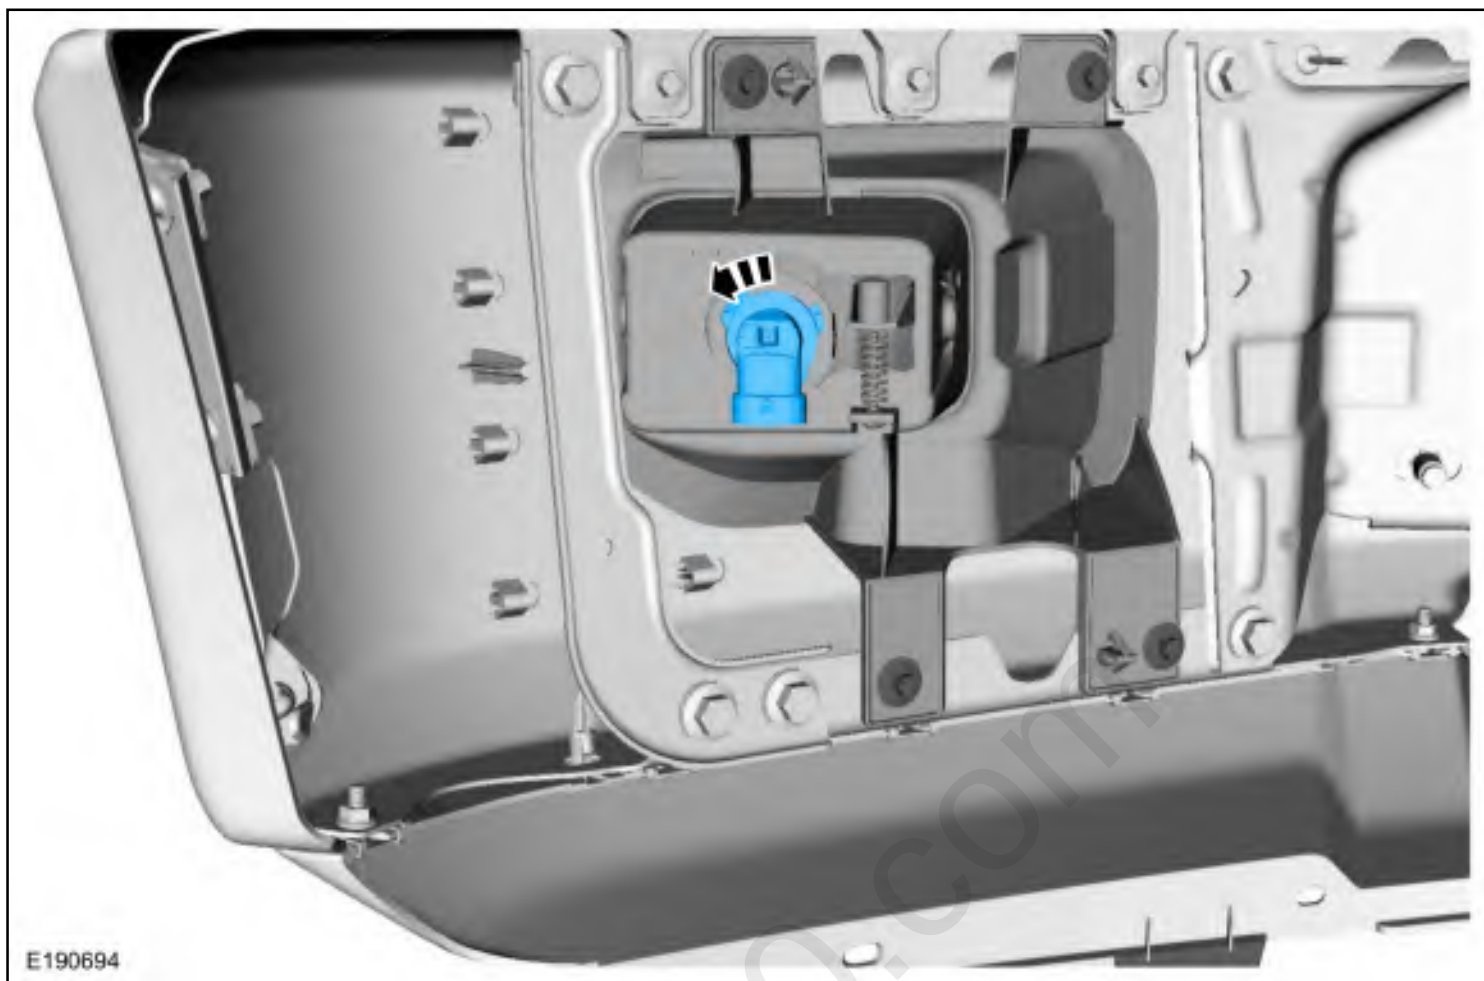

## Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

---