

Front Fog Lamp

Removal

1. Remove the front bumper.
Refer to: [Front Bumper - Raptor](#) (501-19 Bumpers, Removal and Installation).
2. **NOTE:** *On both sides.*

Remove the fog lamp bolts, release the push pins and remove the the fog lamp assembly.
Torque: 48 lb.in (5.4 Nm)



Installation

1. To install, reverse the removal procedure.

2. Adjust the fog lamp.

Refer to: [Front Fog Lamp Adjustment](#) (417-01 Exterior Lighting, General Procedures).

Copyright © 2018 Ford Motor Company

mcx30.com