


Spot Lamp Control Module

Removal

1. Remove the spot lamp control module.
 1. Release the push pin and position the spot lamp control module aside.
 2. Disconnect the spot lamp control module electrical connectors.

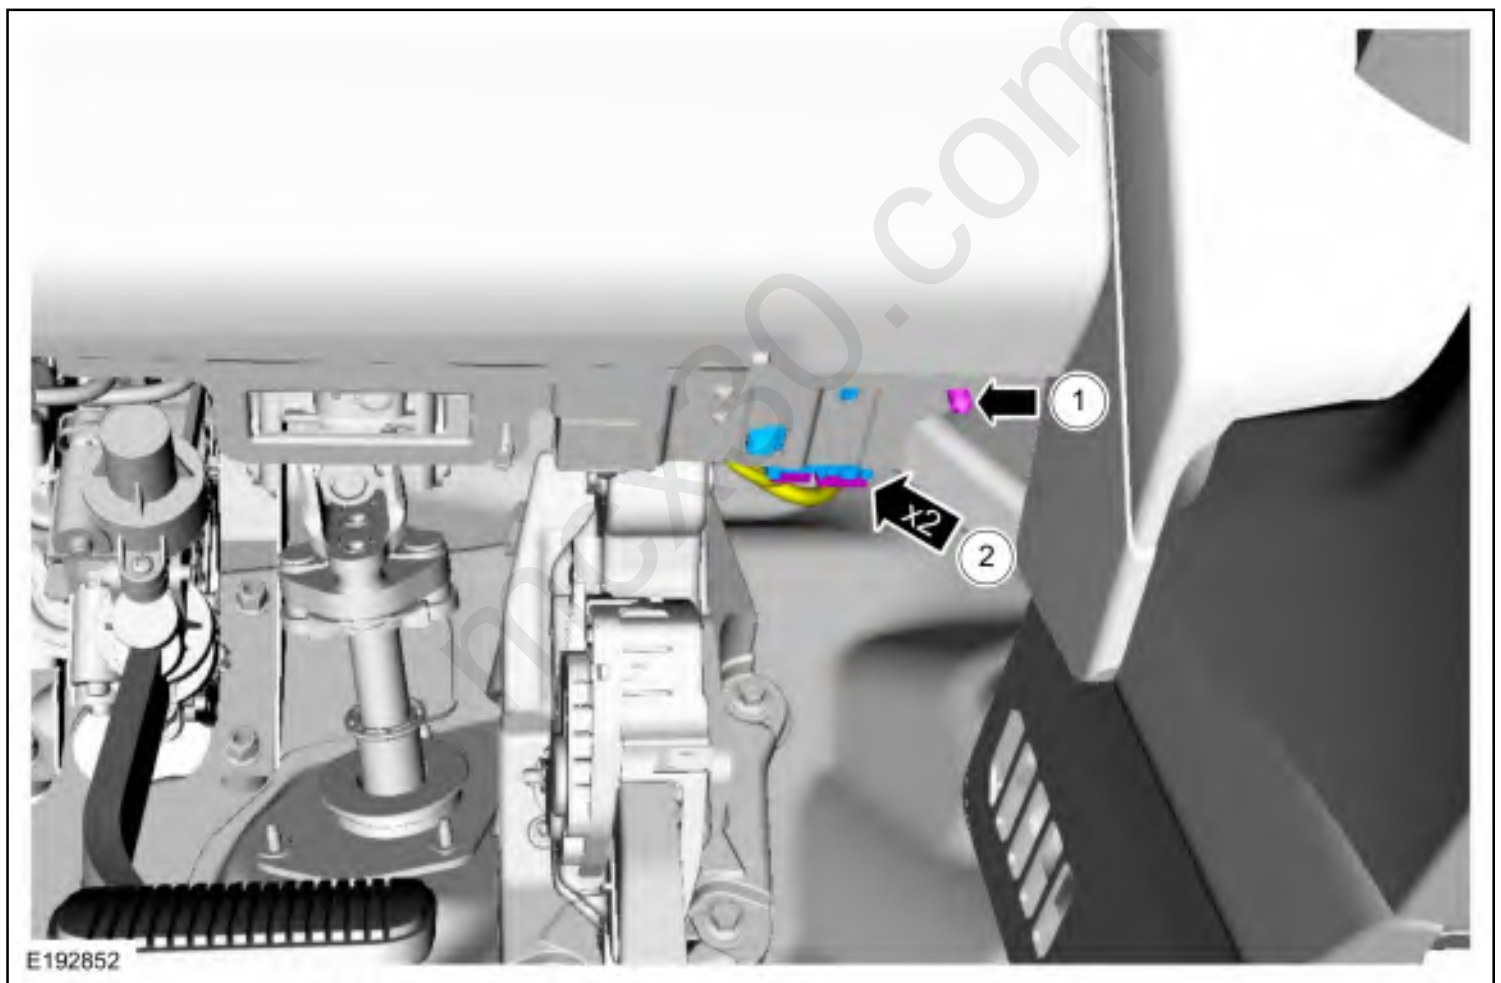


Installation

1. To install, reverse the removal procedure.

Spot Lamp Switch

Removal

1. Remove the LH instrument panel vent.
 1. Position the LH instrument panel vent aside.
 2. Disconnect the LH instrument panel vent electrical connector.

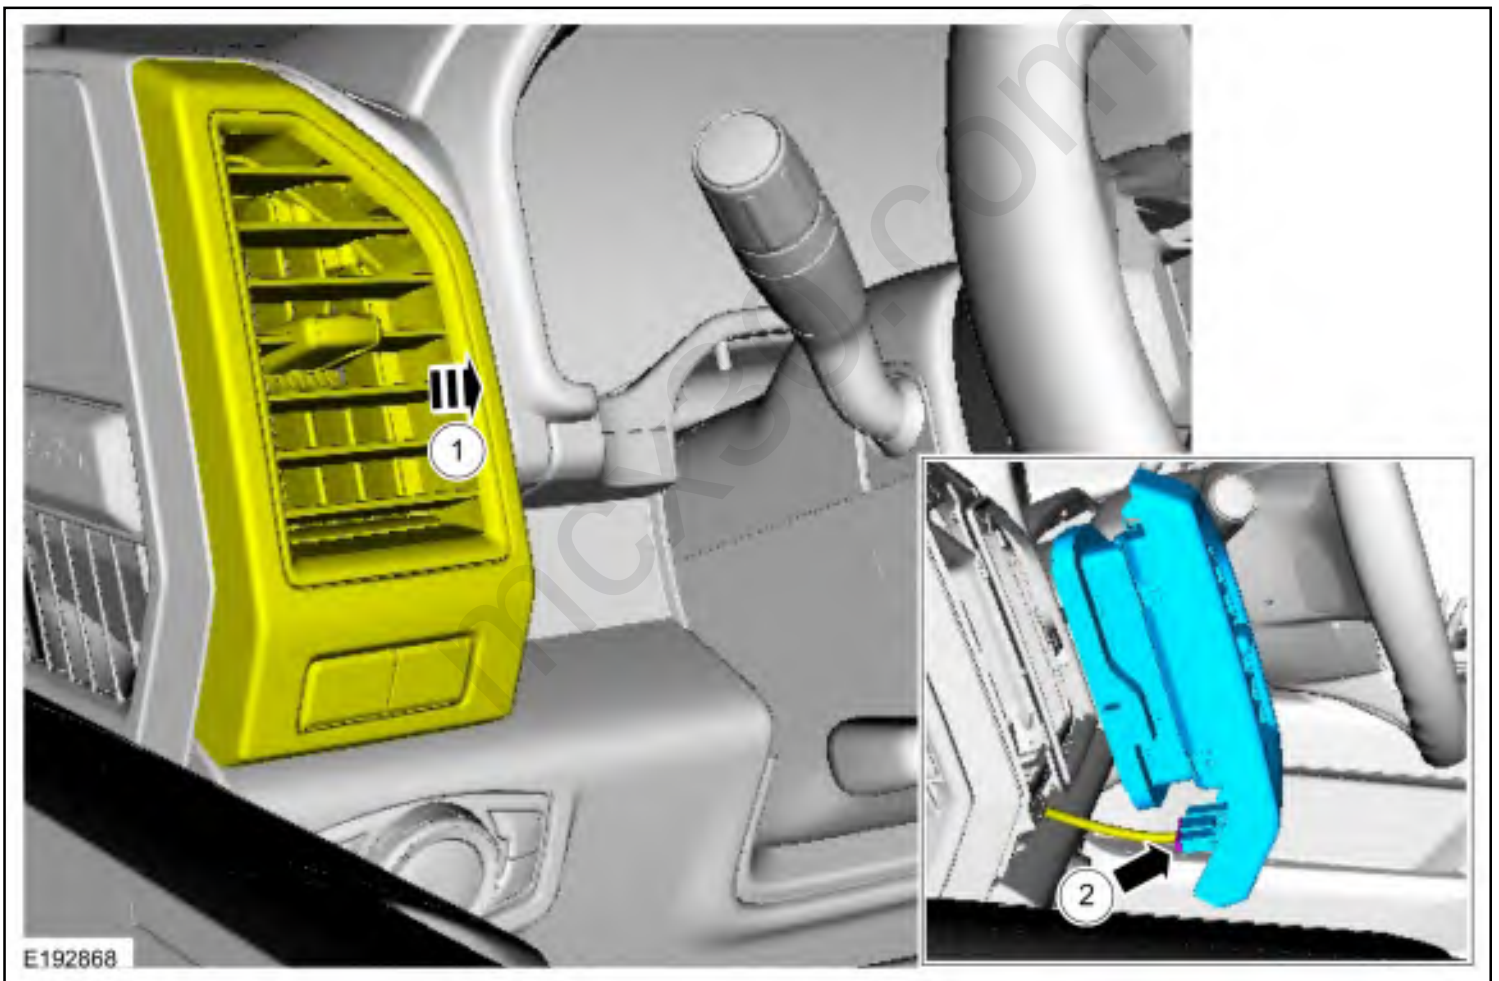

2. Release the locking tabs and remove the spot lamp switch.



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company