

Intrusion Sensor

Removal

1. Remove the overhead console.
Refer to: [Overhead Console](#) (501-12 Instrument Panel and Console, Removal and Installation).
2. Detach the wire harnesses from the retainers, disconnect the retainers and remove the intrusion sensor assembly.

