


Cruise Control - System Operation and Component Description

System Operation

Non-Adaptive Cruise Control

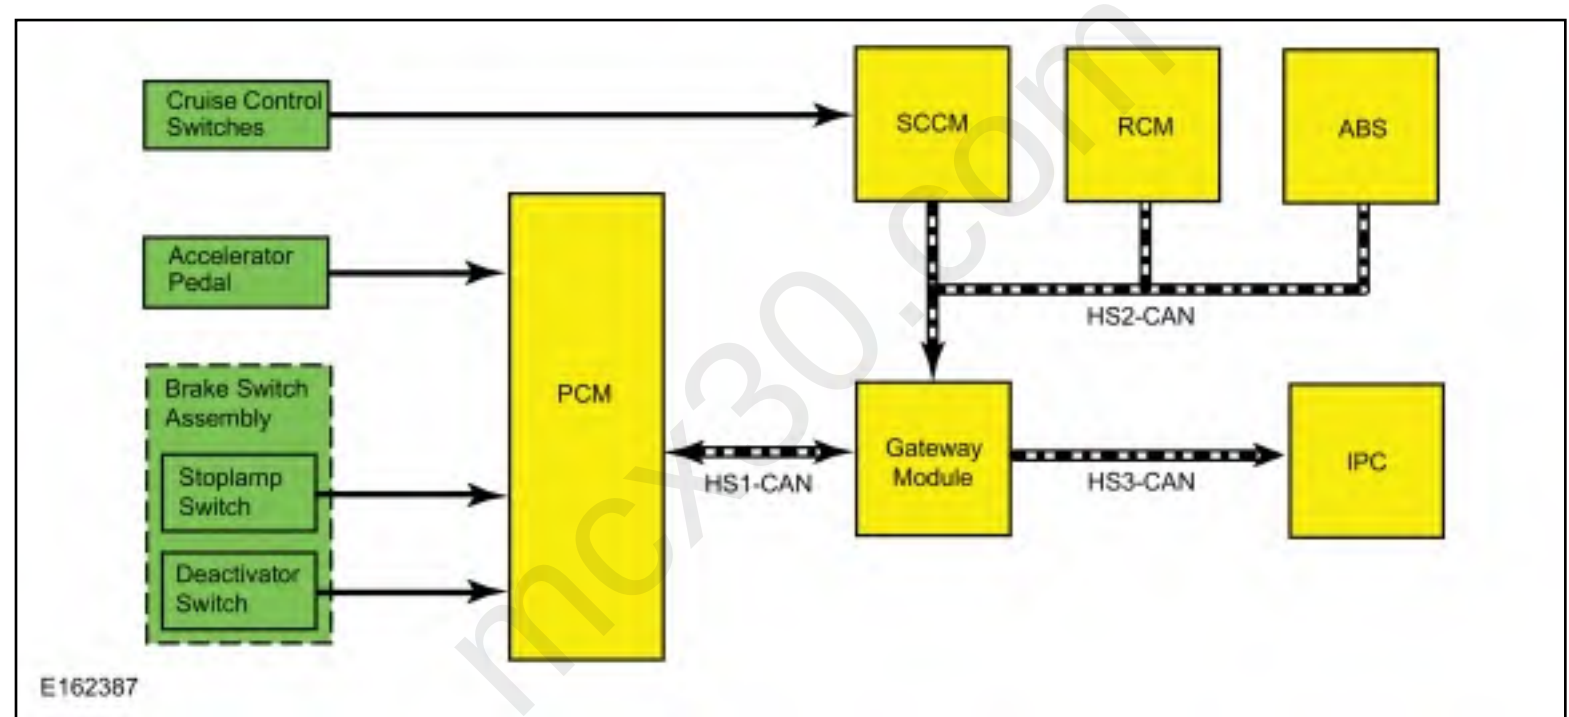

Network Message Chart

Network Input Messages - IPC

Broadcast Message	Originating Module	Message Purpose
Cruise control override	PCM	Driver overriding cruise control with accelerator pedal.
Cruise control status	PCM	Data used for speed control indicator status.