



Head Up Display (HUD) Module

Removal

1. Using a non-marring tool, release the heads up display tab and position the heads up display aside.

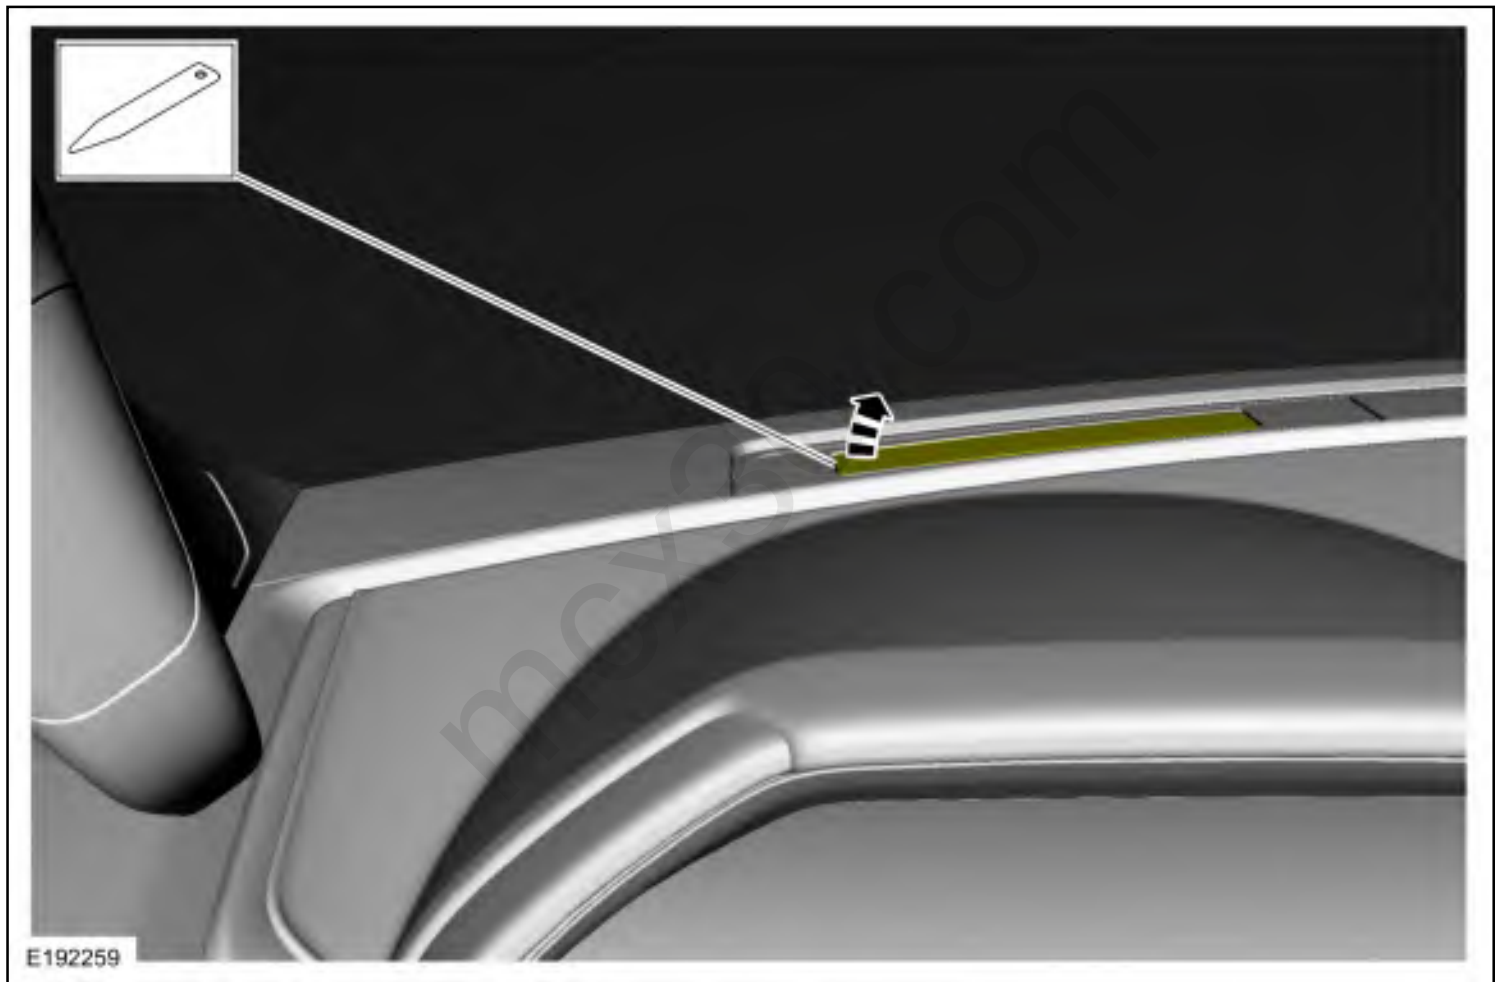

2. Disconnect the electrical connector and remove the heads up display.

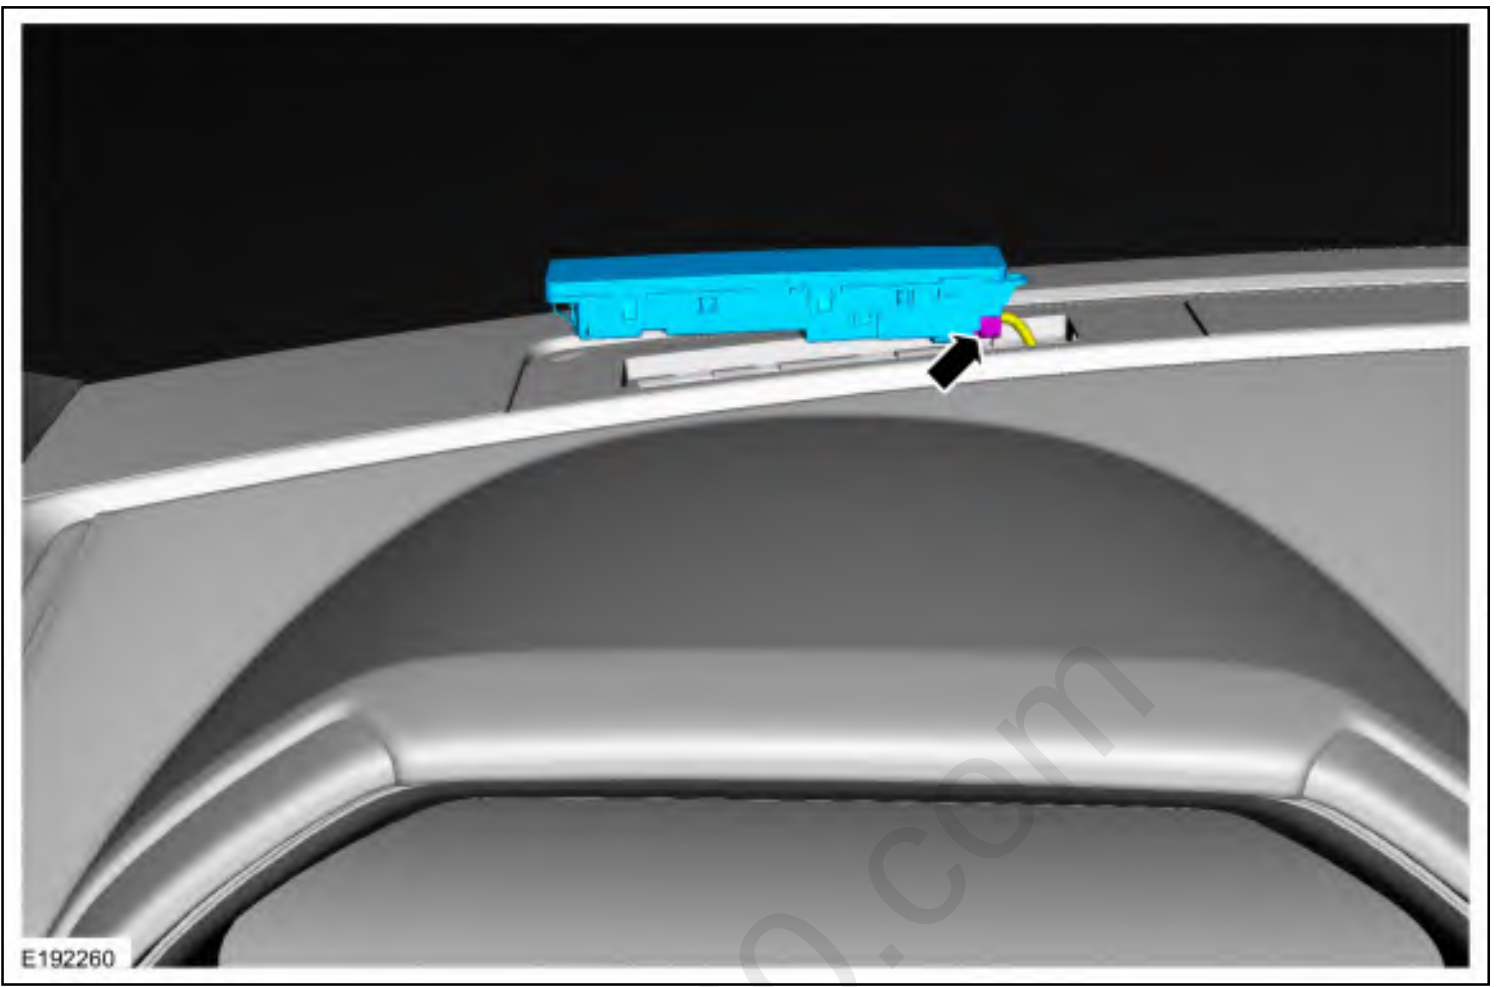

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company