

Snow Plow Package

The optional snowplow package adds a switch to the instrument panel and blunt cut for customer access. When the snowplow switch is enabled, a ground signal is received by the FCIM from the snowplow switch. The FCIM sends a message to the BCM which then grounds the rear heated seats/customer access relay control circuit. When the relay is energized, power is diverted from the rear heated seats and applied to the customer access blunt cut. When the snowplow switch is active, the following systems are disabled:

- AC inverter
- Fog lamps
- Heated steering wheel
- Heated seats
- Massaging seats

For more information on the snowplow package, refer to the Owner's Literature.

Copyright © 2018 Ford Motor Company
