

Auxiliary Switches

Customer Access (Upfitter) System

The auxiliary switch adds six switches to the overhead console. The switches control six relays which can be used by an upfitter for controlling customer installed accessories. Each auxiliary switch has an indicator that illuminates when the switch is in the ON position. When the ignition is in the RUN or START state, the 6 auxiliary switches enable its corresponding upfitter relay in the BJB.

Refer to Wiring Diagrams Cell 140 for schematic and connector information.

For accurate diagnostics of customer (upfitter) installed devices, it will be necessary to refer to the upfitter literature for information.

For more information, refer to the Owner's Literature and **www.fleet.ford.com** for truck body builder advisory service bulletins.

Copyright © 2018 Ford Motor Company
