

Snow Plow Package

Inspection and Verification

1. Verify the customer concern by operating the heated seats and snowplow.
2. Verify BJB fuse is ok.
3. If an obvious cause for an observed or reported concern is found, correct the cause (if possible) before proceeding.
4. Using the diagnostic scan tool, retrieve all Diagnostic Trouble Codes (DTCs). Refer to the appropriate DTC Chart.

DTC Charts

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices.

REFER to: [Diagnostic Methods](#) (100-00 General Information, Description and Operation).

BCM DTC Chart

DTC	Description	Action
B14B6:12	Snow Plow Output: Circuit Short To Battery	GO to Pinpoint Test A
B14B6:14	Snow Plow Output: Circuit Short To Ground or Open	GO to Pinpoint Test A
All Other DTCs	—	REFER to: Body Control Module (BCM) (419-10 Multifunction Electronic Modules) .