

Radio Transceiver Module (RTM)

Removal

1. **NOTE:** *If installing a new module, it is necessary to upload the module configuration information to the diagnostic scan tool prior to removing the module. This information must be downloaded into the new module after installation.*

Using a diagnostic scan tool, begin the PMI process for the RTM following the on-screen instructions.


2. Lower the headliner.

Refer to: [Headliner - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Headliner - SuperCab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Headliner - SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

1. Disconnect the electrical connector.
2. Release the tab.
3. Rotate the RTM downward and remove.

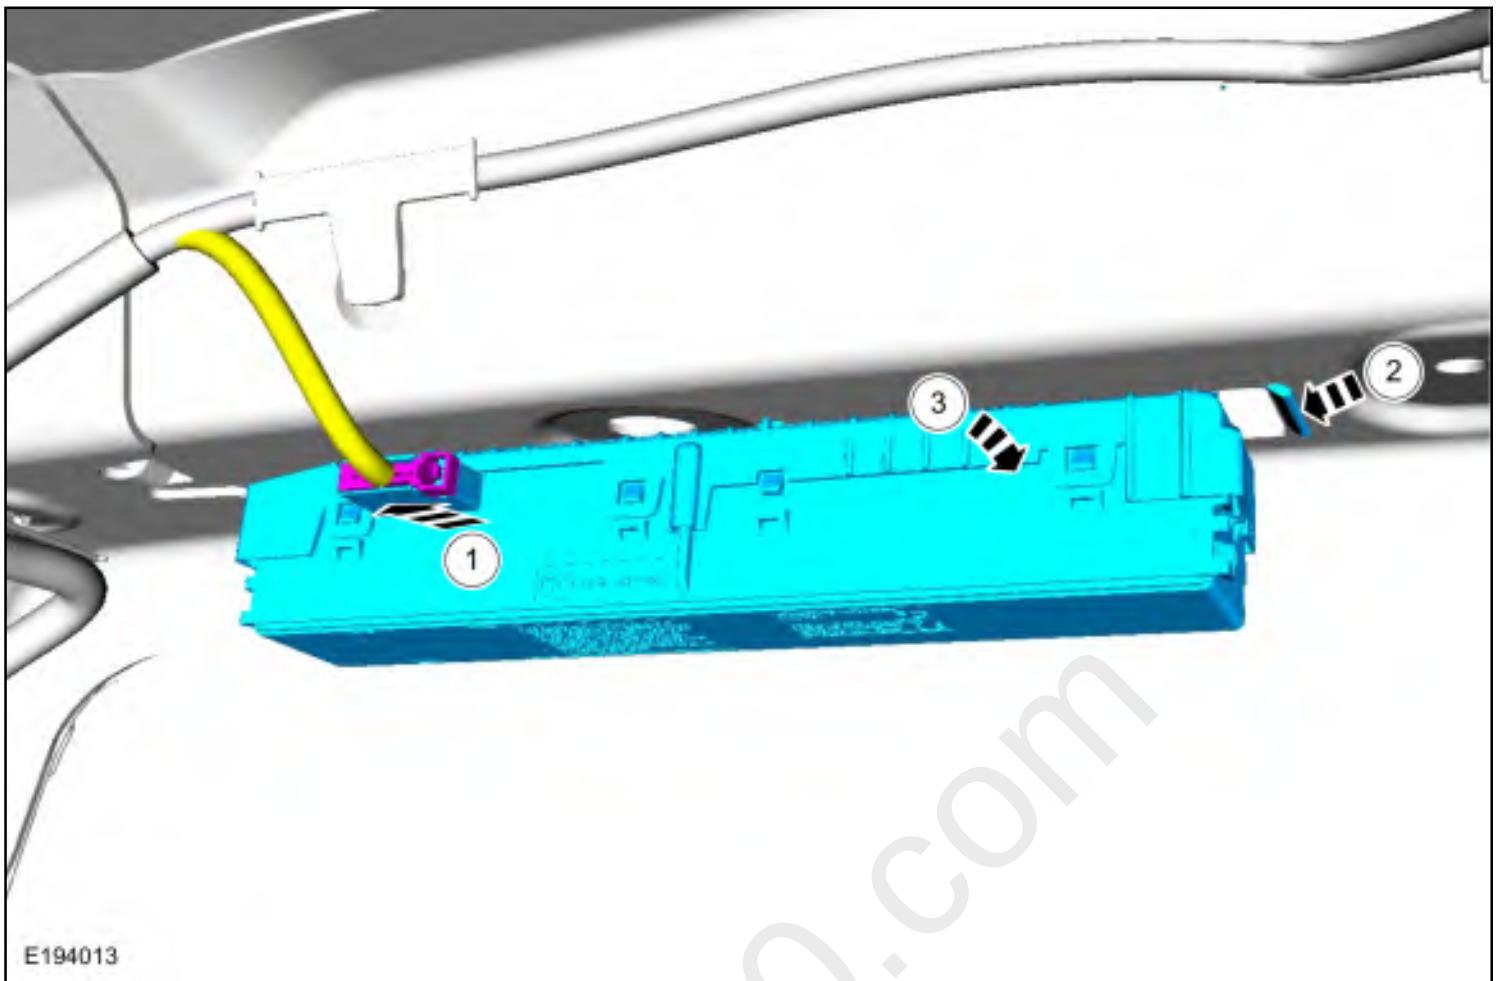

Installation

1. To install, reverse the removal procedure.
2. Using a diagnostic scan tool, complete the PMI process for the RTM following the on-screen instructions.

Copyright © 2018 Ford Motor Company