


Driver Door Module (DDM)

Removal

1. **NOTE:** *If installing a new module, it is necessary to upload the module configuration information to the diagnostic scan tool prior to removing the module. This information must be downloaded into the new module after installation.*

Using a diagnostic scan tool, begin the PMI process for the DDM following the on-screen instructions.

2. Remove the Front door trim panel.
Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
 1. Disconnect the electrical connectors.
 2. Remove the DDM by lifting upwards.

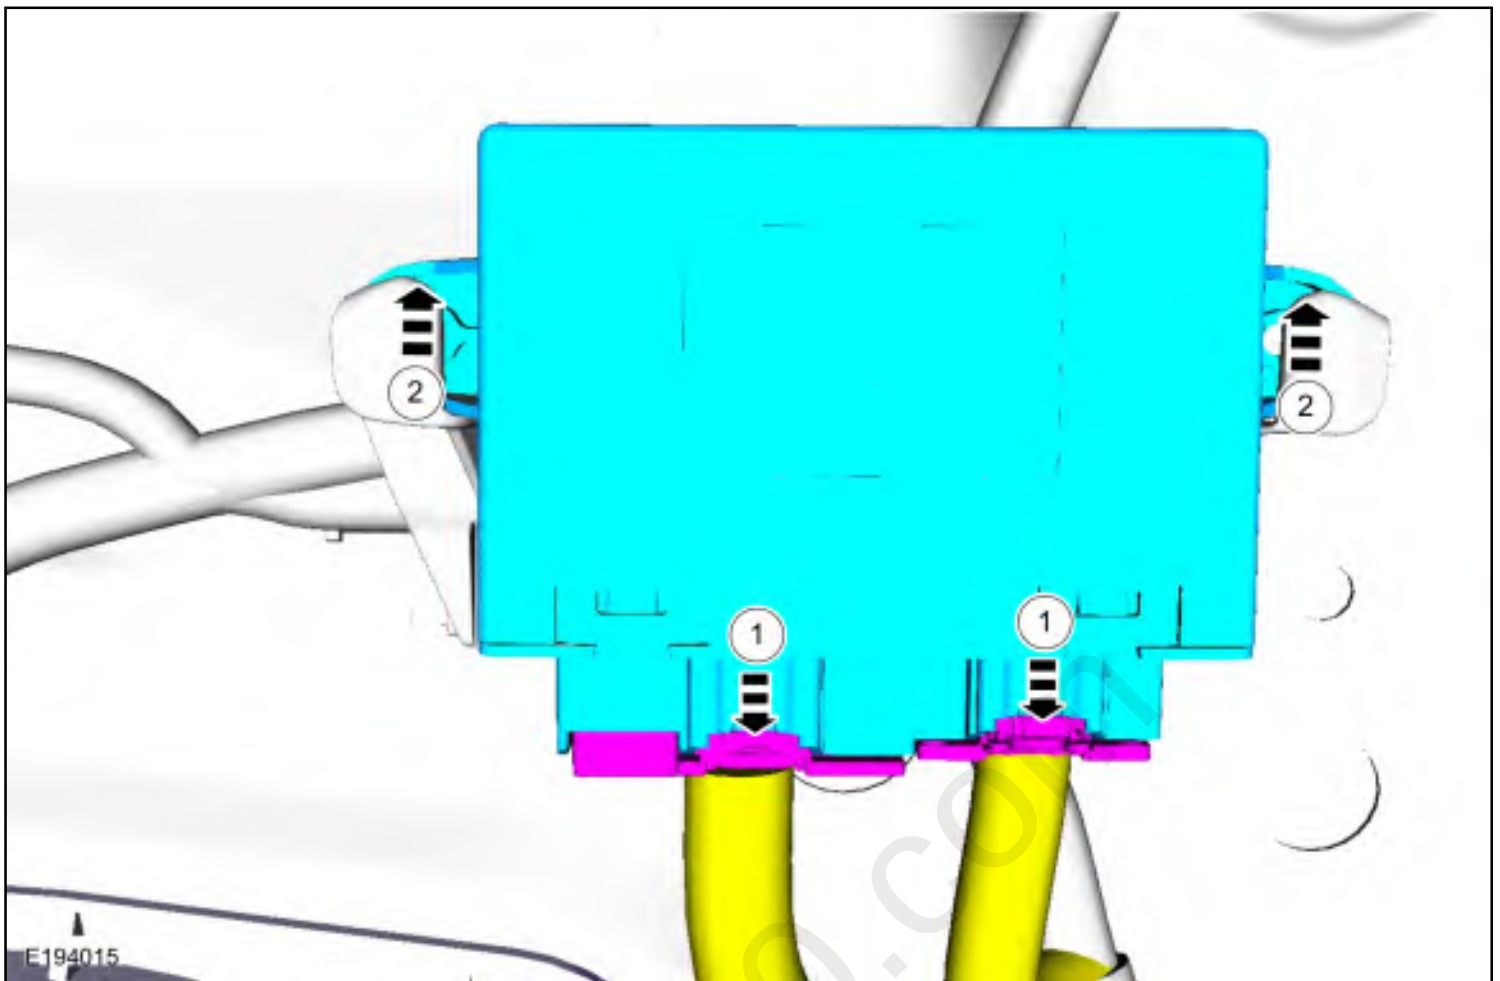

Installation

1. To install, reverse the removal procedure.
2. Using a diagnostic scan tool, complete the PMI process for the DDM following the on-screen instructions.