

Engine Rear Undershield

1. **NOTICE:** Support the engine rear undershield while the fasteners are being removed and installed. Do not support the engine rear undershield by any less than the total number of fasteners at any time.

Holding the shield in its correct position, remove the fasteners and the engine rear undershield.
Torque: 71 lb.in (8 Nm)

