


Active Grille Shutter Actuator - Raptor

Removal

Upper active grille shutter actuator


1. Remove the radiator grille.
Refer to: [Radiator Grille - Raptor](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
2. Release the clips, and remove the linkage.

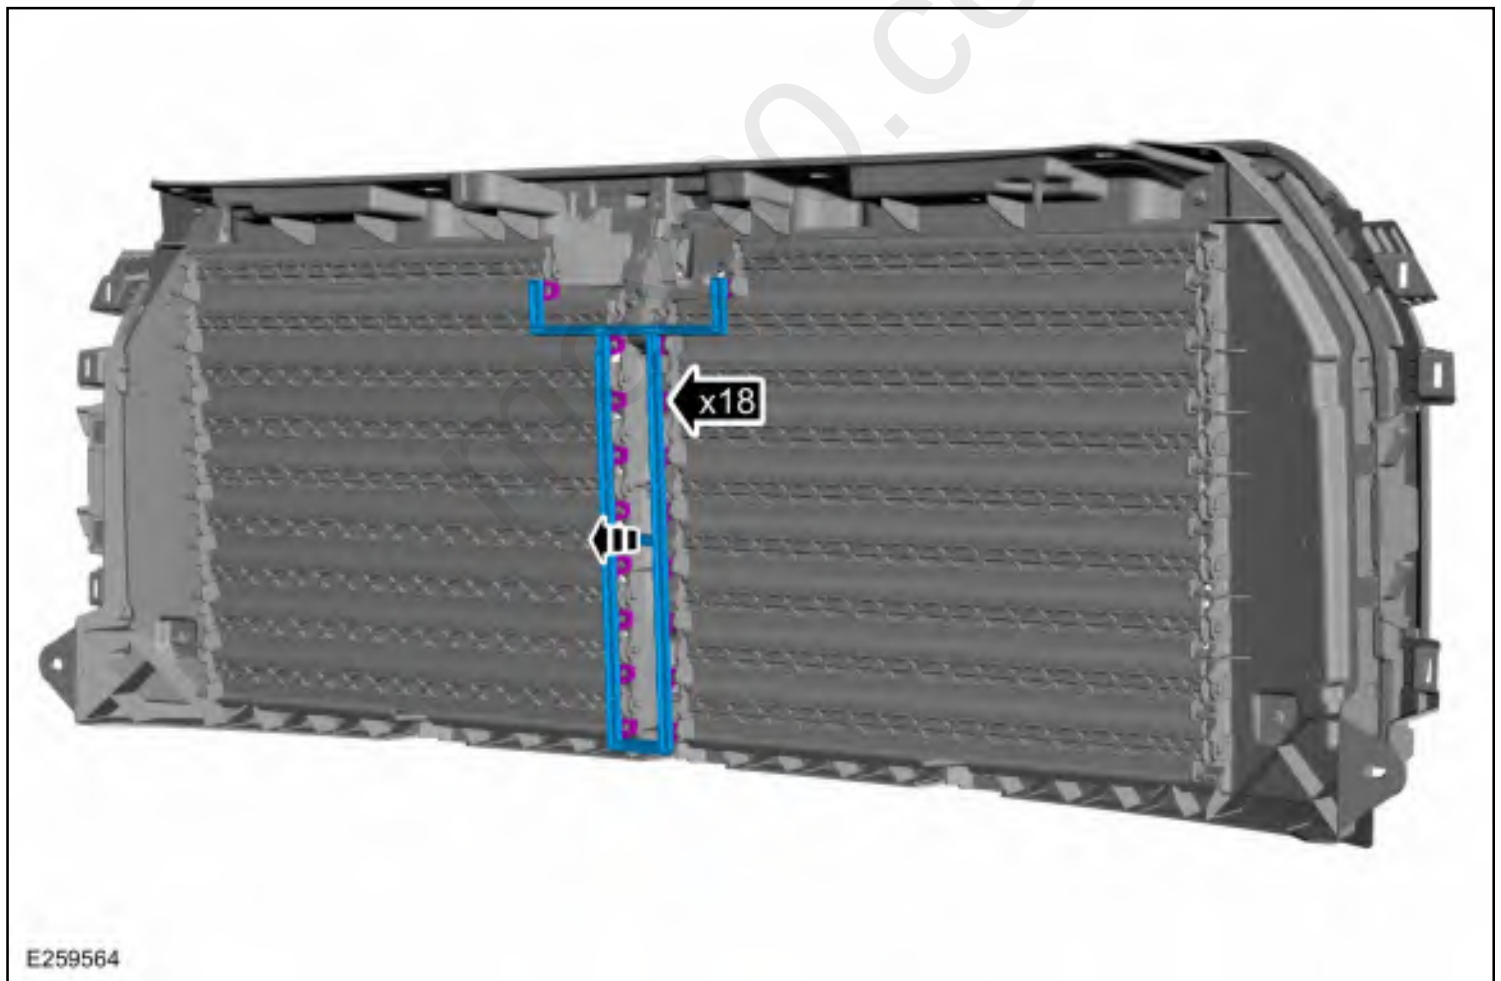

3. **NOTE:** The upper active grille shutter actuator is not interchangeable with the lower active grill


shutter actuator. Do not attempt to replace one actuator with the other.

Using a screwdriver, push down on the clip and remove the upper active grille shutter actuator.

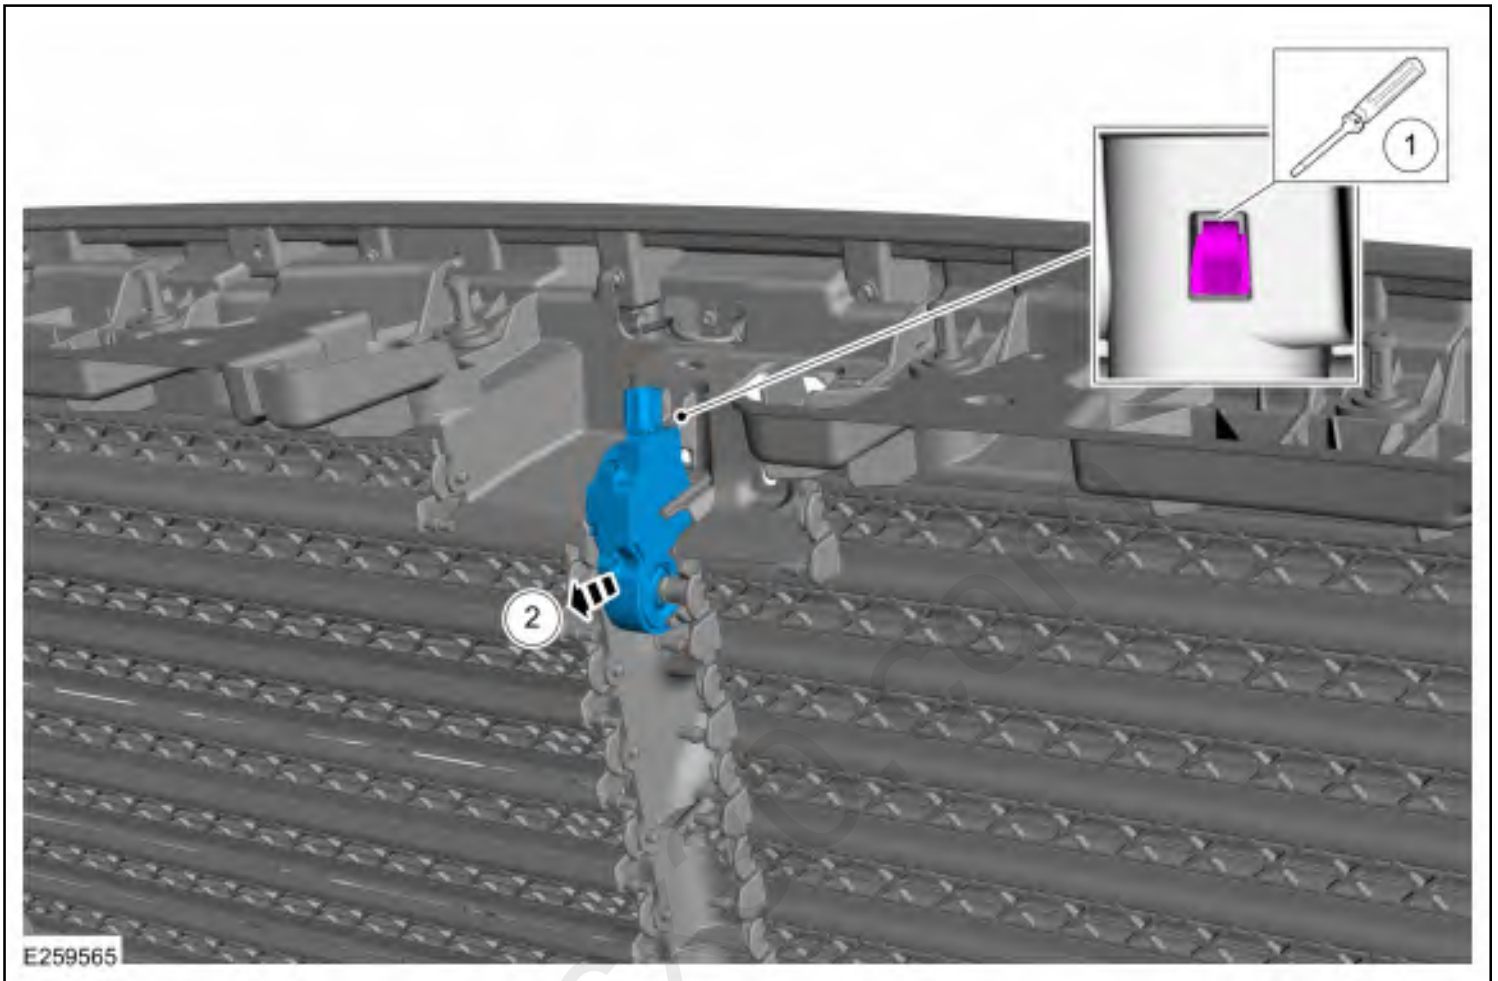


Lower active grille shutter actuator

4. Remove the front bumper.
Refer to: [Front Bumper - Raptor](#) (501-19 Bumpers, Removal and Installation).
5. Disconnect the electrical connector.

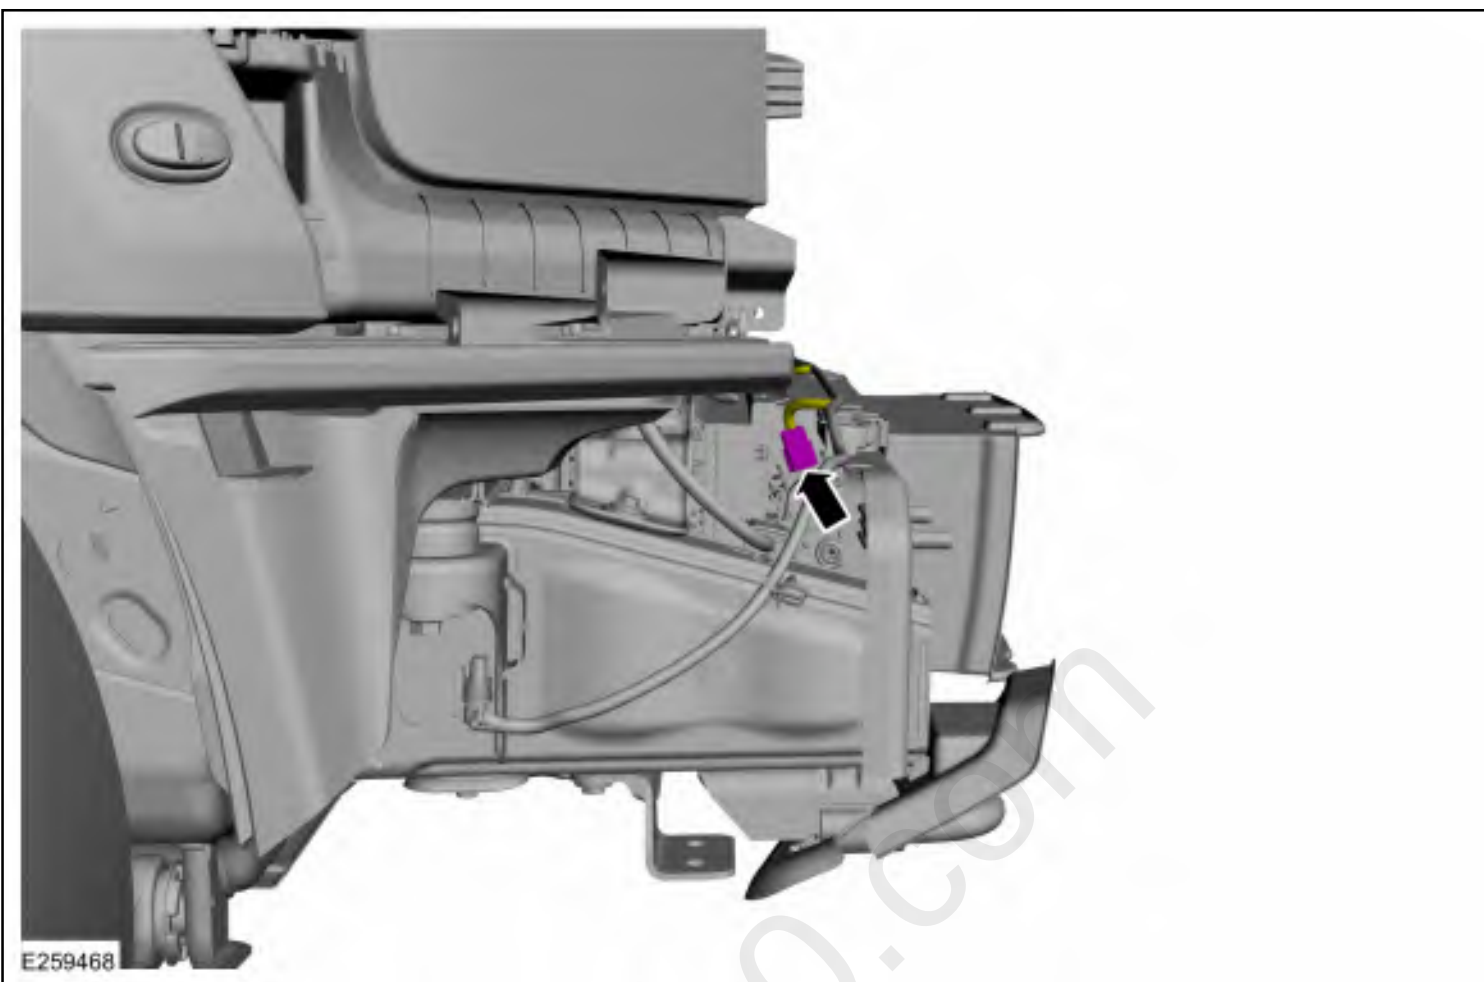


6. Remove the clip.

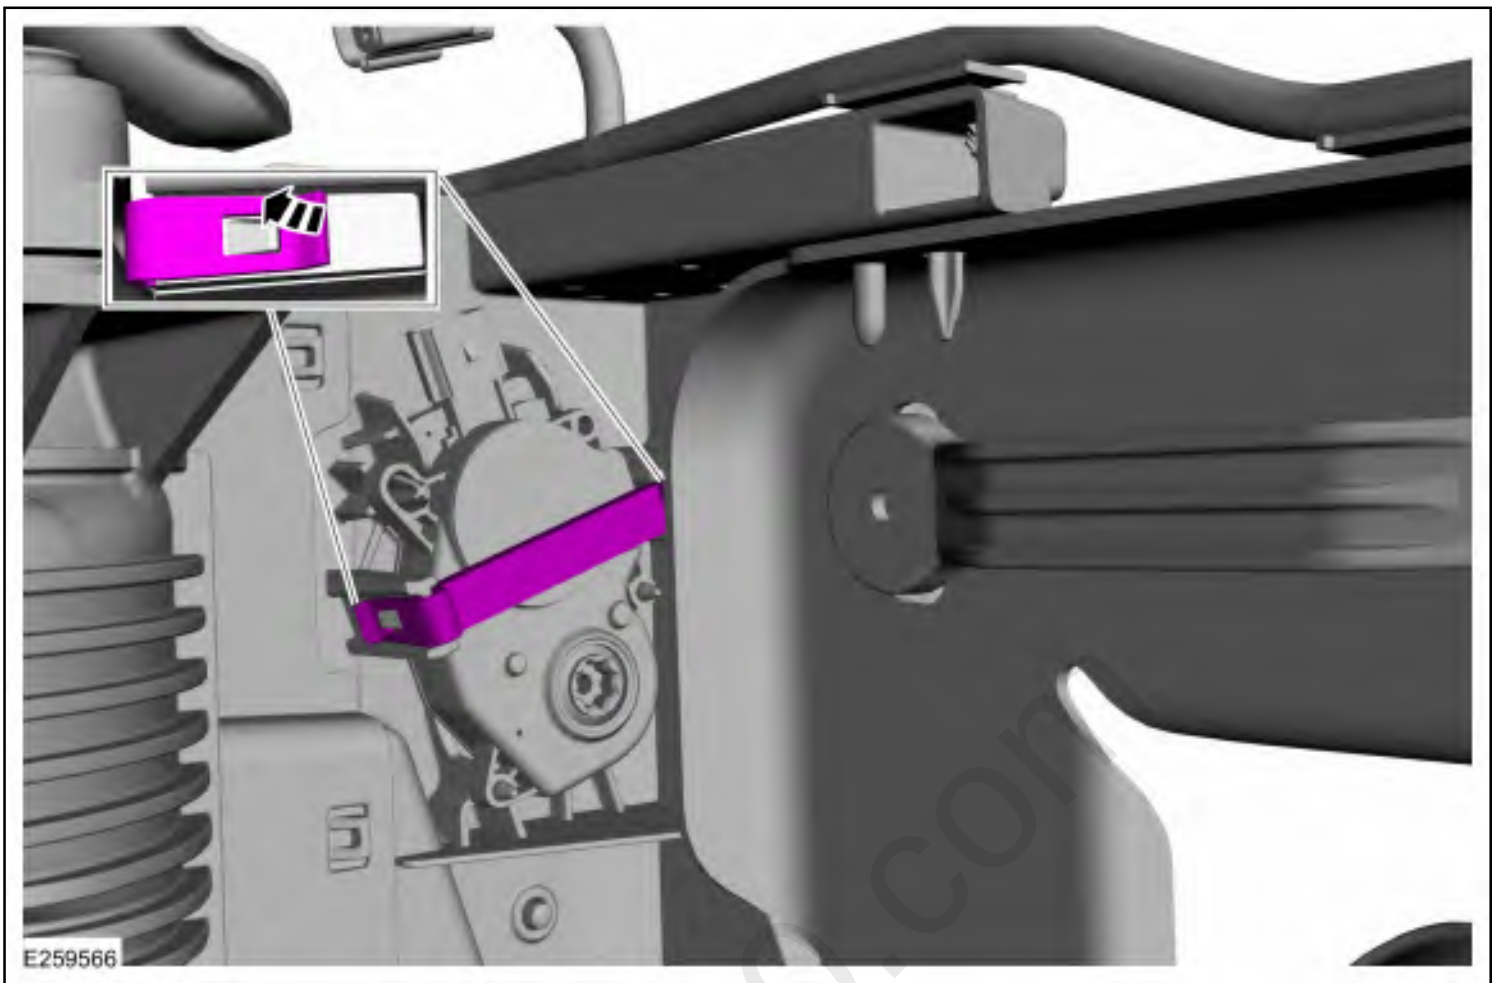

7. **NOTE:** *The upper active grille shutter actuator is not interchangeable with the lower active grill shutter actuator. Do not attempt to replace one actuator with the other.*

Remove the lower active grille shutter actuator.

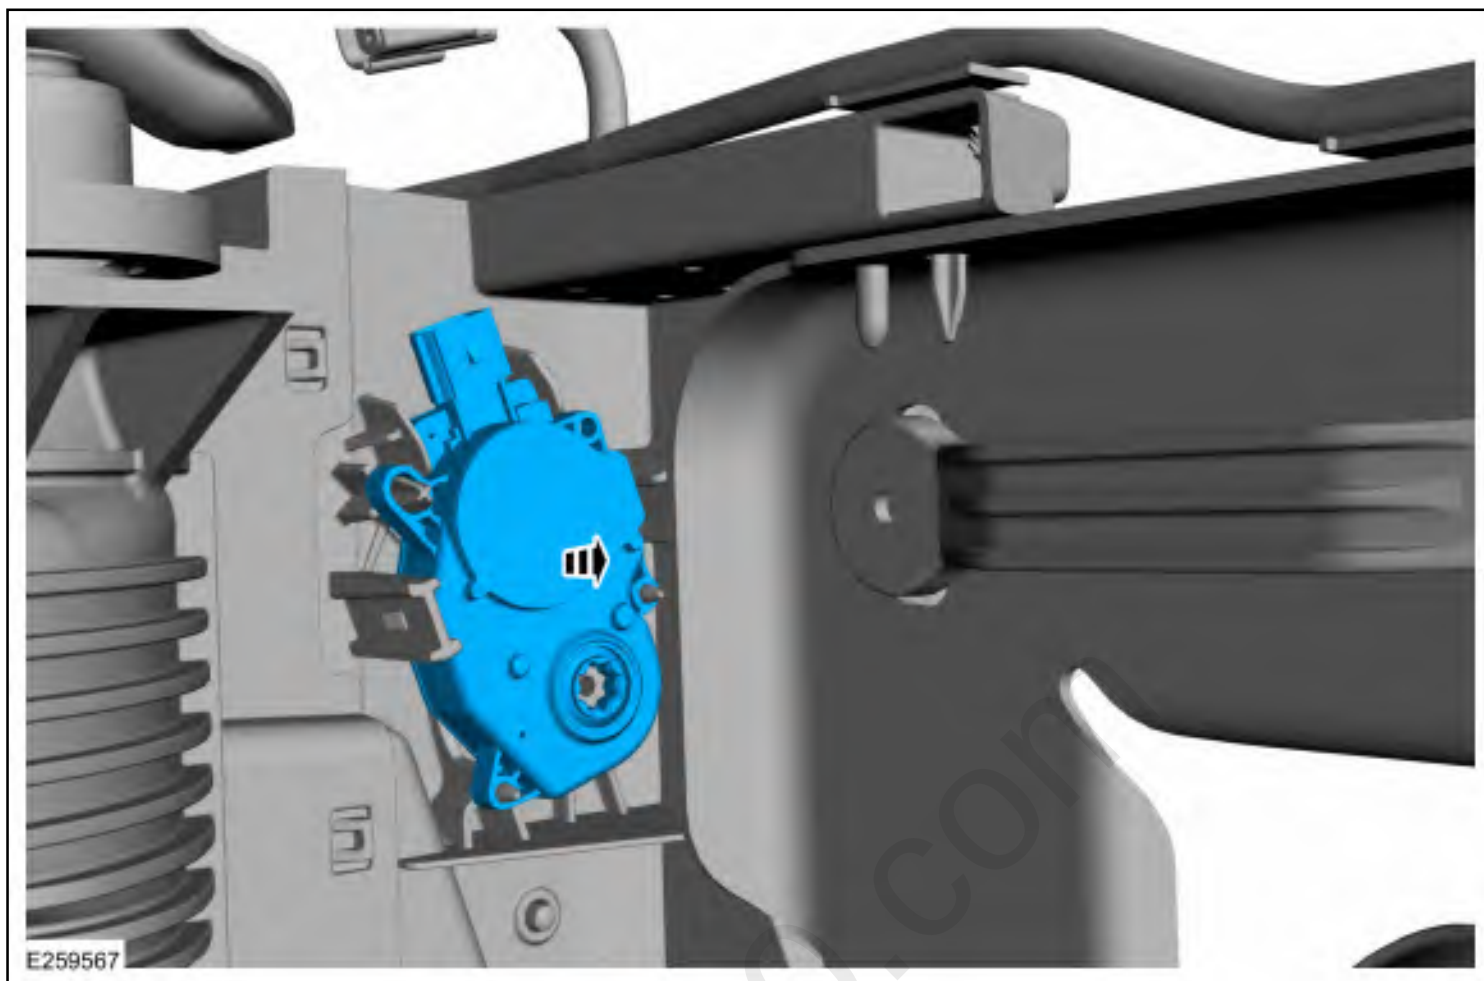

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
