


Fender Splash Shield

Base Part Number: Base Part Number: 16054


Removal

NOTE: LH side shown, RH side similar.


1. Remove the wheel and tire.
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. If equipped.
Remove the pin-type retainer and position aside the front fender moulding.

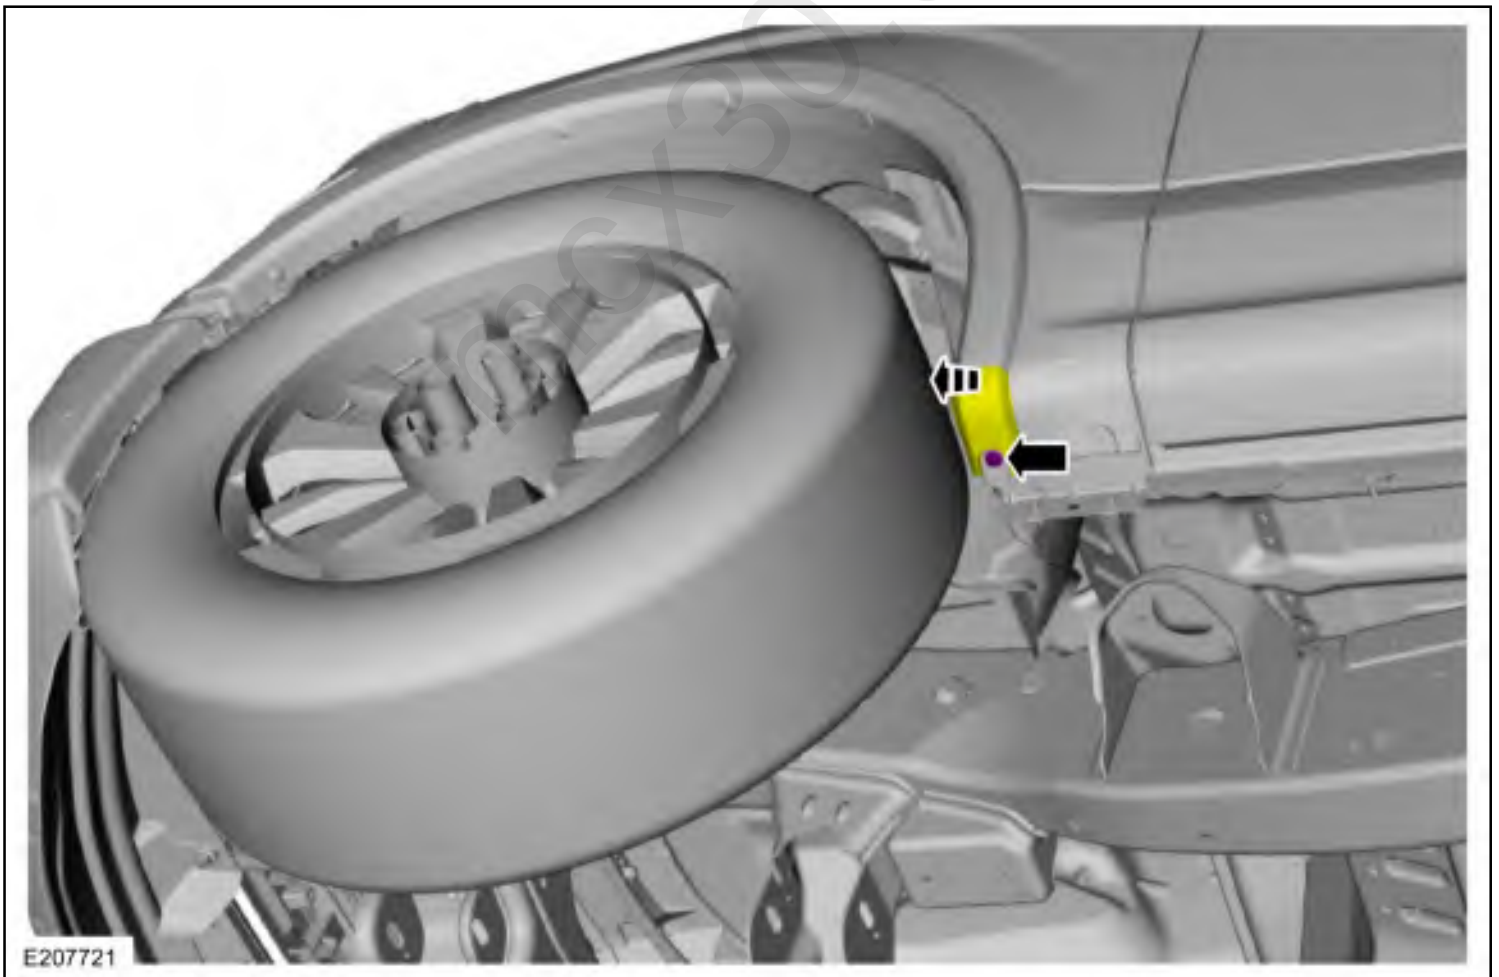

3. Remove the bolts.
Torque: 15 lb.in (1.7 Nm)

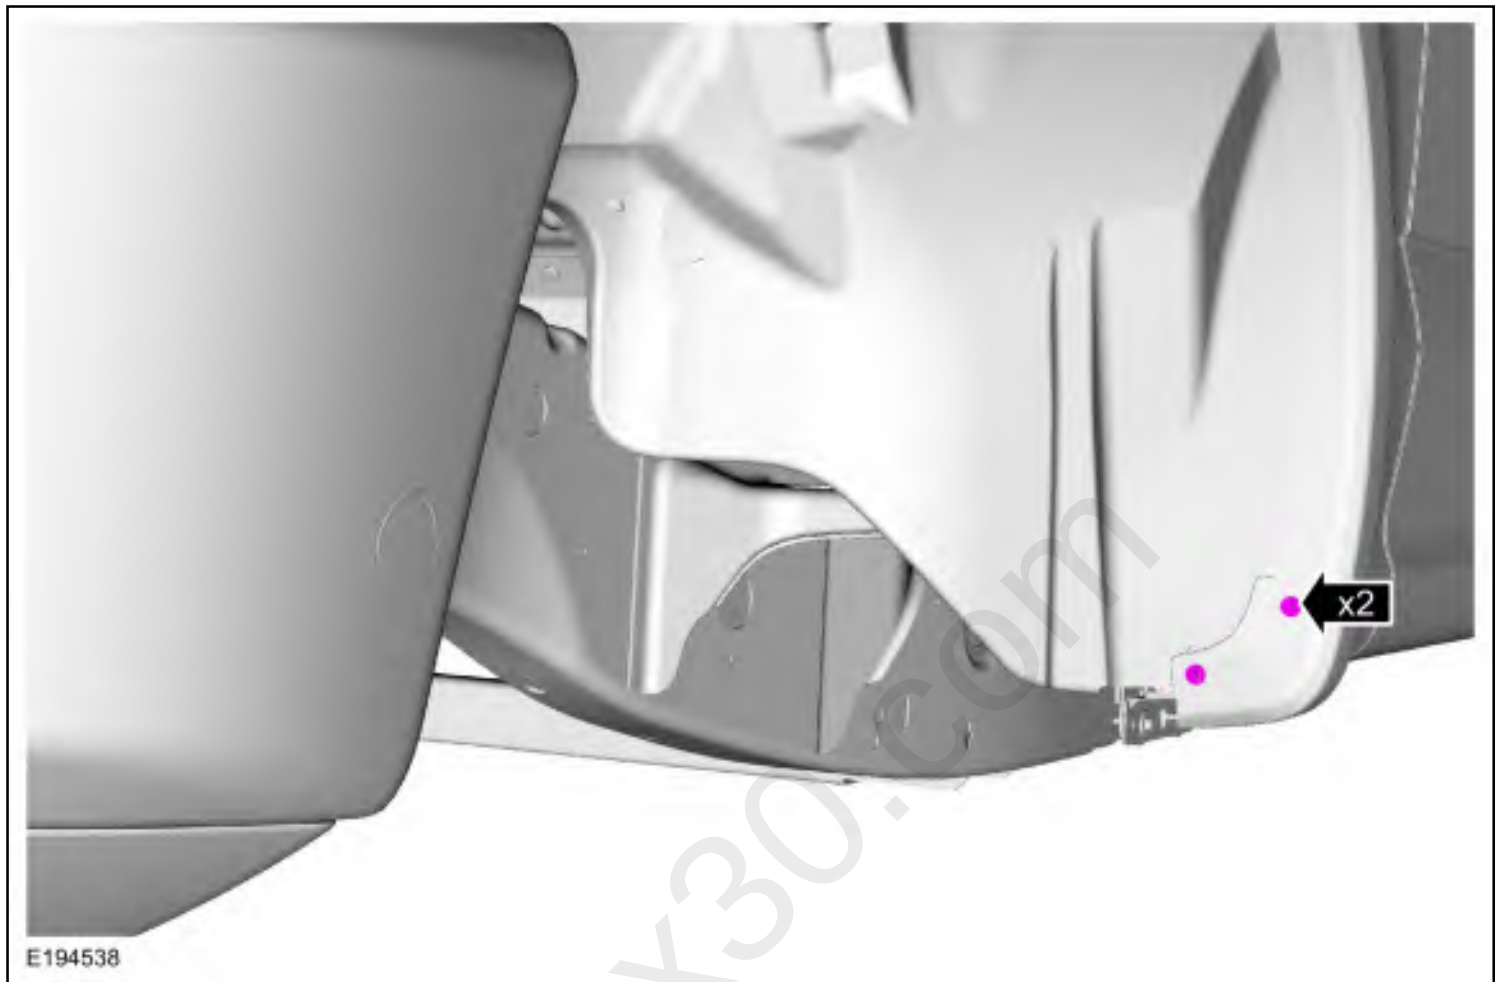


4. Remove the bolts and the pin-type retainer.
Torque: 15 lb.in (1.7 Nm)

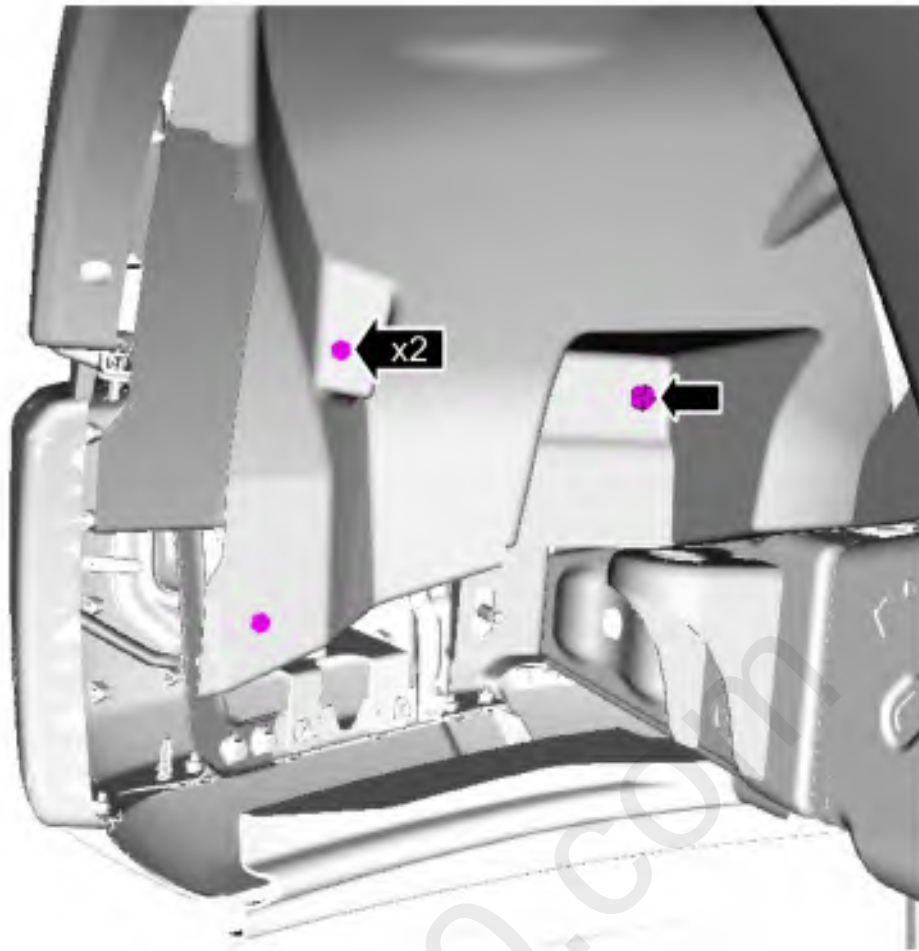


E194539



5. Remove the bolts.
Torque: 15 lb.in (1.7 Nm)

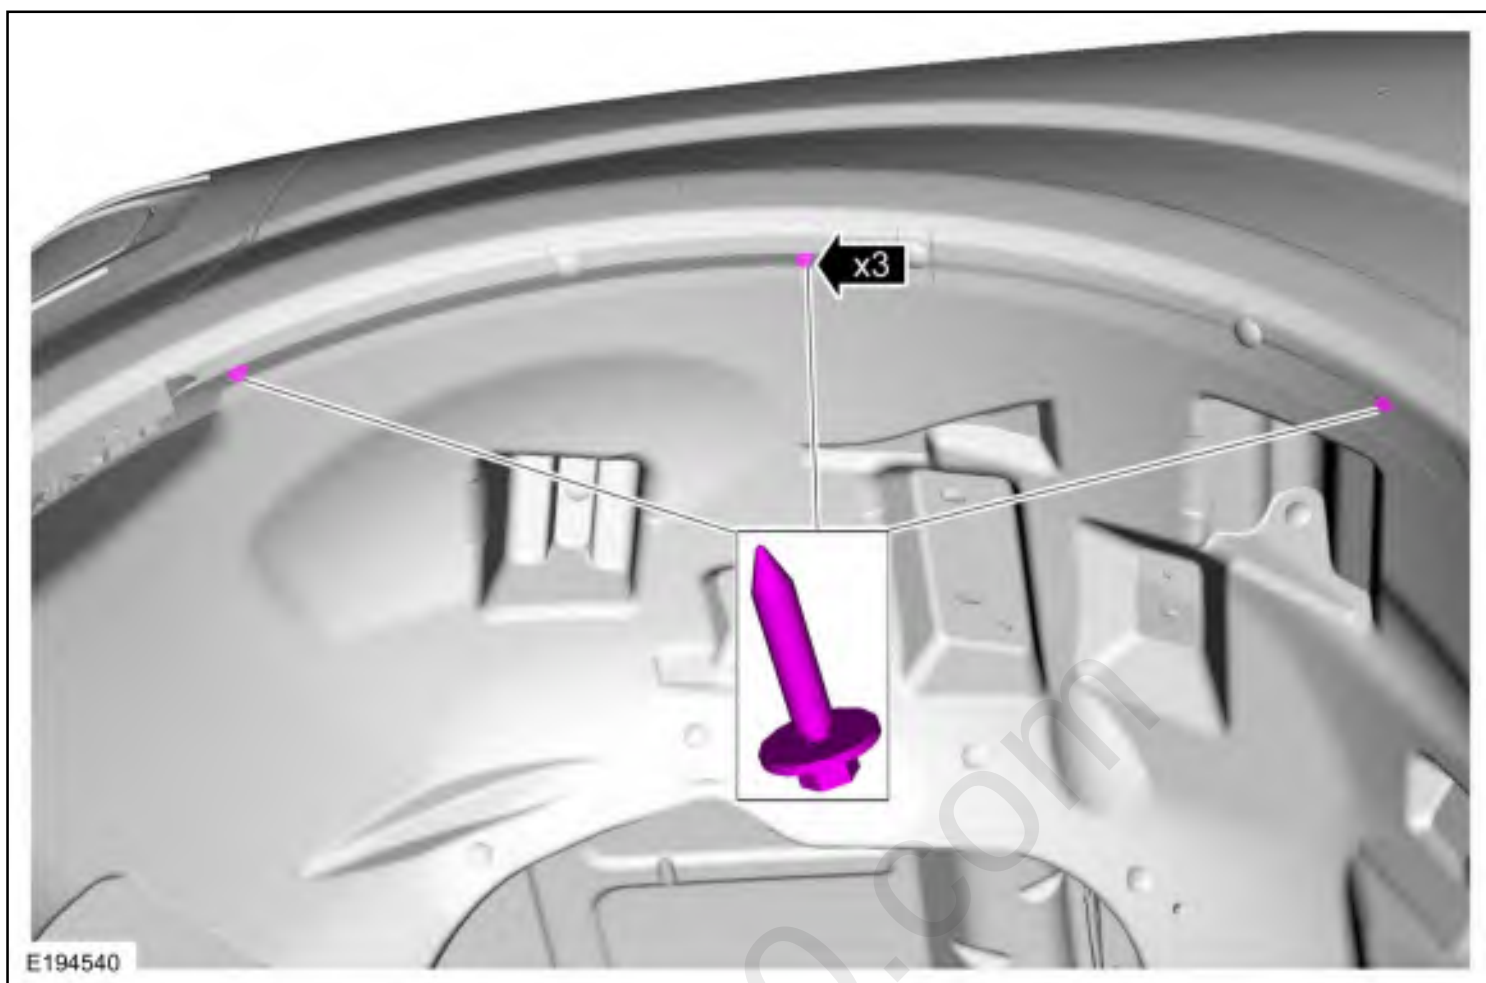


6. Remove the pin-type retainers.

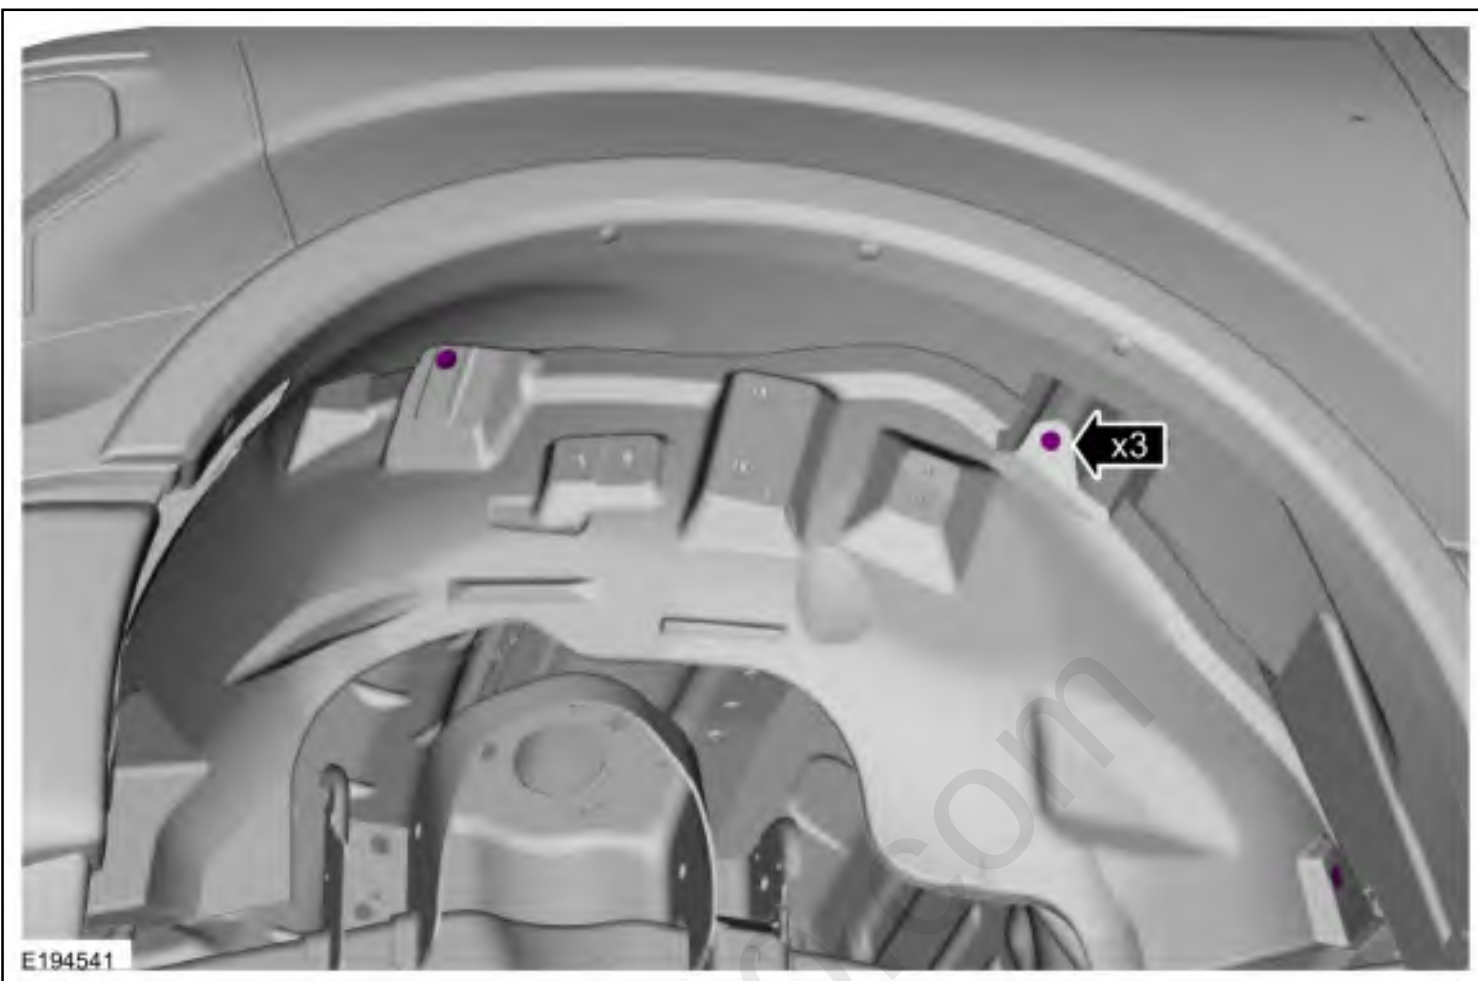

7. **NOTE:** *Pin-type retainers vary based on trim level.*

Remove the electrical pin-type retainers and the fender splash shield.

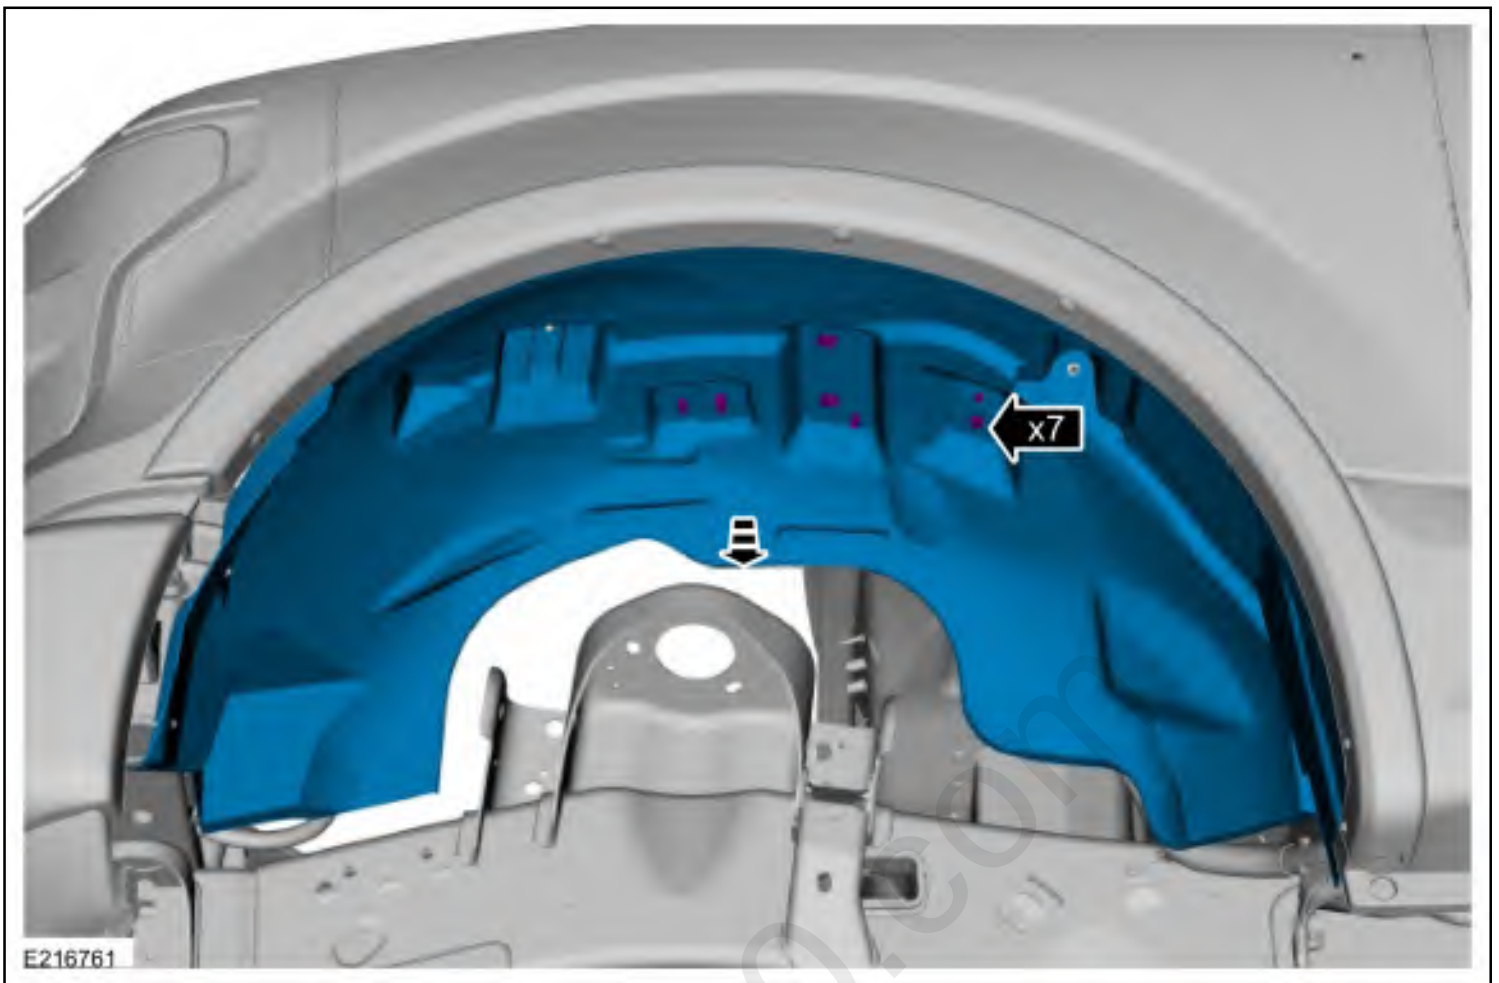

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company