

Cowl Panel Grille


Removal

Both sides


1. Remove the wiper pivot arm.
Refer to: [Windshield Wiper Pivot Arm](#) (501-16 Wipers and Washers, Removal and Installation).

LH side

2. Lift the cowl trim panel to release the underside pin-type retainers.

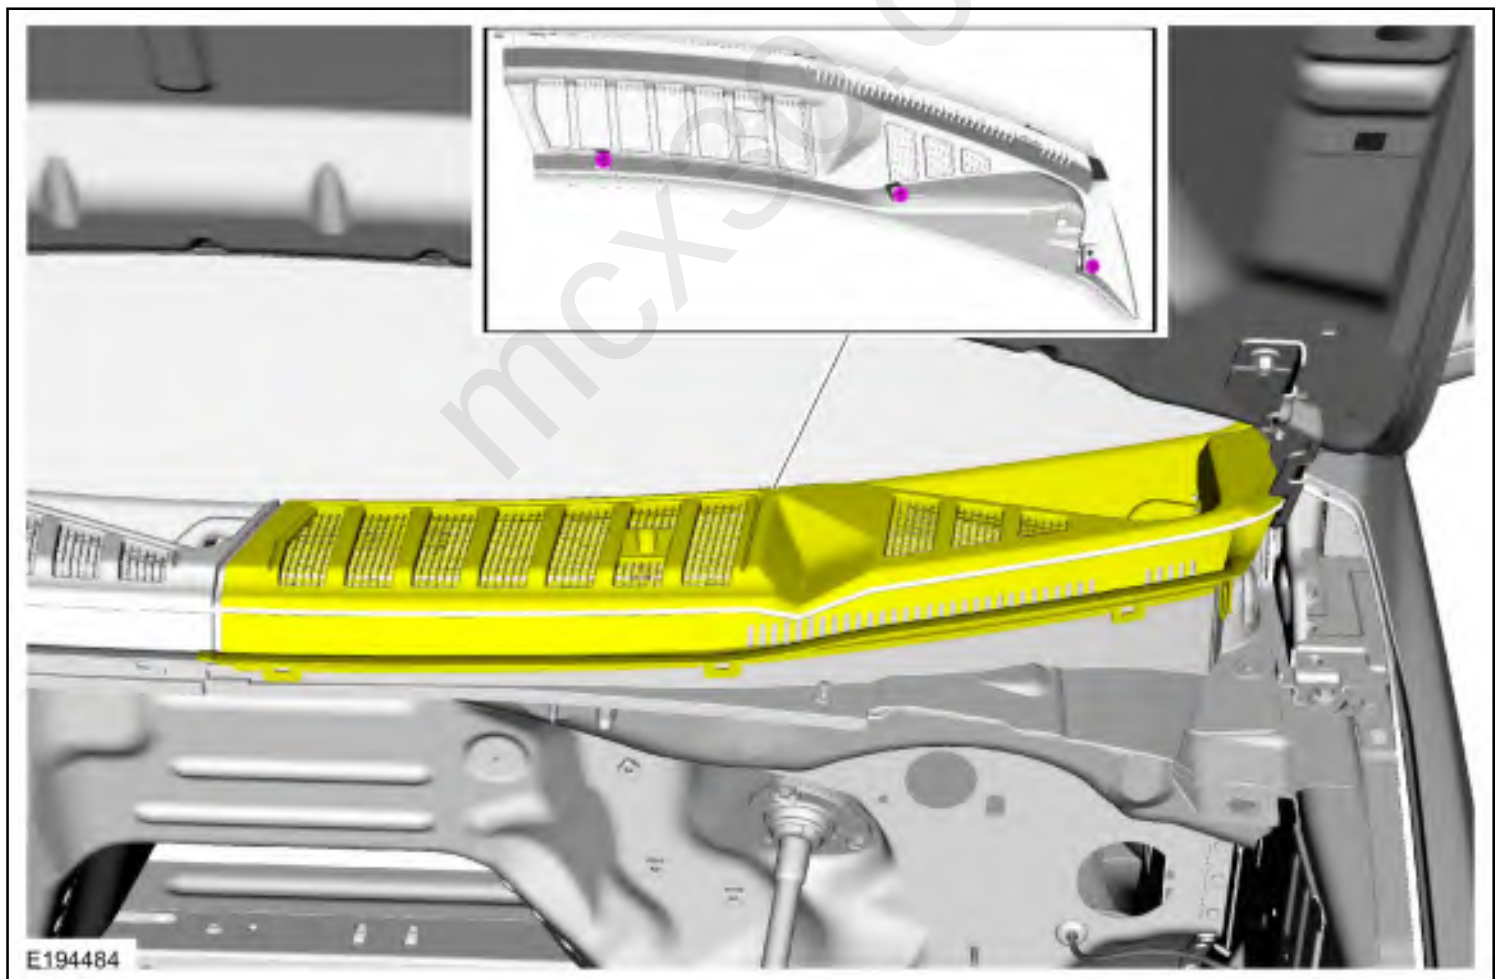


3. Disconnect the windshield washer tube and remove the cowl panel grille.

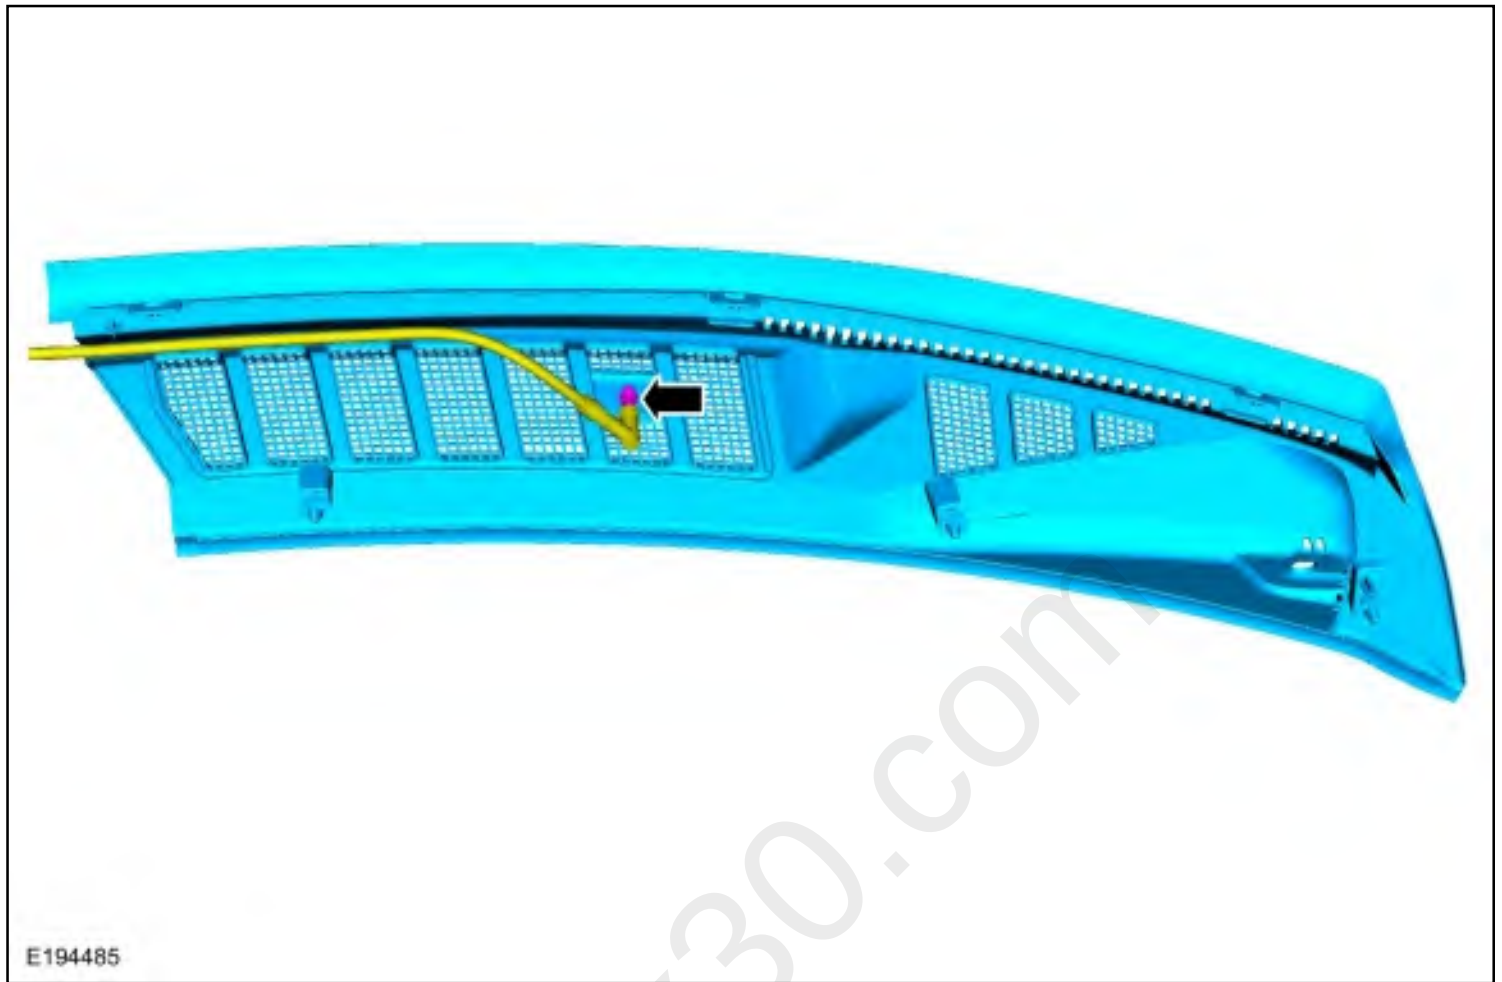


RH side

4. Lift the cowl trim panel to release the underside pin-type retainers.

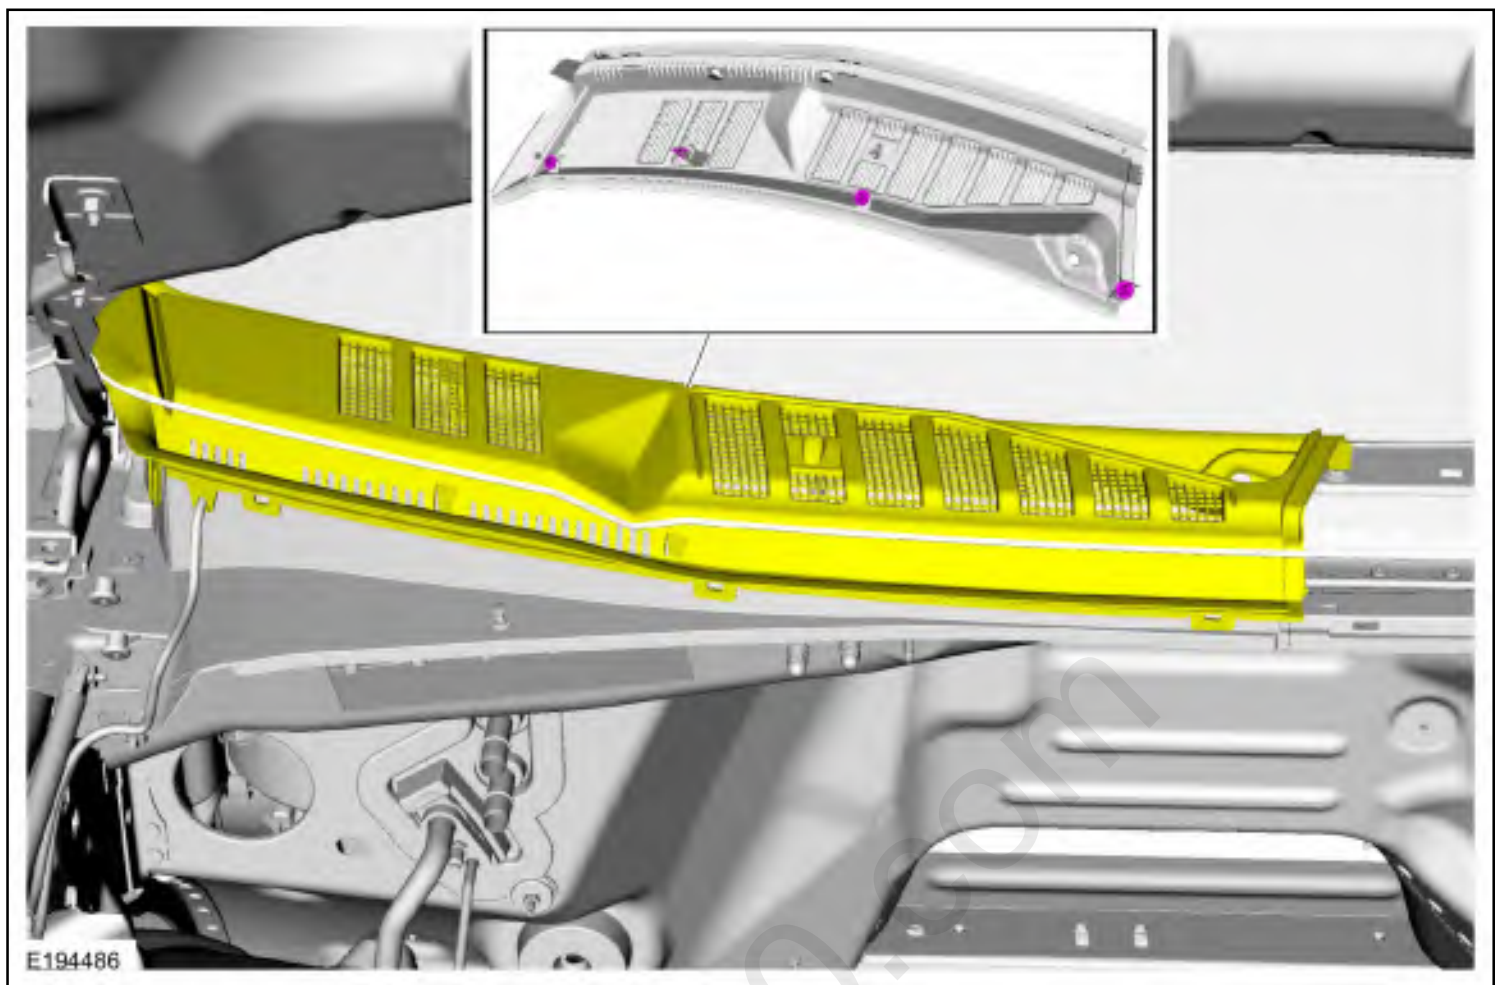

5. Disconnect the windshield washer tube and remove the cowl panel grille.

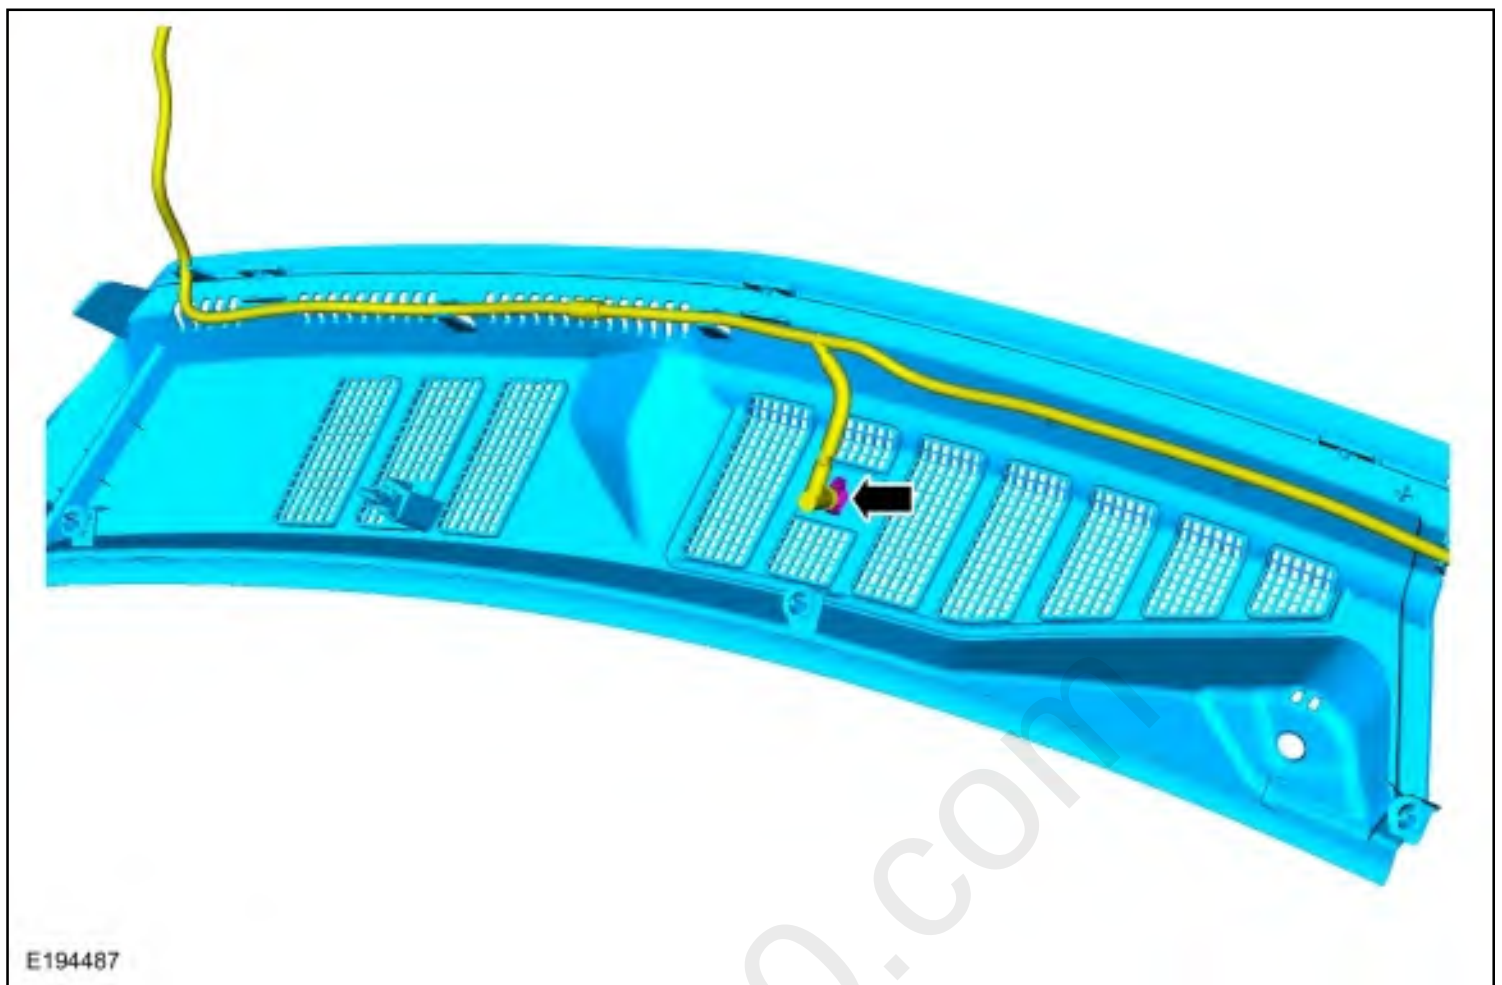

Installation

1. To install, reverse the removal procedure.


Copyright © 2018 Ford Motor Company

Cowl Panel

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the cowl panel grille.
Refer to: [Cowl Panel Grille](#) (501-02 Front End Body Panels, Removal and Installation).
2. Remove the LH cowl panel.
 1. Remove the screw.
 2. Remove the pin-type retainers and the LH cowl panel.

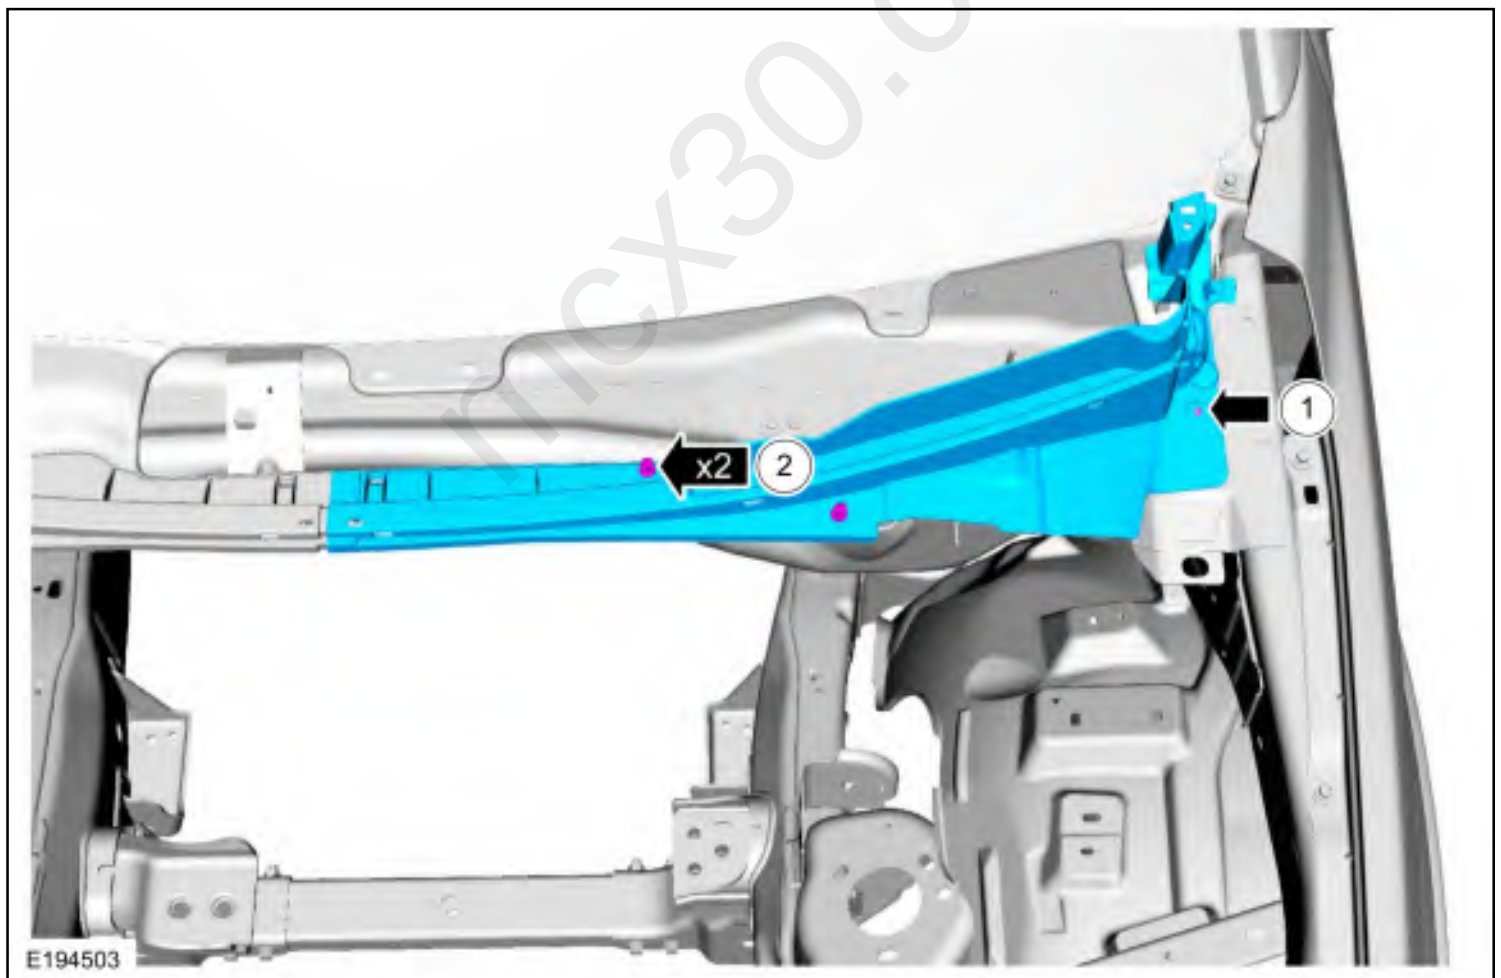

3. Remove the RH cowl panel.

1. Remove the screw.

2. Remove the pin-type retainers and the RH cowl panel.

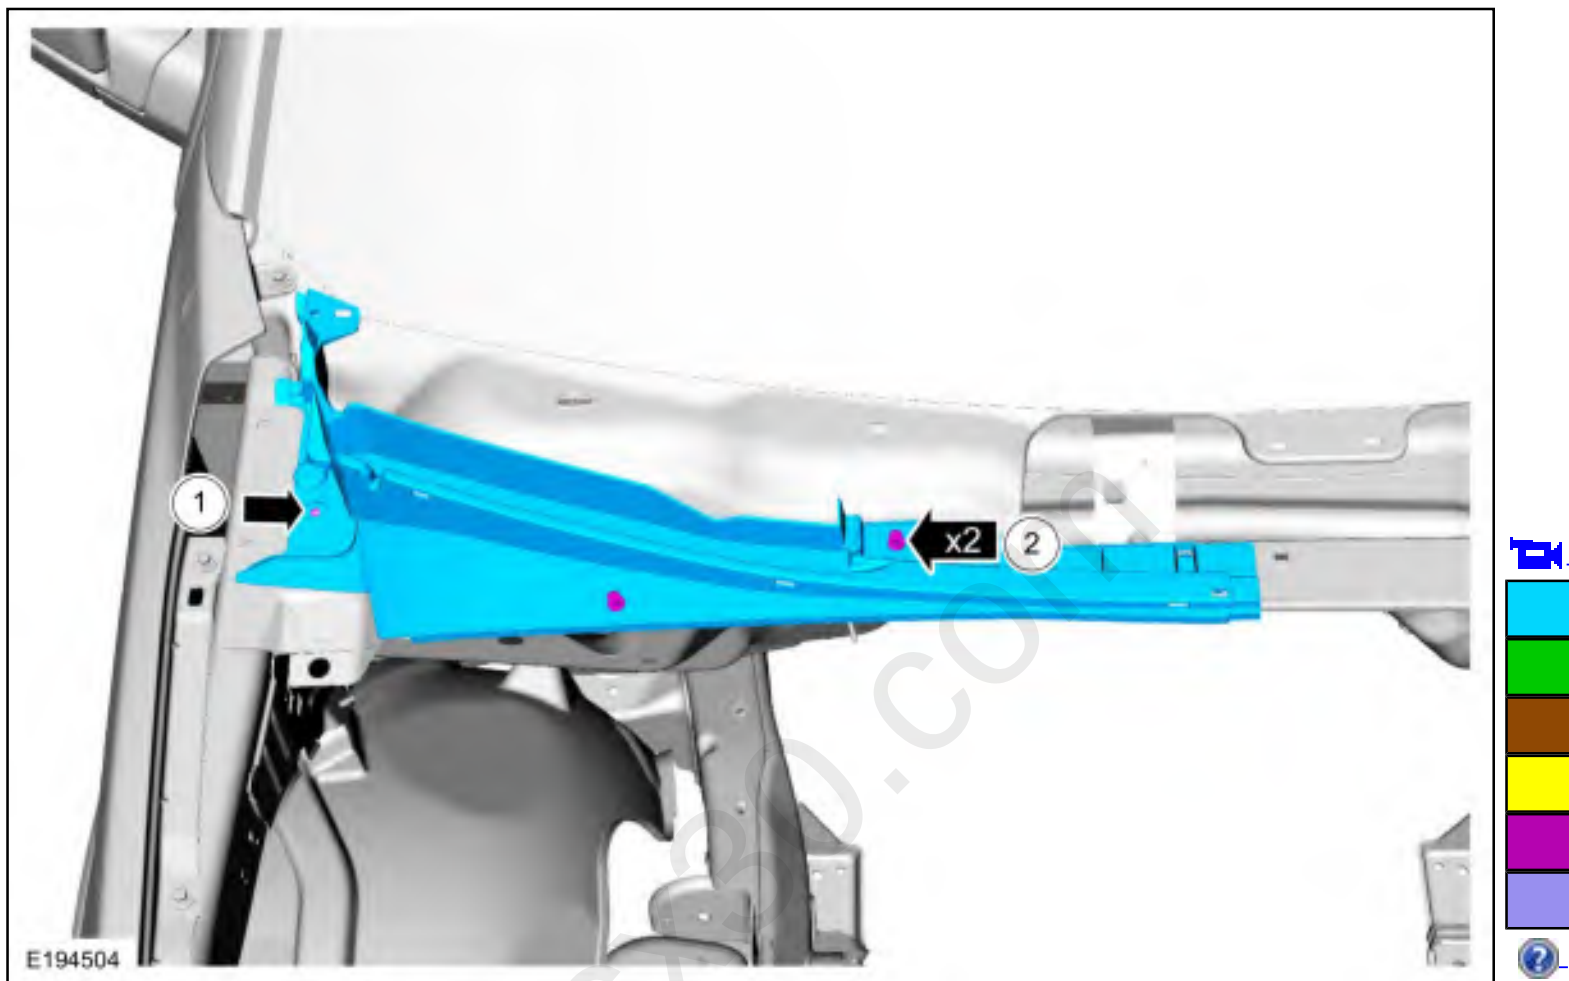

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company