

Fender

Special Tool(s) / General Equipment

Knife

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH side similar.

1. Remove the front fender moulding.
Refer to: [Front Fender Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
2. Remove the fender splash shield.
Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).
3. Remove the bolt.
Torque: 80 lb.in (9 Nm)




4. Remove the bolts.
Torque: 80 lb.in (9 Nm)

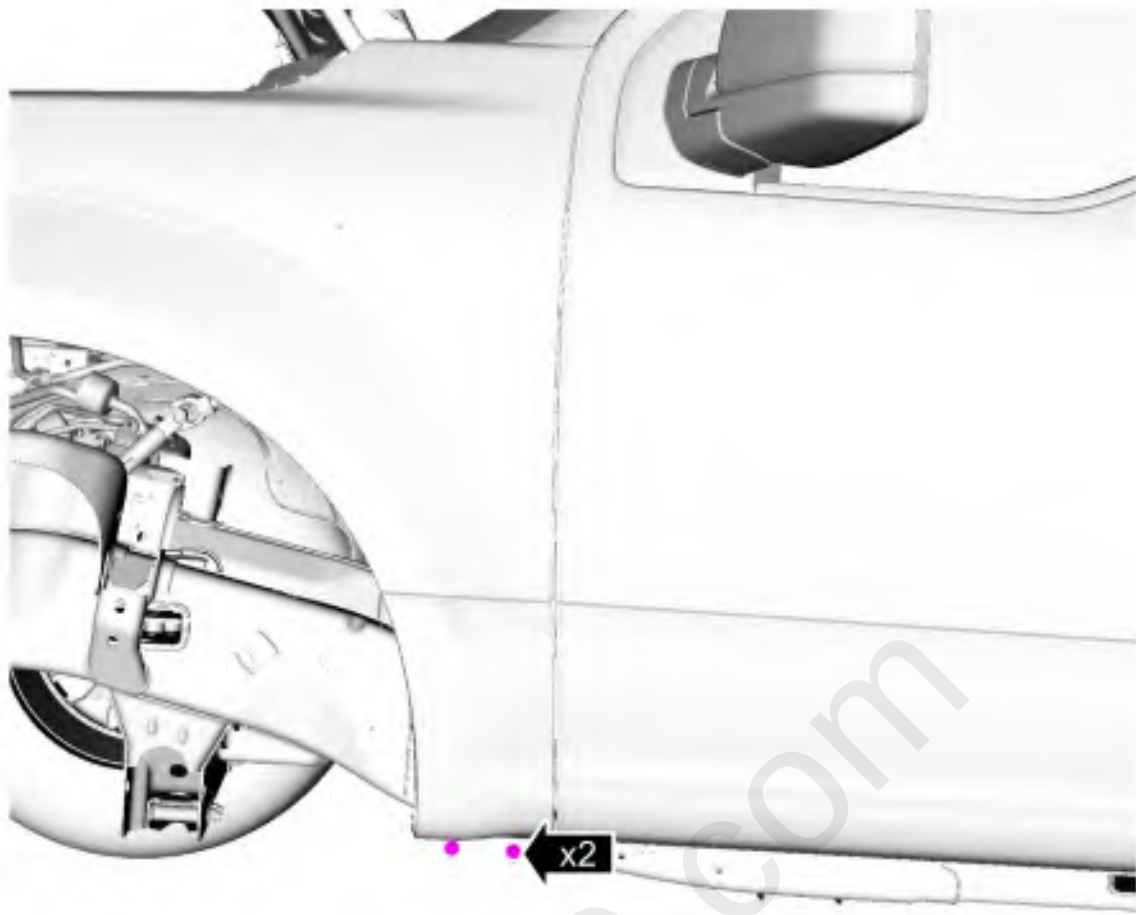


E193866

5. Remove the bolt.
Torque: 44 lb.in (5 Nm)

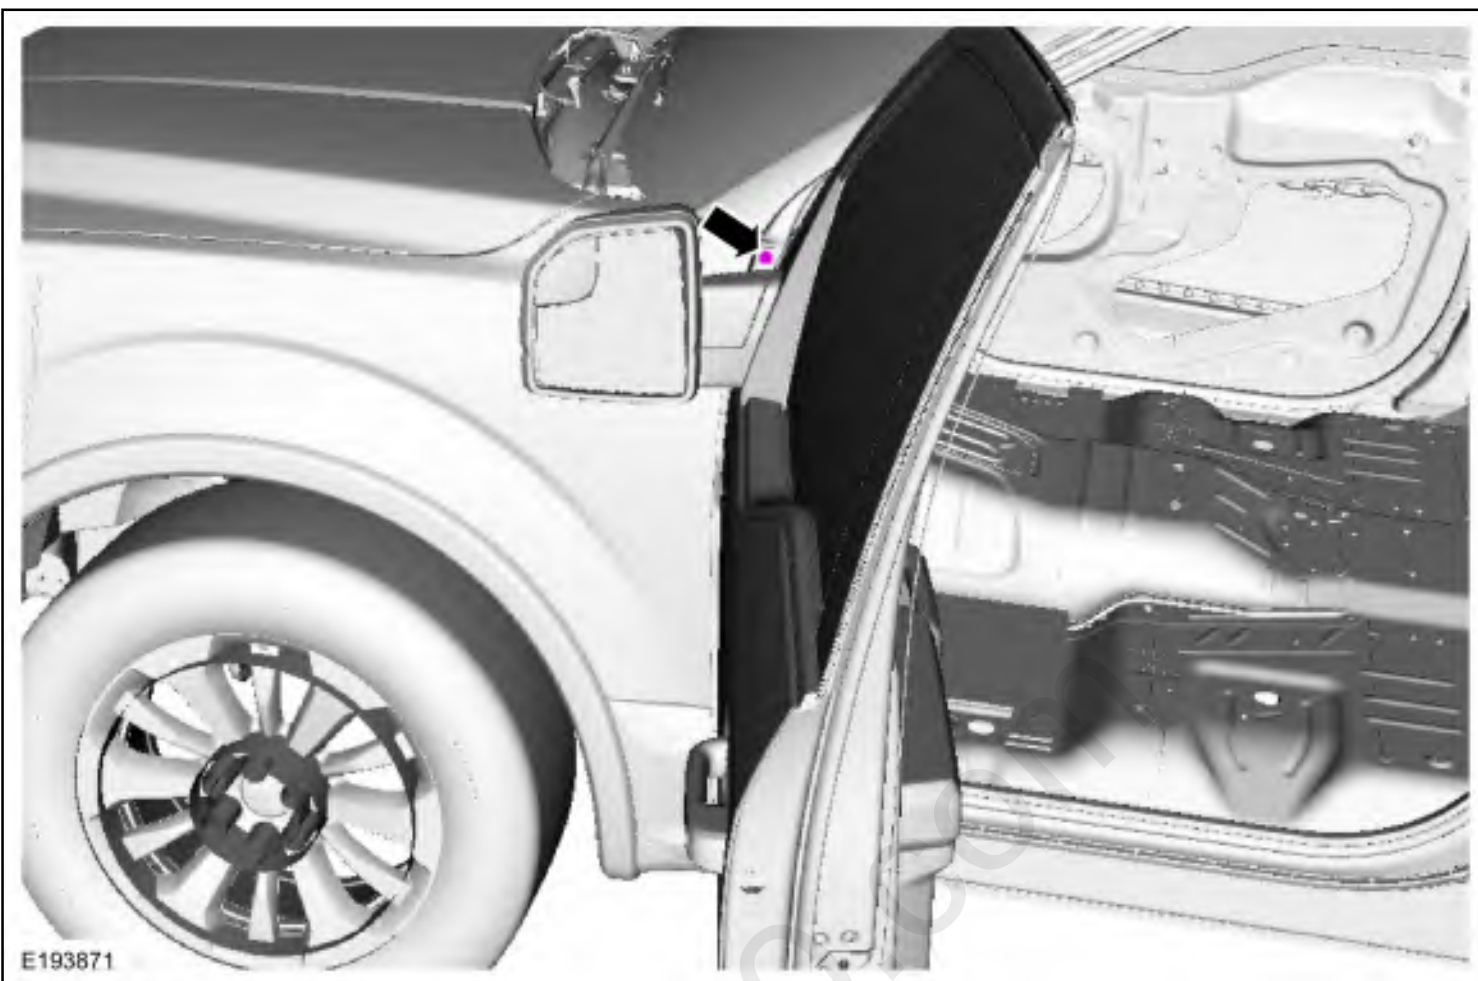


6. Lift the corner of the cowl panel grille and remove the bolt.
Torque: 80 lb.in (9 Nm)




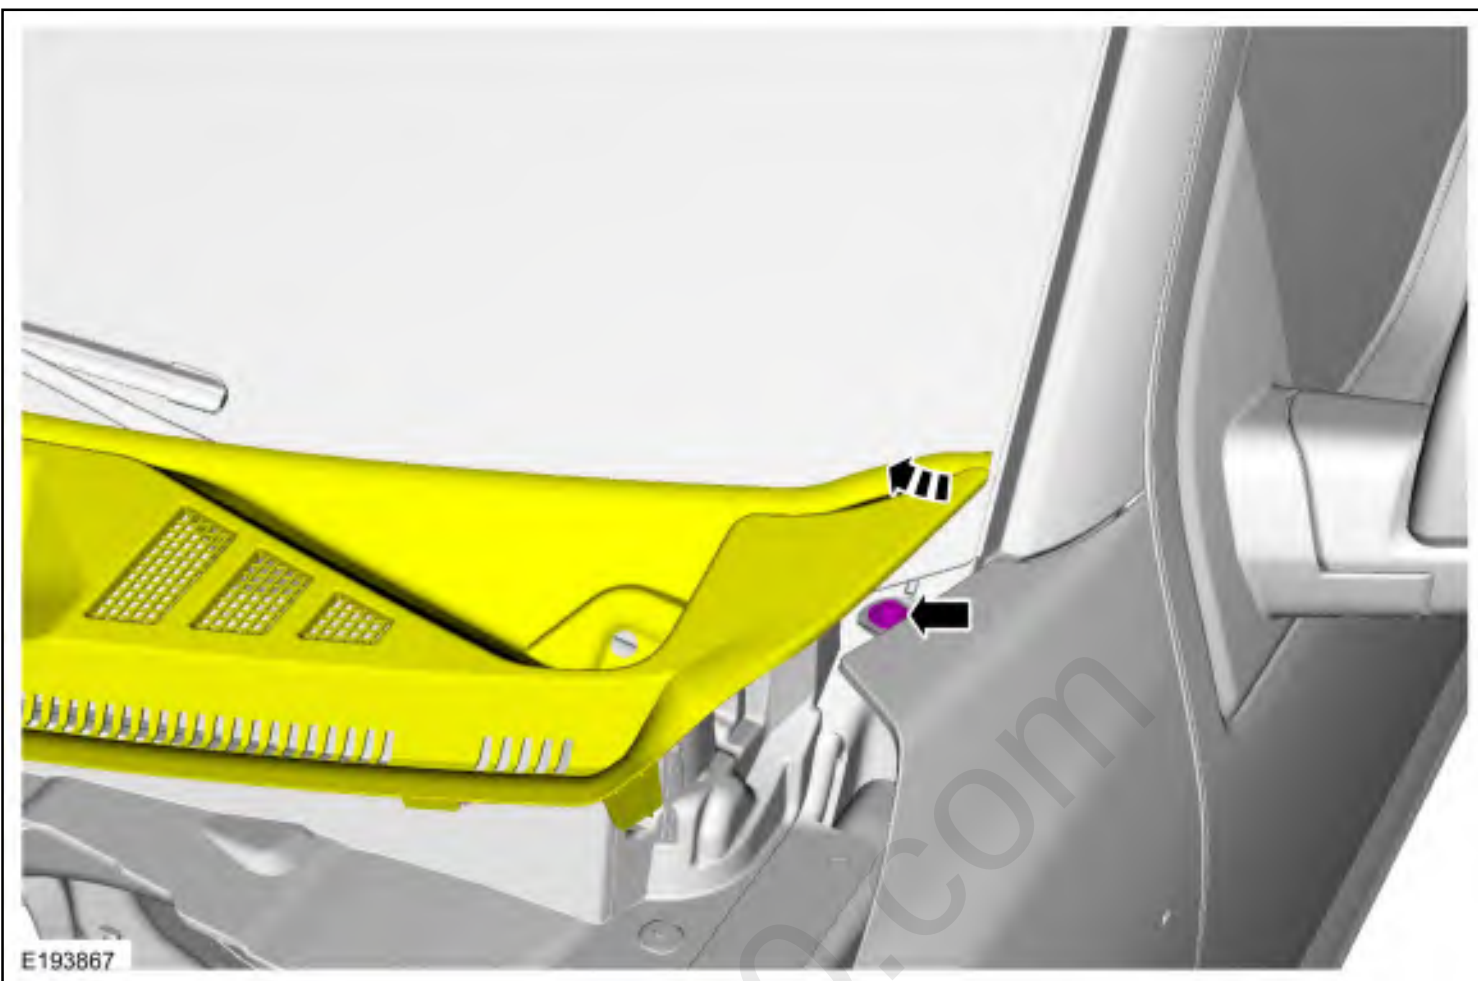


7. Remove the headlamp assembly.
Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).
8. Remove the bolt.
Torque: 80 lb.in (9 Nm)

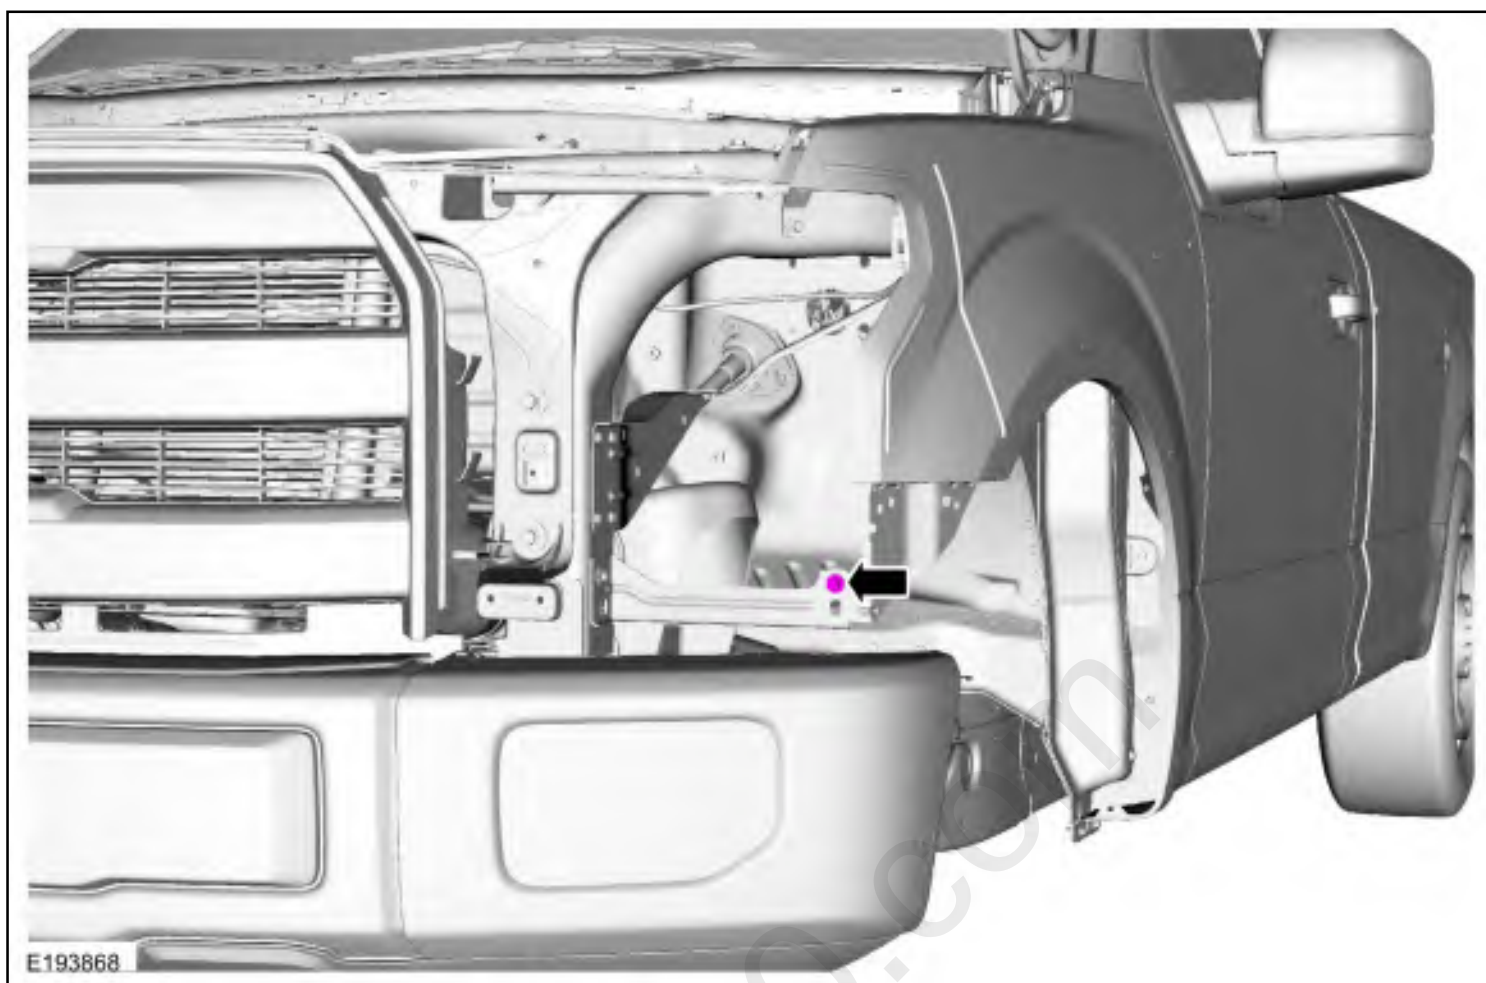

9. Using a knife, cut the foam sealant between the fender and the body.
Use the General Equipment: Knife

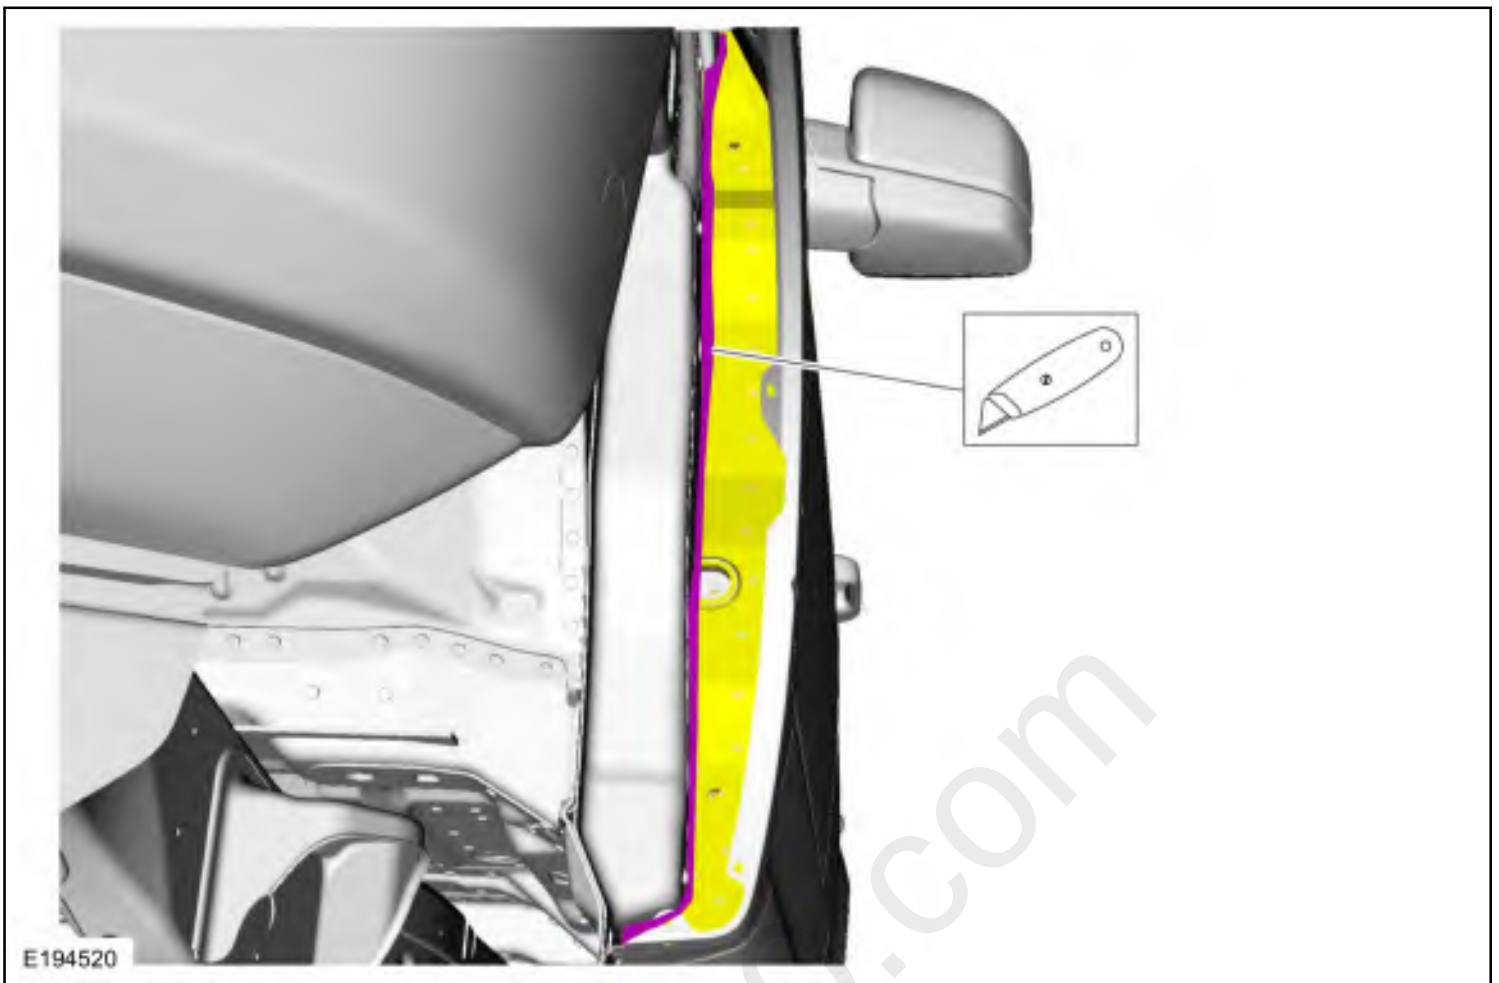

10. Remove the bolts and the fender.
Torque: 80 lb.in (9 Nm)

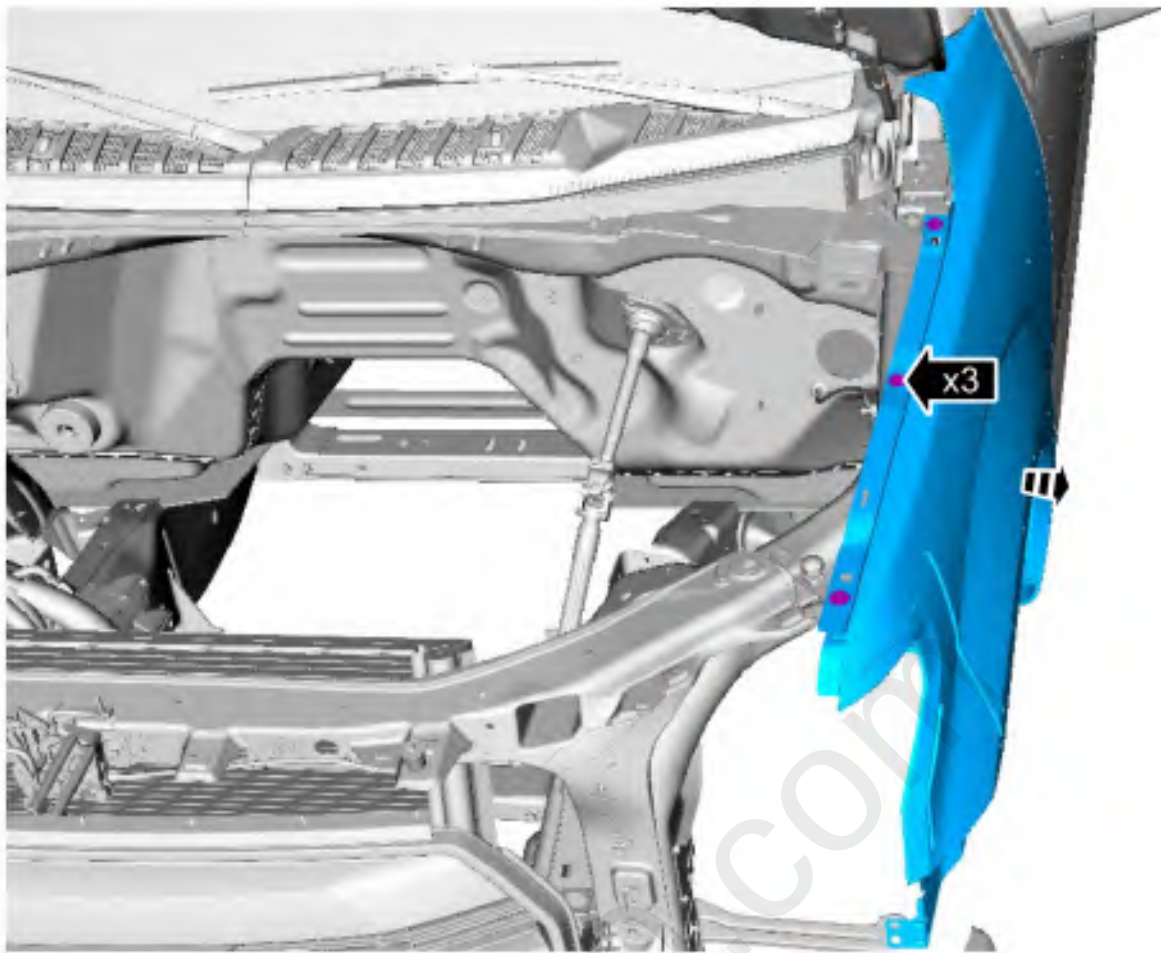

E193869



11. **NOTE:** *This step is only necessary when installing a new component.*

Remove the push pins and the expandable foam baffle.



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
