

Hood Alignment

Base Part Number: Base Part Number: 16000

Inspection

NOTE: *Removal steps in this procedure may contain installation details.*


1. Inspect the hood-to-body dimensions.
Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

All alignments


2. Remove the hood latch.
Refer to: [Hood Latch](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

Hood fore and aft, left and right alignments

3. Loosen the nuts enough to permit movement of the hood and adjust to specification.
Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

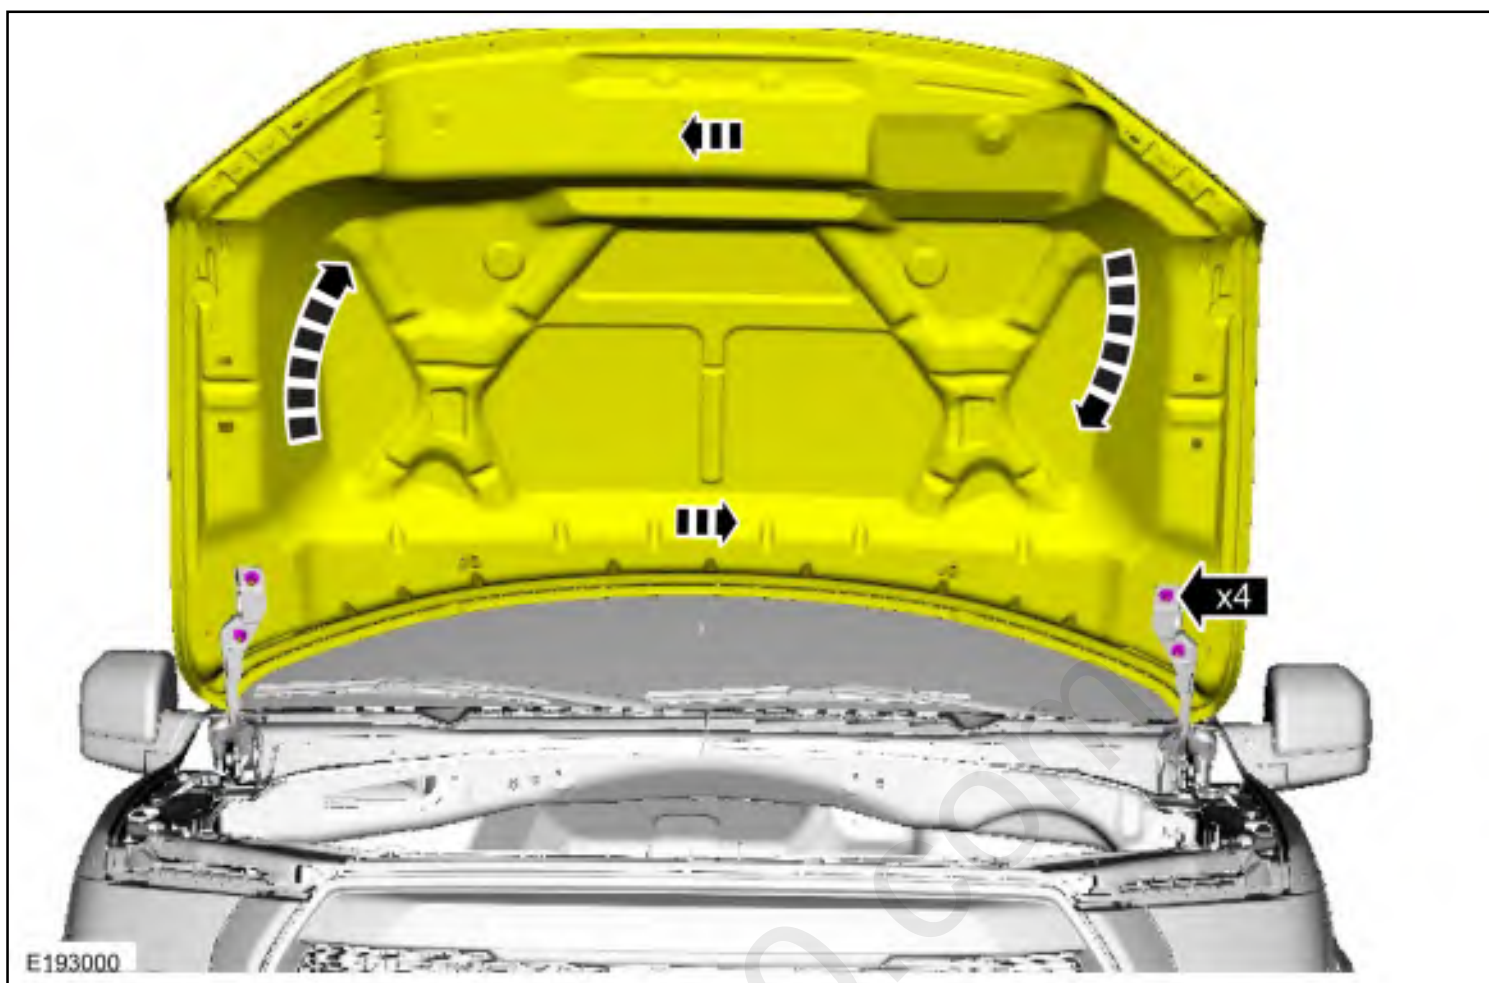


4. Tighten the nuts.
Torque: 18 lb.ft (25 Nm)

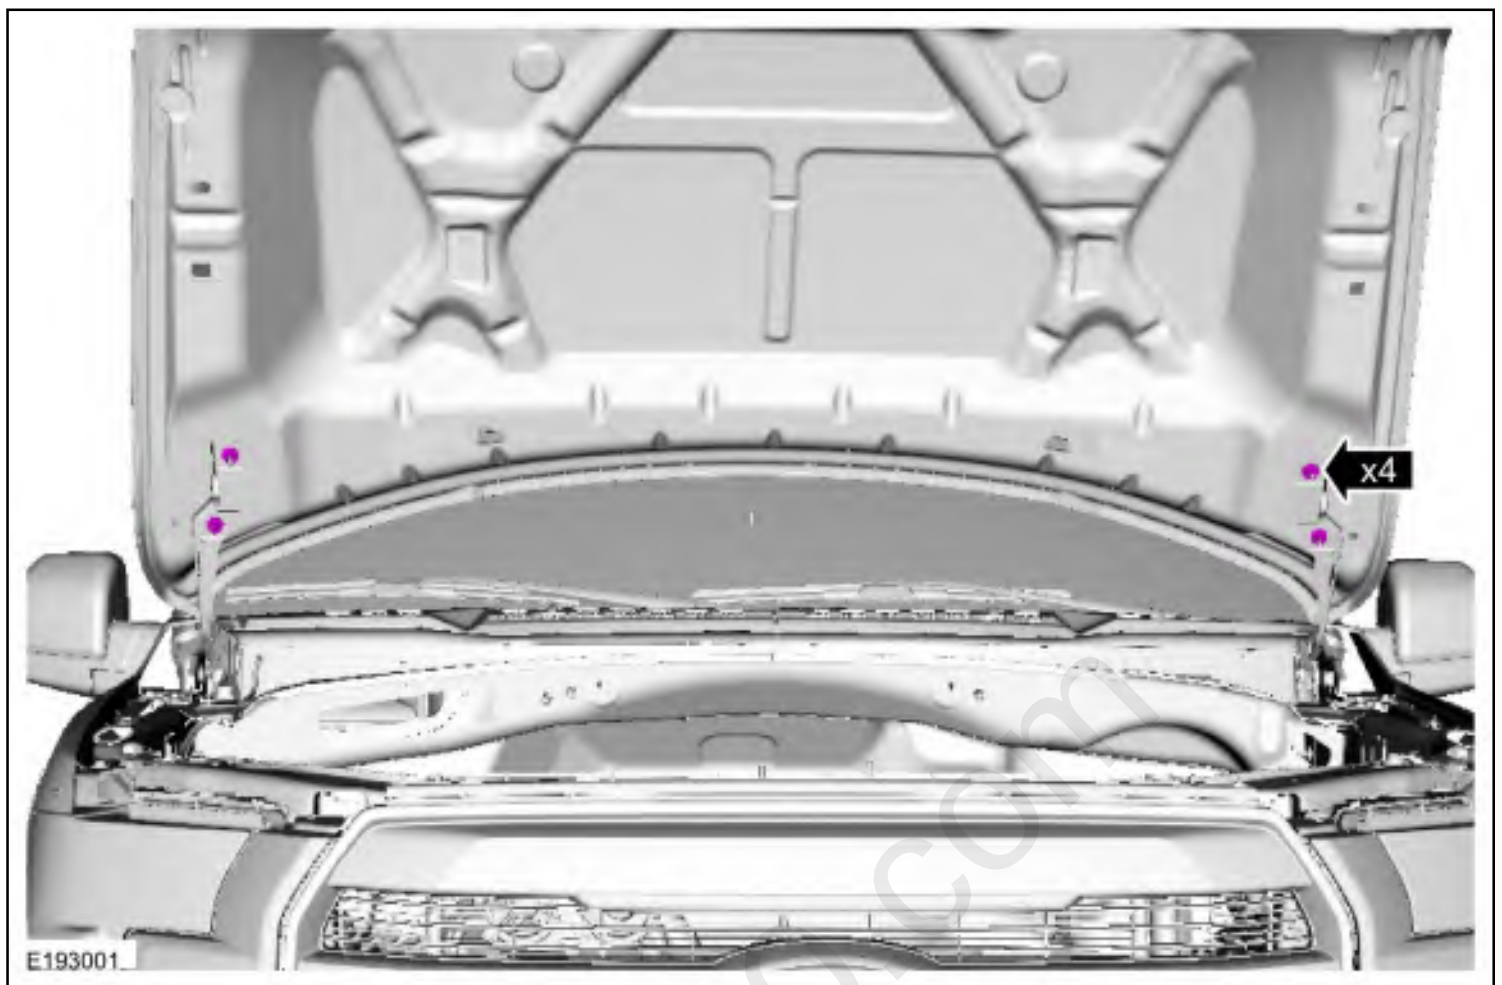


Hood front up and down alignments

5. Adjust the bump stop rubbers.

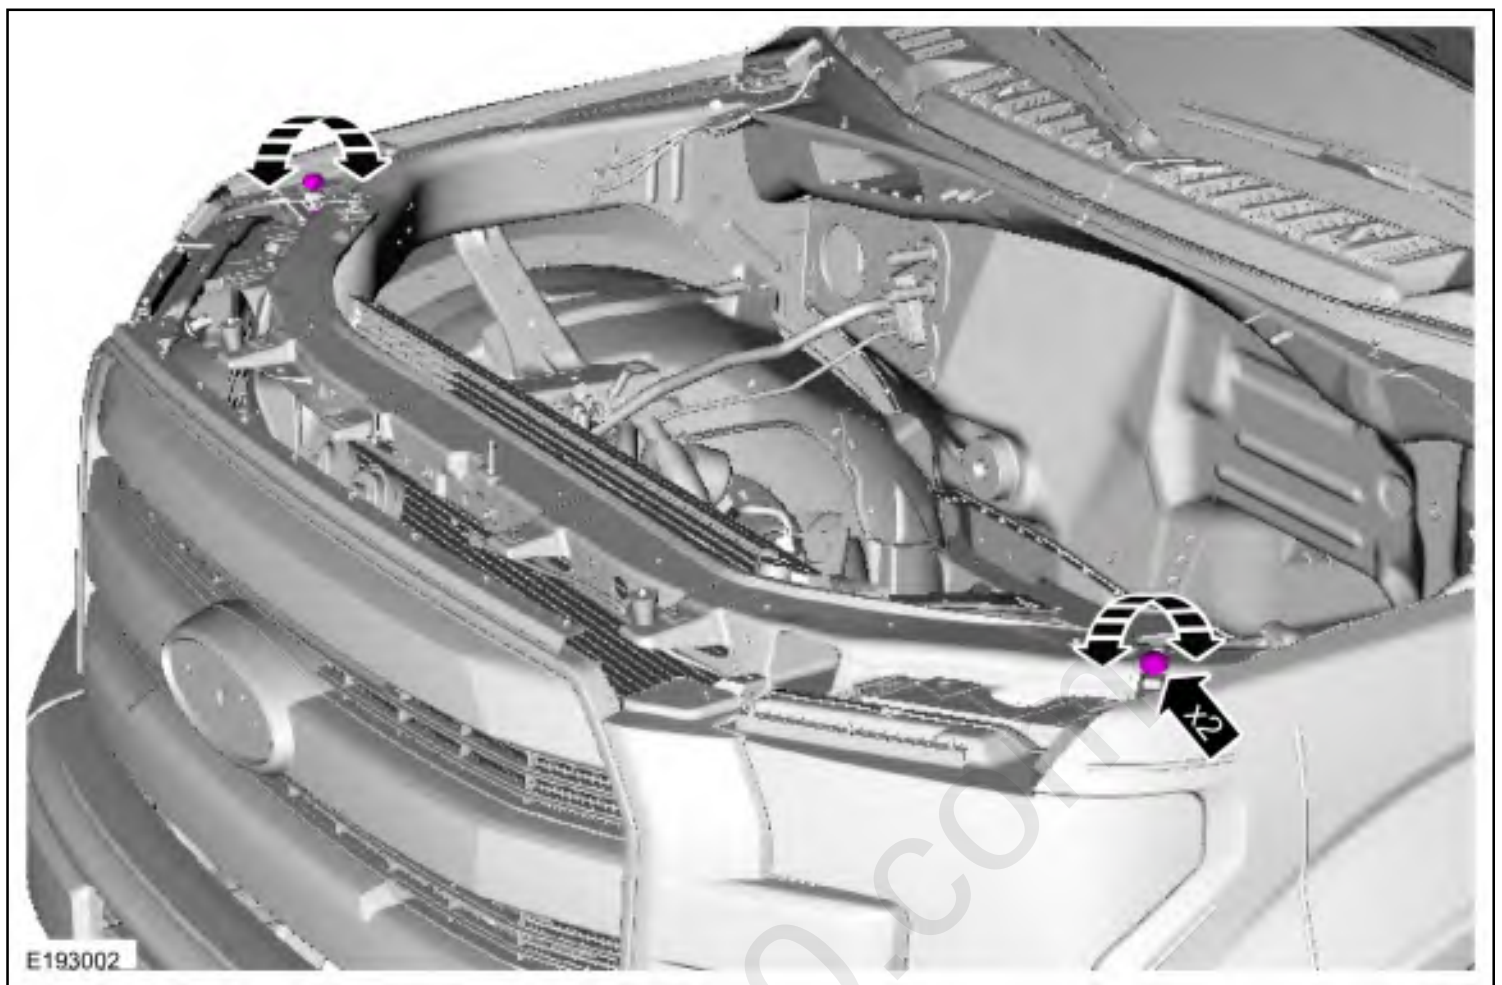

6. Adjust the hood to specification.

Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

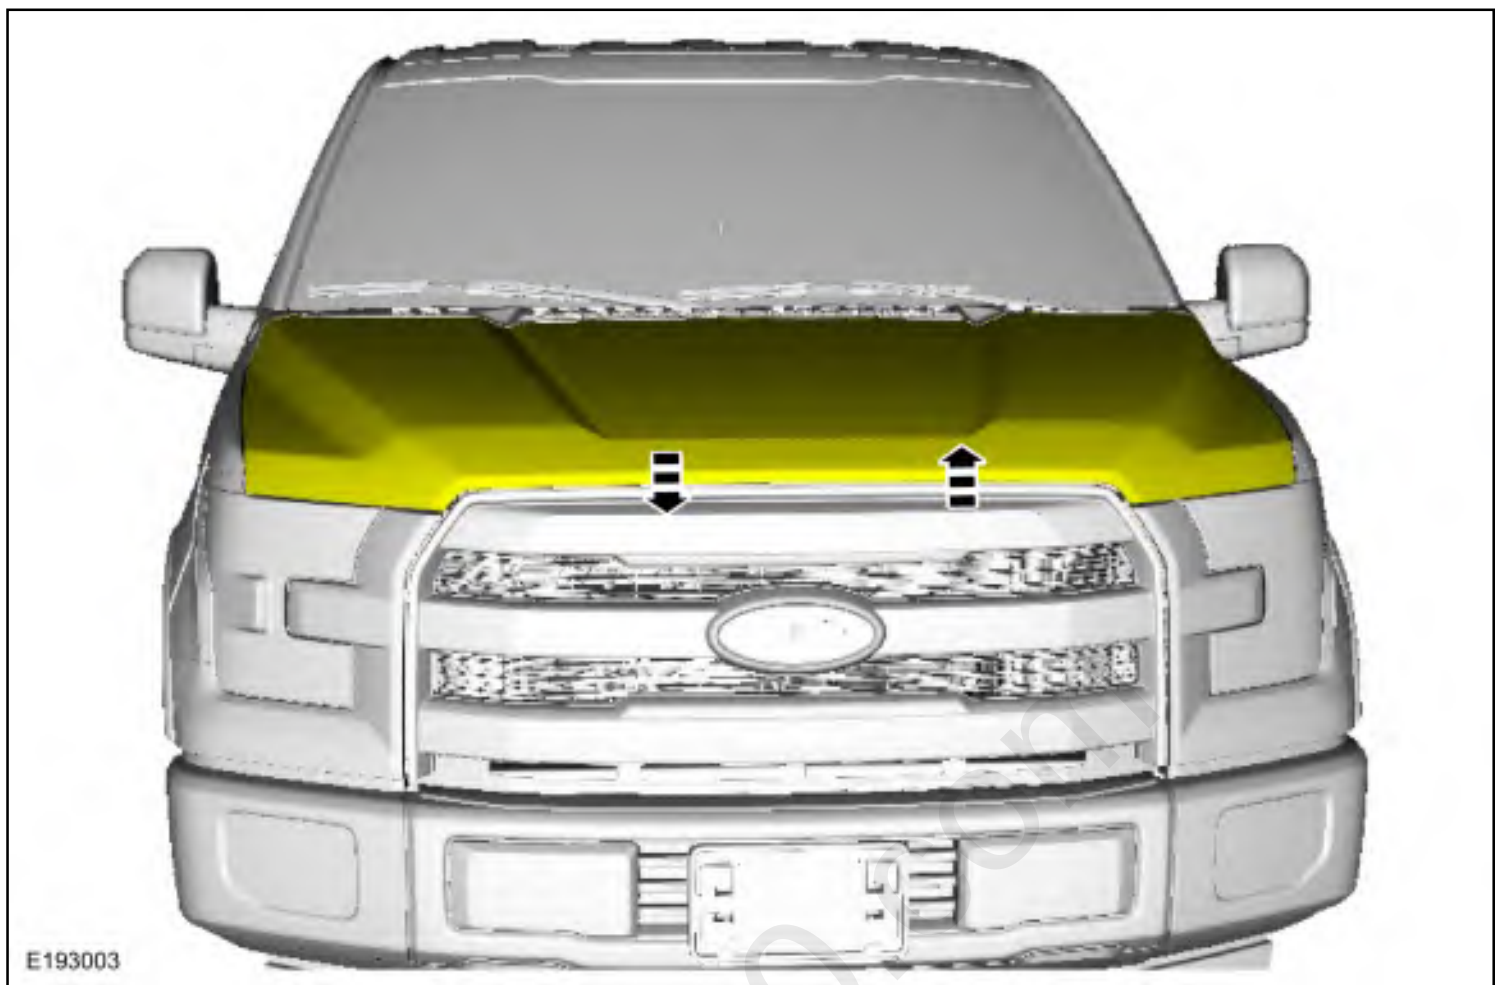

All alignments

7. Inspect the body-to-hood dimensions.
Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).



8. Install the removed components.

Copyright © 2018 Ford Motor Company