

Front Door - SuperCab

Base Part Number: Base Part Number: 20124

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH side similar.

1. Remove the check arm bolt.
Torque: 17 lb.ft (22.5 Nm)




2. Disconnect the front door electrical connector.

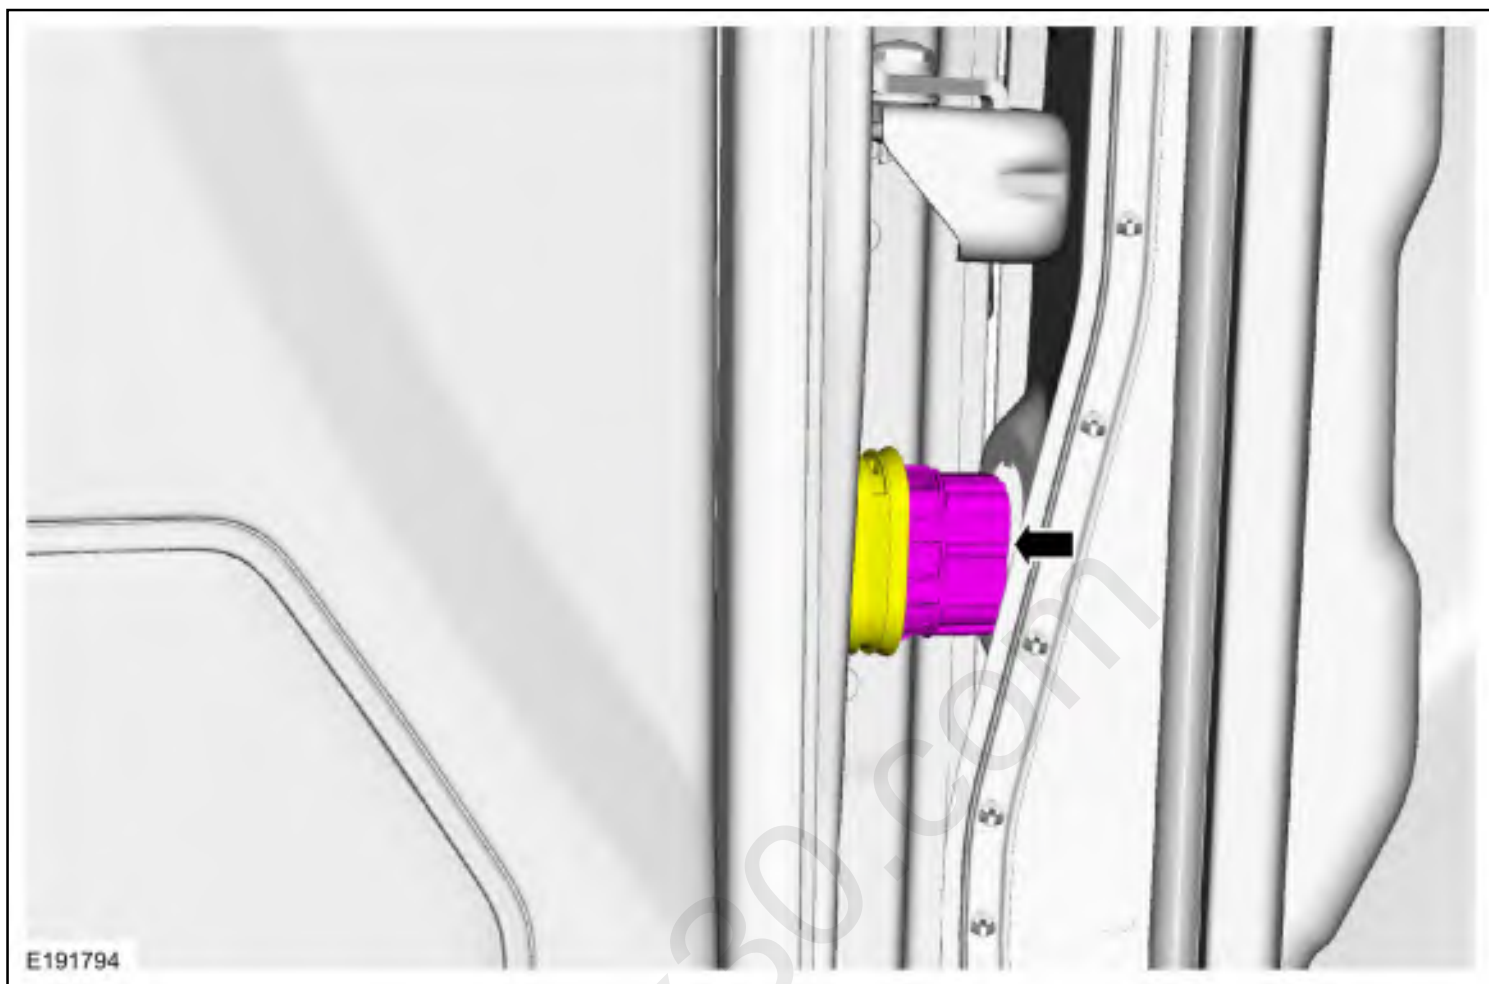

3. **NOTE:** *This step requires the aid of another technician.*


Remove the door hinge pivot bolts.

Torque: 22 lb.ft (30 Nm)

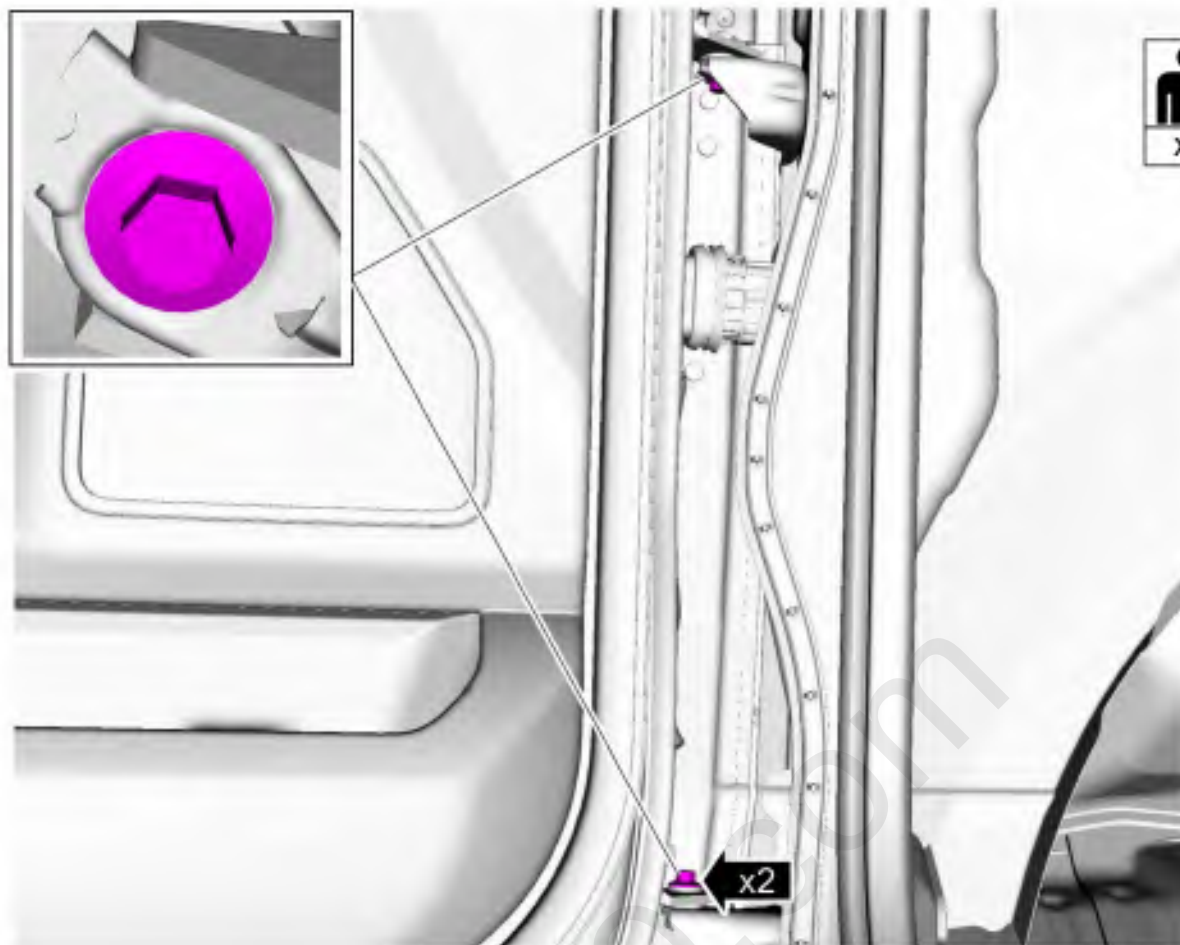

4. **NOTE:** *This step requires the aid of another technician.*

Remove the door.

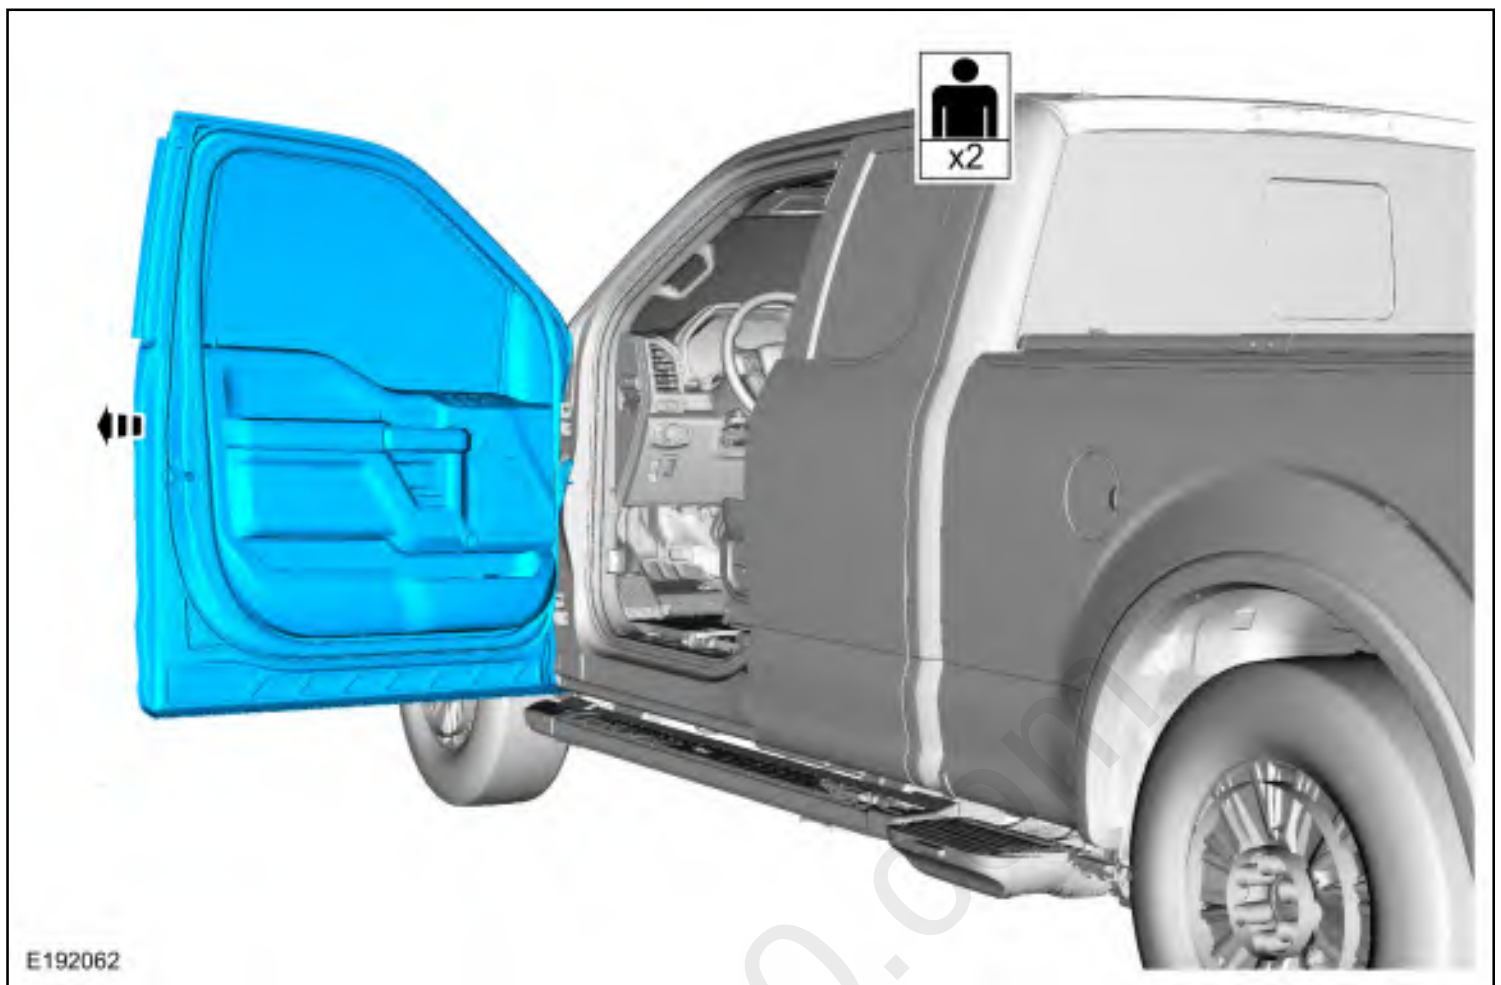

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*

Check the door-to-body alignment. Align the door as necessary.

Refer to: [Front Door Alignment - SuperCab](#) (501-03 Body Closures, General Procedures).